

**2010
Honda GL1800**



NAVIGATION SYSTEM

Contents

Preface	5	Operating Controls	37	Point Review Screens	68
Introduction	6	Right Fairing Panel Controls	38	Route Calculate & Edit Route Screens	71
A Few Words About Safety	8	Left Handlebar Controls	39	Route Calculate Screen	71
System Limitations	9	Center Display Controls	40	Edit Route Screens	72
Favorable Reception Areas for GPS Signals	9	Audio System Controls	41	Weather/Traffic Information Screen	76
Unfavorable Reception Areas for GPS Signals	10	Center Display Screens	43	Weather Information Screen	76
User Agreement	11	Center Display Screens	44	Traffic Information Screen	78
Getting Started.....	13	Types of Navigation System Screens	44	Traffic/Weather Review Screen	79
Getting Started	14	Map Screens	46	Find Destination.....	81
System Overview	14	Map Layouts	46	Find Destination	82
Operating Controls	15	Map Screen	47	By Favorite	83
Startup	16	Next Turn Pop-up	51	Finding Nearest	83
Display Screens	18	Alert Icon	51	Finding by Name	86
Map Screen	19	Automatic Re-routing	52	By Previous Find	88
Point Review Screens	23	Map Scale Zoom	53	By Point of Interest	90
Route Calculate & Edit Route Screens	24	White Arrow Point Locator	54	Category/Subcategory	90
XM NavWeather & XM NavTraffic Map Screens	25	Menu Screens	56	Point of Interest – Categories & Subcategories	91
Main Menu	26	Summary of Main Menu Functions	61	Finding Nearest	92
Let's Take a Trip	29	Keyboard Screens	64	Finding by Name	93
Tips	35	Operating Keyboards	65		
		List Screens	67		

By Address	95	Calculating a Route Home	125	Setup Screen 2	143
By Intersection.....	98	Checking Your Home		Setup Screen 2	143
By City.....	101	Location.....	125	Setup System 1	150
By Exit.....	102	Deleting Your Home Location	126	Setup System 1	150
Finding Nearest Exits	102	Weather.....	127	Setup System 2	152
Selecting Exit Road	103	Weather.....	128	Setup System 2	152
Favorite Places.....	105	Viewing Weather Map	129	Setup Voice	158
Favorite Places.....	106	Viewing Weather for Other		Info Screens.....	159
Storing Favorite Places.....	107	City	129	GPS Info.....	159
Renaming Favorite Places	108	Viewing Weather Forecast	130	System Info.....	159
Deleting Favorite Places.....	109	Traffic.....	131	XM Info.....	159
Route.....	111	Traffic	132	Technical & Consumer	
Route.....	112	Viewing Traffic on Full		Information	161
Route to New Destination.....	114	Map.....	133	Glossary.....	162
Recalculate Route	115	Viewing Traffic by Road.....	133	System Messages.....	164
Edit Route	116	Viewing Traffic on Current		Troubleshooting.....	165
Adding a Location as a Via	117	Route	134	System Limitations	170
Adding a Road as a Via	119	Traffic Avoidance.....	135	Database Limitations	172
Detour	121	Setup / Info.....	137	Customer Support.....	173
Route to Home	123	Setup / Info	138	Index	176
Route to Home.....	124	Setup Screen 1	139		
		Setup Screen 1	139		

Introduction	6
A Few Words About Safety	8
System Limitations	9
Favorable Reception Areas for GPS Signals	9
Unfavorable Reception Areas for GPS Signals	10
User Agreement	11

Introduction

Your Navigation System is a highly-sophisticated yet easy-to-use system with visual and voice guidance that uses satellites and a map database to show you where you are and help guide you to a desired destination.

The Navigation System receives signals from the Global Positioning System (GPS), a network of 24 satellites in orbit around the earth. By receiving signals from several of these satellites, the Navigation System can determine the latitude, longitude, and other positioning information for your motorcycle. In addition, a speed sensor on your motorcycle keeps track of the speed of travel at all times.

GPS is operated by the U.S. Department of Defense. The system is subject to changes that could affect the accuracy and performance of all GPS equipment, including your Navigation System. For example, you may be riding down a highway and your Navi system, relying on GPS data, will tell you you are on the frontage road adjacent to the highway you are actually on. However, you should find your experience with GPS

navigation highly satisfactory.

The Navigation System is easy to use. The locations of many places of business and entertainment are already entered in the system. You can select any of them as a destination by using the control panel on the right fairing. If a desired destination is not in the system's database, you can still enter it and the system should be able to direct you to it in most cases. You can also save (store) locations in the system as *Favorite Places*. The system also retains your last 30 finds as *Previous Finds* so you can easily return to them, and allows you to store a home address to simplify returning home from your destination.

The system provides map coverage for the 50 U.S. states and Canada. The coverage consists of accurately mapped metropolitan and rural areas.

Roads within metropolitan areas, interstate highways, and major roads connecting cities are typically verified.

Verified roads have been driven by the database supplier and information like

the road's average speed, turn restrictions, or whether it is a one-way street are contained in the Navigation System.

The route calculated by the system may not be the shortest possible because only major roads are mapped in non-detailed areas. You may be aware of secondary roads that shorten the travel distance and time.

While you are riding, the Navigation System provides voice guidance so you do not have to take your eyes off the road. These instructions are provided in advance of the actual riding maneuver so you have time to slow down and prepare for the maneuver.

How to Use this Manual

You have two options:

- Read the entire manual.
- Read the *Getting Started* section to gain an overview of what the system can do. Then begin learning the controls and screen displays. You can reference the more detailed sections of the manual whenever you need to.

Regardless of your choice, be sure to store this manual on your motorcycle along with your Owner's Manual for reference.


System Controls Operation While Riding

Most of the system controls are automatically disabled while your motorcycle is in motion. Only the Navigation System's left handlebar controls and audio system controls continue to operate while riding.

Accessory Precautions

Installing metallic or metalized accessories near the windshield can seriously degrade or prevent GPS reception because the GPS antenna is located under the windshield.

GPS antenna

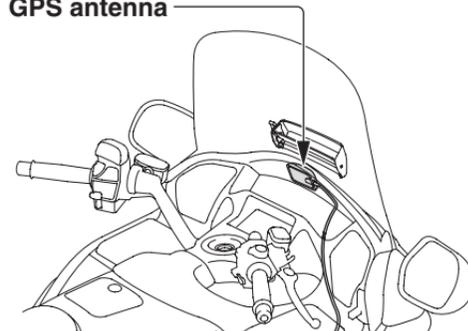

If you plan to install electronic components such as motorcycle location devices, additional amplifiers, or other audio components, ensure that they are not located near the navigation control unit in the travel trunk or near the center display screen. Electronic signals from these devices can cause intermittent disruption of the navigation system.

A Few Words About Safety

The Navigation System is one of many items on the motorcycle that can distract you. Remember that your primary focus should always be on the road.

To operate the Navigation System, enter information into the system before you begin riding or when your motorcycle is stopped. Then, as you ride, listen to the voice guidance and glance at the screen information when it is safe to do so.

When your motorcycle is moving, only the left handlebar controls and audio system controls for the Navigation System will operate.

Pull off the road if you need more time to study the screen or operate the controls.



WARNING

Using the Navigation System while riding can take your attention away from the road, causing a crash in which you could be seriously injured or killed.

Glance at the navigation screen only when it is safe to do so.

The Navigation System is designed to provide route information to help you reach your destination. However, this route guidance may sometimes conflict with road conditions such as street closures, road construction, and detours.

Additionally, the system itself has certain limitations (see page 9). Therefore, you must verify the voice guidance and visual route information provided by the system by carefully observing the roadway, signs, and signals, etc. If you are unsure, proceed with caution. Always use your own good judgment, and obey traffic laws while riding.

Although your Navigation System is a highly sophisticated piece of equipment, it has certain limitations. The system uses signals from the Global Positioning System (GPS) to determine its current location. The GPS is operated by the U.S. Department of Defense. The system is subject to changes that could affect the accuracy and performance of all GPS equipment, including your Navigation System. For more information, see page 170.

Favorable Reception Areas for GPS Signals



GPS reception is best in open areas, with no trees, tall buildings, or other tall objects that can interfere with the signal.


System Limitations

Unfavorable Reception Areas for GPS Signals

The following areas restrict GPS signal reception. However, these obstacles do not interfere with the operation of the speed sensor in your motorcycle that tracks your movement along the route.



Low GPS satellite position (less than 10 degrees) on the horizon.

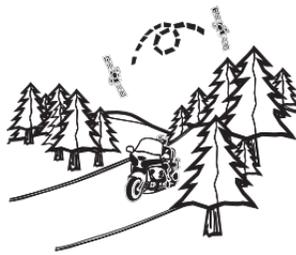

Areas with tall trees.



The bottom level of multiple-level highways.



Areas with tall buildings.



Enclosed or indoor areas such as parking lots or tunnels.

Be aware that high rise buildings may diffuse your GPS signal and cause an inaccurate display of your current location on the map screen. If this occurs, the message banner at the top of the screen turns yellow and displays *Poor Satellite Reception*. Additionally, if you are not using the *Map Orientation* setting, *2D North Up*, the diffused signal reflection may cause the orientation to switch inaccurately.

In using this “Satellite Linked Navigation System” SD (Secure Digital) memory card, which includes HONDA MOTOR CO., LTD. Software, GARMIN LTD. Software, NAVIGATION TECHNOLOGIES CORPORATION database contents and INFO USA CORPORATION database contents (hereinafter referred to as “Licensors”), you are bound by the terms and conditions set forth below. By using your copy of the SD memory card, you have expressed your agreement to the terms and conditions of this Agreement. You should, therefore, make sure that you read and understand the following provisions. If for any reason you do not wish to be bound by the terms of this agreement, please return the SD memory card to your Honda dealer.

- The SD memory card may not be copied, duplicated, or otherwise modified, in whole or in part, without the express written permission of the Licensors.
- The SD memory card may not be transferred or sublicensed to any third party for profit, rent or loan, or licensed for reuse in any manner.
- The SD memory card may not be decompiled, reverse engineered or otherwise disassembled, in whole or in part.
- The SD memory card may not be used in a network or by any other manner of simultaneous use in multiple systems.
- The SD memory card is intended solely for personal use (or internal use where the end-user is a business) by the consumer. The SD memory card is not to be used for commercial purposes.
- The Licensors do not guarantee to the customer that the functions included in the SD memory card meet the specific objectives of the user.
- Licensor shall not be responsible for any damages caused by the use of the SD memory card to the actual user or to any third party.
- The warranty on the SD memory card shall not extend to an exchange or refund due to misspelling, omission of letters, or any other cosmetic discrepancy in the layout of the SD memory card.
- The right to use the SD memory card shall expire either when the user destroys the SD memory card or software, or when any of the terms of this Agreement are violated and the Licensors exercise the option to revoke the license to use the SD memory card or software.
- The terms and conditions hereof apply to all subsequent users and owners as well as to the original purchaser.

User Agreement

The user shall indemnify and save harmless the Licensors, and their officers, employees and agents, from and against any claim, demand or action, irrespective of the nature of the cause of the claim, demand or action, alleging loss, costs, expense, damages or injuries (including injuries resulting in death) arising out of the use or possession of the SD memory card, data, or the Navigation Technologies Corporation database.

Use, duplication, or disclosure of this SD memory card by or on behalf of the United States government is subject to “Restricted Rights” as set forth at FAR 52.227-14, -19 or DFARS 252.227-7013, as applicable. Manufacturers are the Licensors, including HONDA MOTOR CO., LTD., 2-1-1 Minami Aoyama Minato-Ku Tokyo 107-8556 JAPAN., Garmin Ltd., 1200 East 151st Street, Olathe, KS, 66062, Navigation Technologies, 10400 W. Higgins Rd., Rosemont, IL 60018 and INFO USA CORPORATION, 5711 South 86th Circle, Omaha, NE 68127.

Getting Started

Getting Started	14
System Overview	14
Operating Controls	15
Startup	16
Display Screens	18
Map Screen	19
Point Review Screens	23
Route Calculate & Edit Route Screens	24
XM NavWeather & XM NavTraffic Map Screens	25
Main Menu	26
Let's Take a Trip	29
Tips	35

Getting Started

This section is designed to give you a quick overview of your Navigation System before you begin using it on your own. Again, we recommend reading the entire manual, but reading this section will definitely accelerate your learning curve. (Also see *Glossary*, *System Messages*, and *Troubleshooting* on pages 162-169.)

System Overview

While Not Riding Your Motorcycle

With your motorcycle not in motion, you can use the right fairing panel controls to create and edit a route, obtain information, and setup screen displays.

While Riding Your Motorcycle

While your motorcycle is in motion after entering your destination in the system, you can use the left handlebar controls, check the map screens, and listen to the voice guidance. The right fairing panel controls become disabled. Even if no route is entered in the system, you will still receive some useful screen and voice guidance information while riding.

System Functions

There are three ways to find/designate a location you want to travel to or save as a favorite for future use.

- *Find Destination* menu (see page 81)
- *Route* menu (see page 111)
- *White Arrow Point Locator* feature (see page 54)


After finding your destination, direct the system to:

- Create a route to your destination. (You may only enter one route at a time in the system. You may overwrite an existing route.)
- Edit your route to add vias (stops along the way).
- Reroute your journey to express a preference (speed vs distance) and up to four elements to avoid.
- Include a detour in your current route.


Operating Controls

Here is a quick look at the controls you will be using most often. For more information, see page 37.

Right Fairing Control Panel (disabled while riding)

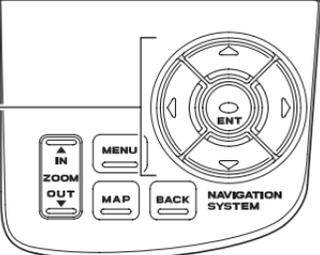	MAP button	Press to display a map screen.
	MENU button	Press to display the <i>Main Menu</i> .
	BACK button	Press to return to the previous screen display (unless a map is displayed).
	ZOOM IN/OUT button	Press in on the top (zoom in) or bottom (zoom out) of the button to zoom in or out on a map screen.
	Directional Arrow buttons (1)	Press to move the highlight in a menu or list, or to move the <i>White Arrow Point Locator</i> feature.
	ENT button	Press to execute (enter) a command.

Left Handlebar Controls (operable while riding)

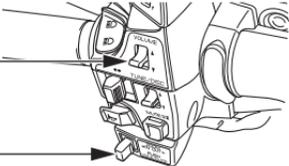	VOLUME lever (2)	Pull up or down to increase or decrease volume of the audio system, including the voice guidance.
	ZOOM toggle - VOICE/GUIDE button (3)	<ul style="list-style-type: none"> • Toggle to the left (zoom in) or right (zoom out) to change the map scale. • Push and release to activate the voice guidance feature. • Push and hold for two beeps to bring up the <i>Traffic/Weather Review</i> screen.

Getting Started

Startup


Turn the ignition switch to ACC to avoid battery drain. The ON position will also activate the system.



After a few seconds, you will see the following screen. (The screen may be different or there may be no screen if you change the default *Greeting*, or if the Navi system was not selected the last time you turned off the ignition. Press the DISP button under the center display screen or the MAP button on the right fairing panel to enter the Navi system.)



After a few seconds, you will see:

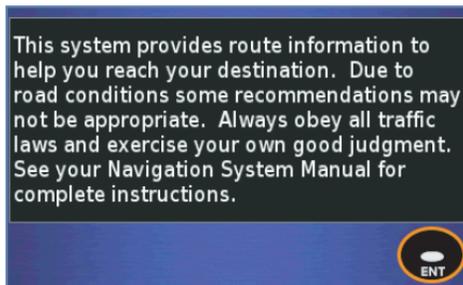

Press the ENT button. (If you do not, the screen will return to the multi-information mode after about 30 seconds. To return to the Navigation System, press the DISP button on the center display or the MAP button on the right fairing panel.) The *Copyrights* screen will appear for about one second before a map appears.

If there is no route in the system, you will see a full map.



If you have a route in the system, the current map will appear in your selected map mode (half, wide, or full). The map scale will be the last scale you selected during previous operation.

The *Half Map* display is the default setting.



If the system is slow in acquiring a GPS connection, you will see “*Locating Satellites*” in the message banner across the top of the screen and a red question mark (?) will flash on top of the vehicle position indicator (red arrowhead). The red arrowhead will identify your last location until the system connects with the satellites.

To display the *Main Menu*, press the MENU button on the right fairing panel.

If you are not located in the Eastern time zone (default setting), see *Time Zone* on page 150.

Getting Started


Display Screens

A summary of the screens you will see often while operating the system:

<i>Maps</i>	The default is <i>Half Map</i> . Also available: <i>Wide Map</i> and <i>Full Map</i> .
<i>Menus</i>	The seven-choice <i>Main Menu</i> and its sub-menus.
<i>Keyboards</i>	Used to enter names and numbers to search for locations.
<i>Lists</i>	Compiled from the system database based on the information you enter, lists act as a gateway to <i>Point Review Screens</i> .
<i>Point Review Screens</i>	For a given location, provides a map, a menu for selecting the location as a route destination or stop along the way (via), or as a favorite, as well as route information.
<i>Route Calculate Screen</i>	Used to input preferences and trigger a route calculation.
<i>Edit Route Screens</i>	Displays the destination and vias along the way with edit options.
<i>Weather & Traffic Map Screen</i>	Displays weather information (forecast, weather map, etc.) or traffic information (traffic flow, traffic incidents, etc.).

Map Screen

Here is a typical map screen (in the *Half Map* default setting):

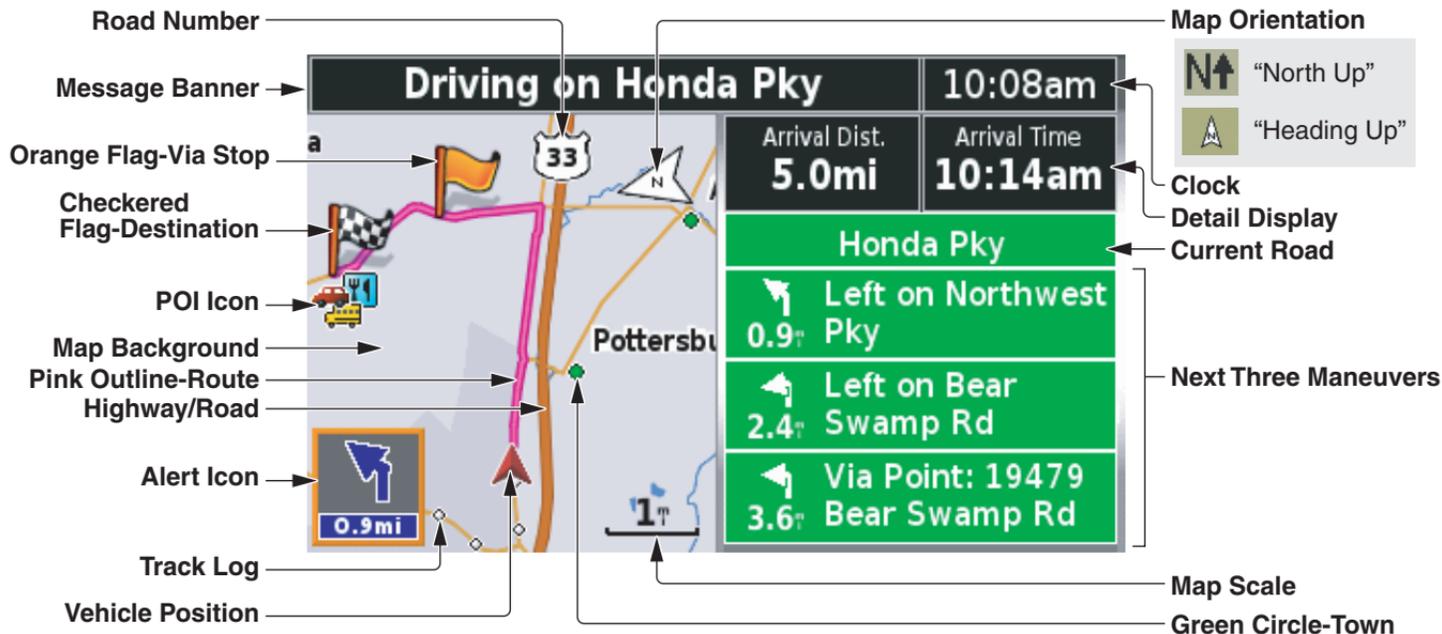

NOTE:

- The explanations above are for daytime display. For information about the map background and street colors at night, see page 21.
- The POI icons will appear when the map scale is 0.2 mile or smaller.

Getting Started

Map Features

Border Line	White around a black line indicates a border line.
Green Circle-Town	The green circle with white outline indicates a town. To see the name of town, use the <i>White Arrow Point Locator</i> feature (see page 54).
Map Orientation	Indicates either <i>2D Heading Up</i> , <i>2D North Up</i> , or <i>3D Heading Up</i> (see page 140).
Map Scale	The length of the scale line represents the distance indicated above the scale. There are 12 selections: from 200 feet to 800 miles.
Pink Outline-Route	Indicates your route.
Road Number	Indicates a road number. The shape of the sign varies such as oval, shield, etc.
Track Log	White dot indicates a track log.
Vehicle Position	The red arrowhead indicates your vehicle location and, when moving, which direction your motorcycle is facing.

Map Icon

Checkered Flag- Destination	Indicates destination of your route.
Home Icon	Indicates your designated <i>Home</i> location, visible for 120 miles or smaller map scale.
POI Icon	Indicates a point of interest loaded in the database. See page 143 for a table of all POI icons in the system.
Orange Flag-Via Stop	Indicates a stop along the route (via).

Information

Alert Icon	There are three types of the alert icon which indicates the next turn guidance, weather warning, or traffic incident.
Clock	Indicates the current time according to system setup (see page 150).
Current Road	If you are riding a route in the <i>Half Map</i> (default) mode, displays the road you are on.
Detail Display	Two details related to time and/or distance. In the <i>Wide Map</i> mode, three details are available.
Message Banner	If riding a route, gives route instructions. If not riding a route, identifies upcoming streets/roads. Also delivers a message such as “Lost Satellite” or “Poor Satellite.”
Next Three Maneuvers	If you are riding a route in the <i>Half Map</i> (default) mode, lists the next three maneuvers.

Map Background Color

Types	DAYTIME	NIGHTTIME
Airport		
Basic Background		
Body of Water		
College, Mall, or Large Business		
Parks or Golf Courses		

(cont'd)


Getting Started

Street Color

Types	DAYTIME	NIGHTTIME
Arterial Roads Collector Roads Major Highway Minor Highway		
Interstate Highway		
Ramps		
Residential Roads		

Point Review Screens

You will often see a *Point Review Screen* as you use the system. It is a screen you will use to route to a destination, to view a map (you can zoom in or out) showing the point's location, or to store a location as a favorite place for easy future routing. Pressing ENT after making a selection on the various list screens in the system brings you to this screen. The sooner you are familiar with the *Point Review Screen* and its uses, the sooner you will feel comfortable with your Navigation System.

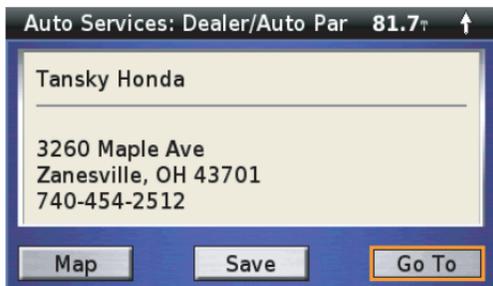


If you want to adjust the designated location, highlight *Map* and press ENT. The map screen appears and the *White Arrow Point Locator* becomes available on the map. Use the four directional arrow buttons to move the white arrow cursor to any point on any map in the system. The map will automatically shift in response to your movement of the cursor. You may also zoom in or out by using the zoom control on the right fairing panel or the left handlebar. Press ENT when the white arrow cursor is positioned at your desired location. To return to the previous screen, press the BACK button.


Getting Started

Route Calculate & Edit Route Screens

There are two other screens you will see often. The *Route Calculate Screen* lets you select a speed vs distance preference and up to four negative (avoid) preferences. Select *Calculate* to have the system create a route to your destination. Select *Edit Route* to bring up the *Edit Route Screen*.

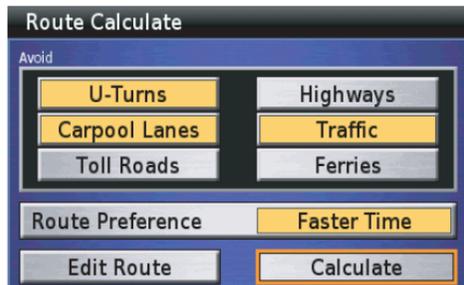


The *Edit Route Screen* lets you add or delete a stop along the way (via) or to sort (rearrange the sequence of) the vias and the current destination. The screen shows your destination (checkered flag), preceded by any via location (orange flag) you have selected.

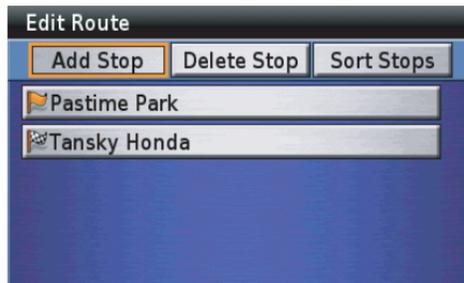


XM NavWeather & XM NavTraffic Map Screens

If you activate your XM subscription, the navigation system can receive the weather information, which includes weather forecast, road conditions, weather warnings, winds, etc. For information about XM subscription, see page 159.

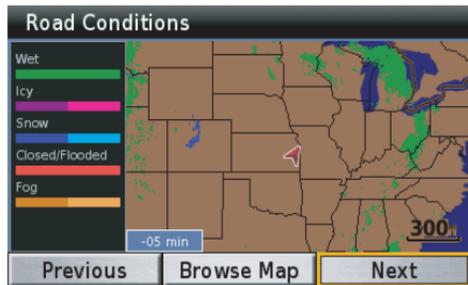

The navigation system will show the traffic event on the map, which includes traffic flow data, congestion, accident, etc. You can check the traffic information and also recalculate your route to avoid the traffic incident.

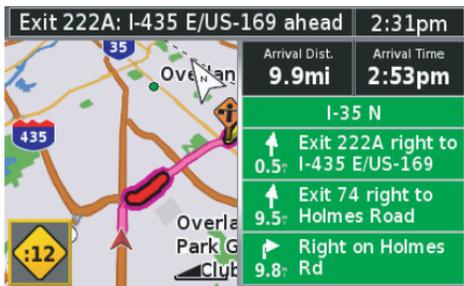

Getting Started

Main Menu

Here is a summary of the seven *Main Menu* functions:

Find Destination	page 81	used to find a location.
<i>By Favorite</i>	page 83	to select from up to 2,000 favorite locations saved in the system.
<i>By Previous Find</i>	page 88	to select from your 30 previous finds.
<i>By Point of Interest</i>	page 90	to select from points of interest loaded in the database.
<i>By Address</i>	page 95	to locate a known address.
<i>By Intersection</i>	page 98	to find an intersection of two known roads.
<i>By City</i>	page 101	to locate a city or town.
<i>By Exit</i>	page 102	to locate the nearest highway exits or exits on a highway you choose.

These seven *Find Destination* functions are also used by the *Route to New Destination* menu, *Edit Route-Add Stop* menu, and *Set Home using Find Menu* (see page 154).

Favorite Places	page 105	used for easier routing to locations you have previously saved as a favorite. (Use the <i>Find</i> menu to save a favorite.)
<i>Mark by Vehicle Position</i>	page 107	to add your current location to your <i>Favorite Places</i> storage list.
<i>Delete All</i>	page 109	to remove all items from your saved favorites.

Route	page 111	used to create a new route or edit an existing route.
<i>Route to New Destination</i>	page 114	to create a route to a destination.
<i>Stop Route</i>	page 113	to suspend your current route guidance for an intentional “detour.”
<i>Resume Route</i>	page 113	To resume your current route after stopping it. This function does not appear on the <i>Route</i> menu until after you use the <i>Stop Route</i> function.
<i>Recalculate Route</i>	page 115	to modify an existing route for preferences, including six “avoids.”
<i>Edit Route</i>	page 116	to review your route and add (or delete) one or more locations (vias) en route to your destination.
<i>Detour</i>	page 121	to recalculate your route because of a detour.

You can create a new route with a route in the system. However, the system only maintains one route at a time so the current route will be overwritten (automatically deleted).

Route to Home	page 123	used to route to a home location.
<i>Calculate</i>	page 125	to calculate a route home if you have saved a <i>Home</i> location. (Otherwise, this selection directs you to the <i>Setup System 2</i> screen.)

Weather	page 127	used to check the weather information, such as weather forecasts, road conditions, wind, or weather warnings.
<i>Map</i>	page 129	to review the weather map on the current location.
<i>Other City</i>	page 129	to select the city for which you want to get the weather information.
<i>Forecast</i>	page 130	to review the weather forecast on the current location.

(cont'd)

Getting Started

Traffic	page 131	used to check traffic information, such as traffic flow or traffic incidents, and to recalculate a detour route to avoid the traffic incidents.
<i>Full Map</i>	page 133	to review the all traffic information on the map.
<i>View By Road</i>	page 133	to review the traffic information by selecting a road.
<i>On Current Route</i>	page 134	to review the traffic information on your current route.

Setup / Info	page 137	used to change or restore the factory-set defaults of the system and display system information. (See page 156 for a list of the defaults.)
<i>Setup Screen</i>	page 139	to select how your screens will appear and certain screen functions.
<i>Setup System</i>	page 150	to select time elements and store a <i>Home</i> location for routing.
<i>Setup Voice</i>	page 158	to select the type of voice for the route guidance and prompts.
<i>GPS Info</i>	page 159	to check your GPS status, current location, elevation, accuracy, date, and time.
<i>System Info</i>	page 159	to identify the software operating your system and the unit ID number, and check the maps used in the system.
<i>XM Info</i>	page 159	to identify the software used in the system, available channels and data services, and your Radio ID.

Let's Take a Trip

Let's imagine your first trip – from your current location to the site of Wyatt Earp's showdown, the O.K. Corral in Tombstone, Arizona. Let's avoid all toll roads, but allow U-turns. On the way you want to stop at your favorite Honda dealer. Then, for your return trip, you want to head straight home. Let's say you live in Marysville, Ohio, just up the road from where they built your Goldwing.

A step-by-step sequence follows. That example, as well as all instructional sequences in the manual, follows an action/reaction structure:

- You act – entering instructions and commands.
- The system reacts – displaying a map, menu, keyboard, list, point review, route calculate, or edit route screen. (And, at times the system's voice guidance also operates.)


In this manual, you will see an image of what you will view on the display screen.

For your hypothetical trip to Tombstone, you utilize the basic functions of the system.


- You find a destination.
- You refine the route to your preference.
- You route to it.
- You add a stop along the way (via).
- You set up quick return routing by designating your residence as *Home*.

Step-by-step instructions follow.

First, press the MENU button on the right fairing panel.

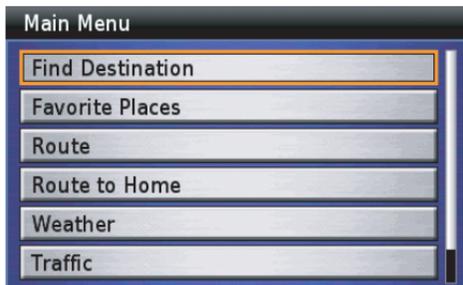

With *Find Destination* highlighted, press the ENT button.

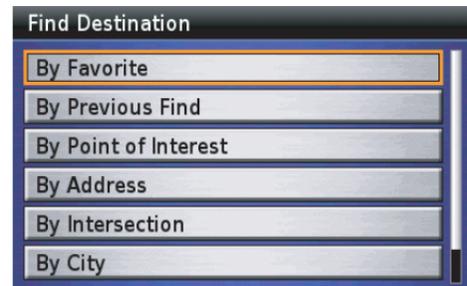


NOTE:

If there are Favorite Places or Previous Finds in the system, the menu will display these options.


Use the down directional arrow button on the right fairing panel to scroll down to highlight *By City*. Press ENT.

(cont'd)

Getting Started

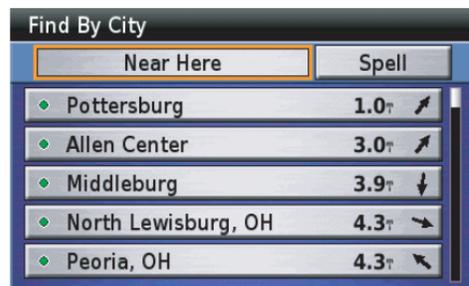


Highlight *Spell* and, press ENT.

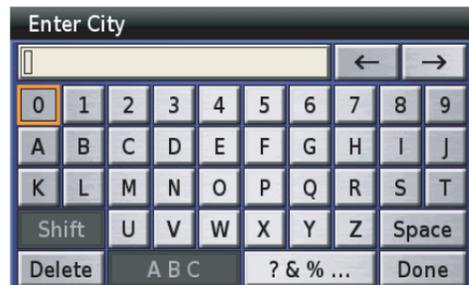


Using the directional arrow buttons and ENT button, begin typing in Tombstone.




Type “TOMBSTONE” in full spelling and highlight *Done*, and then press ENT. Or Type “TOMB” and highlight *Done*, and then press ENT. The system will display a list of possible cities beginning with “TOMB.”

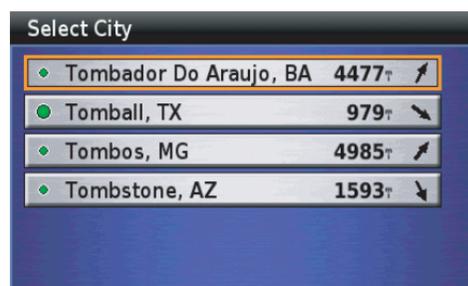

Scroll down and highlight *Tombstone, AZ*. Press ENT.

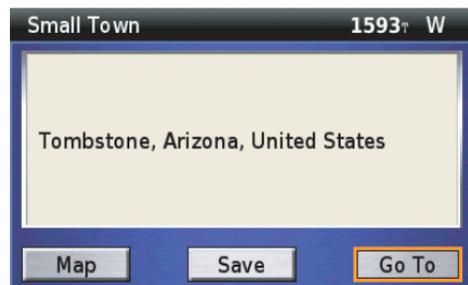


With *Go To* highlighted, press ENT.

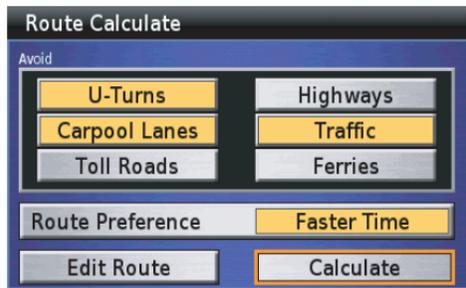


You can enter your *Avoid* preferences now.

NOTE:
You may also change or enter preferences at any time by selecting “Recalculate Route” on the “Route” menu.

Scroll up to *Avoid: Toll Roads* and press ENT.

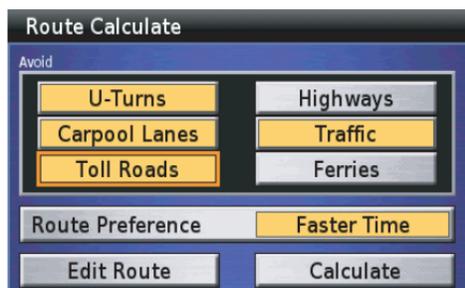

The yellow field indicates *Toll Roads* is now selected as an *Avoid*. To deselect *U-Turns*, scroll over to highlight it and press ENT.

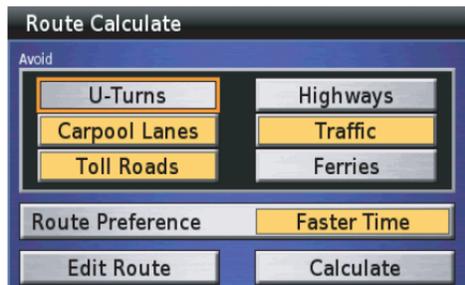

The light gray field indicates *U-Turns* is no longer selected as an *Avoid*. Scroll down to highlight *Calculate* and press ENT.


When the calculation is completed, you will see a map and hear voice guidance announce your next maneuver.



To edit your route to add a stop along the way at your favorite Honda dealer, press the MENU button.

(cont'd)


Getting Started

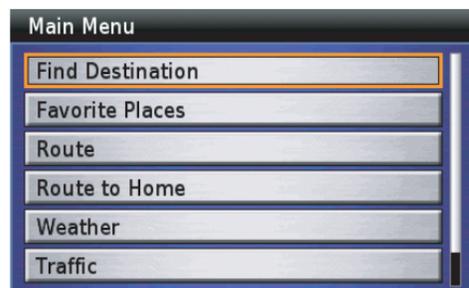


Scroll down to *Route* and press ENT.




Scroll down to *Edit Route* and press ENT.

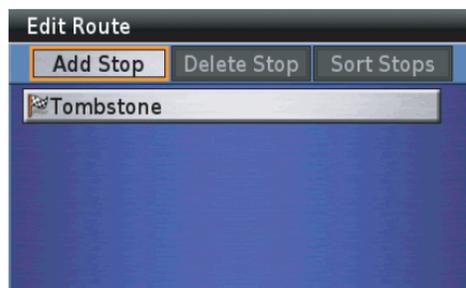

With *Add Stop* highlighted, press ENT.

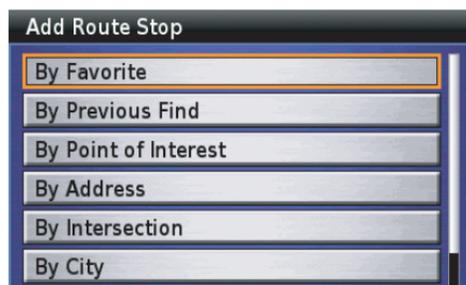

Scroll down to *By Point of Interest*. Press ENT.

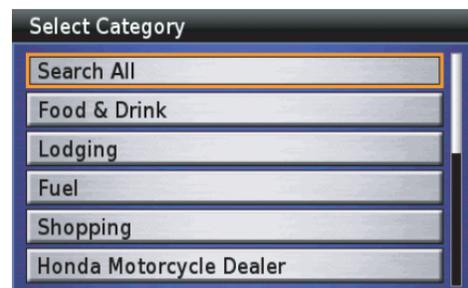

Highlight *Honda Motorcycle Dealer* and press ENT.




NOTE:

All Honda dealers are listed in the “Auto Services: Dealer/Auto Parts” category of the *Point of Interest* selection.


Scroll down to your dealer and press ENT.



With *Select* highlighted, press ENT.

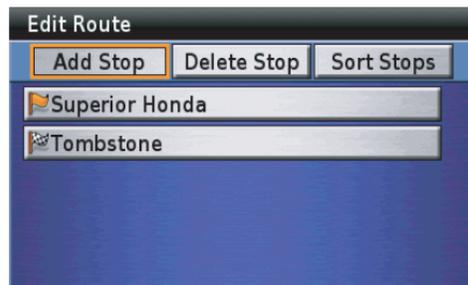

Press the MAP button.

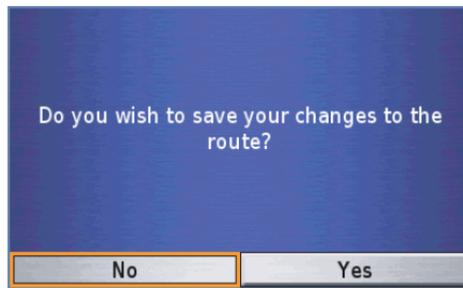

Highlight *Yes* and press ENT.
The system will recalculate the route to include the via.



Your route is ready to ride. If you want to designate your current location as *Home* for the return ride, press the MENU button.



Scroll down to *Route to Home* and press ENT.




Highlight *Yes* and press ENT.

(cont'd)


Getting Started



With *Vehicle Position* highlighted, press ENT.

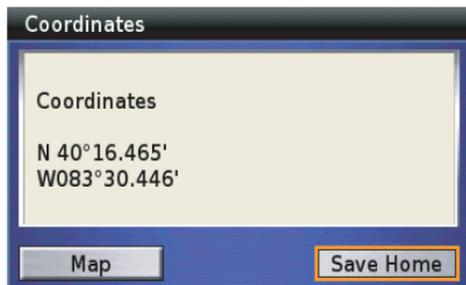

With *Save Home* highlighted, press ENT.

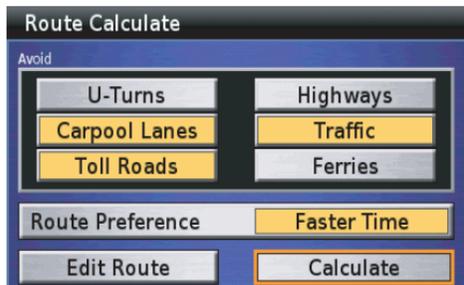

The display returns to the *Route Calculate* screen. Press the MAP button to return to your main map.



To give yourself the best opportunity to fully grasp the Navigation System, we suggest you continue to read the entire manual. However, if you do not intend to, we suggest you at least check out the following two sections, *Operating Controls* and *Center Display Screens*. The next five sections cover the five *Main Menu* selections. Finally, there is the *Technical & Consumer Information* section.

Tips

The following tips will help you avoid some confusion as you learn the system:

<i>A Yellow Field Indicates a Selected Item</i>	Some fields can be switched between yellow (selected) and light gray (not selected). Other fields are permanently yellow, and you highlight and select them to bring up an option screen or to enter information with the keyboard. When choosing between adjacent fields on an option screen, such as <i>Map Layout (Setup Screen 1)</i> screen), use a directional arrow button to move to the field you want to highlight (orange border around the light gray field), then press ENT to select (indicated by the color change to yellow).
<i>Quick Scroll</i>	You can quick scroll through many lists. See <i>Scroll Bar</i> on page 44.
<i>Quick Keyboard Maneuvering</i>	You can speed up keyboard entry by jumping from the far left to the far right of a row or vice versa – and by jumping from the top keyboard row to the bottom row or vice versa. See page 64.
<i>Understanding the Find Destination Function</i>	Each <i>Find Destination</i> function searches within its designation. <i>By City</i> will find cities. It will not find locations in a specified city. <i>By Point of Interest</i> searches the points pre-loaded in the database.
<i>White Arrow Point Locator</i>	This feature can be used to find a location on any map and include it in a route. For more information, see page 54.
<i>Use Category & Subcategory to Simplify Find Destination by Point of Interest</i>	You can narrow your search by selecting the category and sub-category. There are 14 categories. Highlight your desired category and press ENT. The system will display the various sub-categories of your selected category.
<i>Edit Route vs Recalculate Route on the Route menu</i>	<ul style="list-style-type: none"> • Use <i>Edit Route</i> to bring up an <i>Edit Route Screen</i> to add a stop (via) to your current route. • Use <i>Recalculate Route</i> to bring up a <i>Route Calculate Screen</i> that lets you select your speed vs distance preference and up to six “avoids.”
<i>Edit Route vs Calculate on the Route Calculate Screen</i>	<ul style="list-style-type: none"> • Use <i>Calculate</i> to have the system calculate a route to your selected destination. • Use <i>Edit Route</i> to bring up the <i>Edit Route Screen</i> to add a stop (via) to your current route.

(cont'd)

Getting Started


<i>Creating a New Route with an Existing Route in the System</i>	You do not have to delete your current route before entering a new route. Simply, overwrite it. <i>Find</i> a destination and <i>Go To</i> it. The system does not save old routes.
<i>Favorite Places</i>	<ul style="list-style-type: none">• Use <i>Find</i> on the <i>Main Menu</i> to designate a favorite place (<i>Save</i> on the <i>Point Review Screen</i>).• Use <i>Favorite Places</i> on the <i>Main Menu</i> to retrieve a saved (stored) favorite.
<i>To Check If You Have Designated a Home Location</i>	Select <i>Route to Home</i> . If a <i>Route Calculate Screen</i> appears, you have a <i>Home</i> designation in the system.
<i>To Check What Your Home Location Is</i>	Use <i>Main Menu – Favorite Places</i> to reach the <i>Favorite Places</i> screen. <i>Home</i> will be listed with your favorites. See page 125.
<i>Creating a New Home Designation with an Existing Home in the System</i>	Do not select <i>Route to Home</i> on the <i>Main Menu</i> . That will bring up a <i>Route Calculate Screen</i> . Instead, go to <i>Setup / Info – Setup System 2</i> , screen and use <i>Set Home using Find Menu</i> or <i>Set Home using Vehicle Position</i> to designate your new <i>Home</i> choice. This will overwrite the current designation. The system does not save old home locations. See page 154 or 155.
<i>Previous Finds</i>	The system stores your last 30 finds.
<i>Remember to Press ENT</i>	To enter your highlighted selection in the system, you must press ENT.

Operating Controls

Right Fairing Panel Controls	38
Left Handlebar Controls	39
Center Display Controls	40
Audio System Controls	41

Right Fairing Panel Controls

Directional Arrow buttons

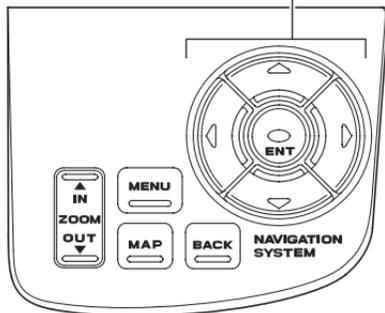

The right fairing panel controls are disabled while your motorcycle is moving. They will operate if you are stopped (with the engine running) and the transmission is in neutral.

MAP button

Press this button to change the current display to the main map screen, or to start the Navigation System if the startup screen does not appear when you turn on the ignition.

MENU button

Press this button to change the current display to the *Main Menu*.

BACK button

Press this button to return to the previous display – unless a map is displayed. In that case, the BACK button will not change the screen.

ZOOM IN (▲)/OUT (▼) button

Push in on the top of the button to zoom in or push in on the bottom of the button to zoom out (map scales of 200 feet to 800 miles) on the map display. (The length of the scale line in the lower left of the map screen represents the distance indicated above the scale line.)

Directional Arrow buttons


- With a menu or list displayed – press the four directional arrow buttons to move the highlight up, down, left, or right.
- With a map displayed – press any of the four directional arrow buttons to make a *White Arrow Point Locator* appear on the screen at the current vehicle position. You can use this locator to find any point on any map and route to it. See page 54.
- With a scroll bar displayed on the list – press the left or right arrow button to scroll through the list up or down page by page.

ENT button

Push this button to enter (execute) a command.

NOTE:

If you attempt to use the navigation system controls on the right fairing panel that are disabled while riding, you will hear a multi-beep warning and a message will pop up on the screen saying: “Invalid Operation.”

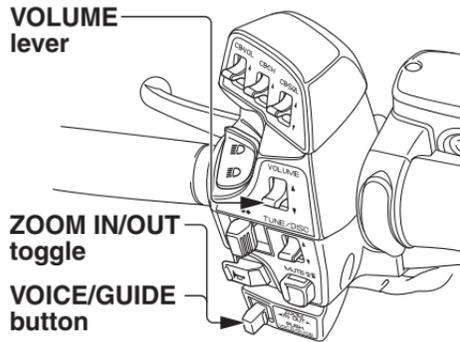

The left handlebar controls remain operational while your motorcycle is moving. The **VOLUME** lever duplicates the function of the **VOLUME** button on the audio system controls. The multi-purpose **ZOOM** toggle – **VOICE/GUIDE** button duplicates some of the functions performed with the right panel controls.

VOLUME lever

Pull the lever up to increase or down to decrease to adjust the volume of the audio system, including the voice guidance. Any volume adjustment you make to the voice guidance will affect the radio and other audio components.


ZOOM IN (◀)/OUT (▶) toggle

Toggle to the left to zoom in or to the right to zoom out anywhere from map scales of 200 feet to 800 miles on the map display. (There are 12 map scale options.)

VOICE/GUIDE button

- Push in and release to activate the voice guidance feature. If you are on a route, you will hear the next maneuver. On the screen, the *Next Turn Pop-up* window will appear for about five seconds. If you are not on a route, you will hear what direction you are riding in.
- Push in and hold for two beeps to bring up the *Traffic/Weather Review* screen, which allows you to check the traffic/weather information. Move the **ZOOM IN/OUT** toggle to the right or left and hold it to switch the review screens. To return to the navigation map screen, push in and hold the button (or press the **MAP** or **DISP** button).

Center Display Controls

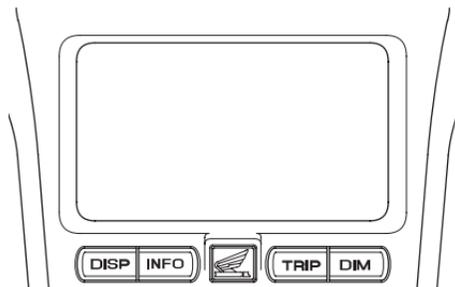

The center screen may display Navigation System information, normal motorcycle functions, or a combination of both. See *Center Display Screens* on page 43.

While in the Navi mode, the center display buttons may be operated while your motorcycle is moving.

DISP button

Press this button to toggle between the multi-information display (time, ODO, audio, and trip), a Navi full screen map with the time, and a split screen with the multi-information condensed in a bar below the map. Pressing the DISP button will also terminate the *White Arrow Point Locator* feature and return the main map display.

INFO button

Press this button to display the air temperature, headlight aiming and suspension preload.

NOTE:

The headlight aiming appears only for the model equipped with the airbag system.


TRIP button

While in the Navi mode, press this button to bring up a split screen (lower portion) display of the odometer and last selected tripmeter (A or B). This display lasts about five seconds. While the screen is still visible, press the button again to toggle between the A and B tripmeters. To reset the tripmeter, push and hold the button with the display in the “TRIP A” or “TRIP B” mode.


DIM button

- Push and release to bring up the dimmer function to change display brightness. The screen lasts for about five seconds. This change applies only to the mode (*Day or Night*) you are in at the time of adjustment and remains effective until you make another adjustment.
- Push and hold for two beeps to change (toggle) the map screen background color from the current display (daylight: your color selection or night: black) to the alternative. For example, in extremely bright sunshine, you might find the black night background preferable.

The illustration below is the model equipped with the airbag system.

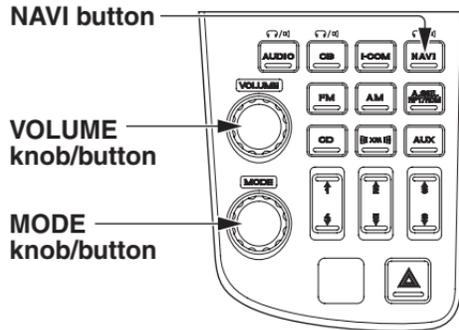

The illustration below is the model without the airbag system.

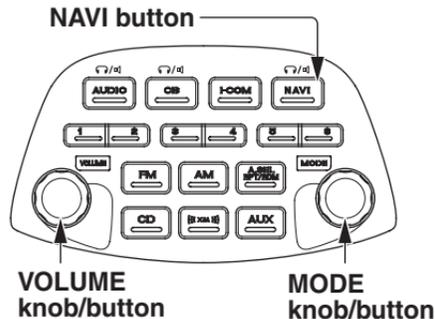

Three of the controls on your audio system are used with the Navigation System.

NAVI button

- Press to toggle between speaker and headphones. An icon will display on the screen to indicate your selection.
- Press and hold to shut off the Navi voice guidance, and press to turn it ON.

VOLUME knob/button

- Turn the knob to control the volume.
- Push the knob/button to control different components of the audio system. Depending on which components are turned on at the time, consecutive pushes cycle through your control choices. When the Navigation System is on, you may press the VOLUME button to adjust the Navigation voice volume relative to the audio volume, either quieter or louder. Rotate the knob to adjust. See your Owner's Manual for more information on the audio system.

MODE knob/button

- Turn the knob to highlight your selection.
- Press the knob/button to control various audio modes. Consecutive pushes cycle through your control choices. *Beep* allows you to turn on or off the audible beep the Navigation System controls make when you press them. See your Owner's Manual for more information on the audio system.

While in the Navi mode, you may press the audio buttons for a quick look of the non-Navi screen displays (tripmeter, etc.).

Center Display Screens

Center Display Screens	44
Types of Navigation System Screens	44
Map Screens	46
Map Layouts	46
Map Screen	47
Next Turn Pop-up	51
Alert Icon	51
Automatic Re-routing	52
Map Scale Zoom.....	53
White Arrow Point Locator	54
Menu Screens	56
Summary of Main Menu Functions	61
Keyboard Screens	64
Operating Keyboards	65
List Screens	67
Point Review Screens	68
Route Calculate & Edit Route Screens	71
Route Calculate Screen.....	71
Edit Route Screens.....	72
Weather/Traffic Information Screen	76
Weather Information Screen.....	76
Traffic Information Screen	78
Traffic/Weather Review Screen.....	79

Center Display Screens

There are three screen formats possible on the center display screen:

- Multi-information screen
- Navigation System screen
- Split screen (Navigation screen with some multi-information across the bottom, see illustration.)




Types of Navigation System Screens

Screen categories include:

- Map Screens (see page 46)
- Menu Screens (see page 56)
- Keyboard Screens (see page 64)
- List Screens (see page 67)
- Point Review Screens (see page 68)
- Route Calculate & Edit Route Screens (see page 71)
- Weather/Traffic Information Screen (see page 76)

Scroll Bar

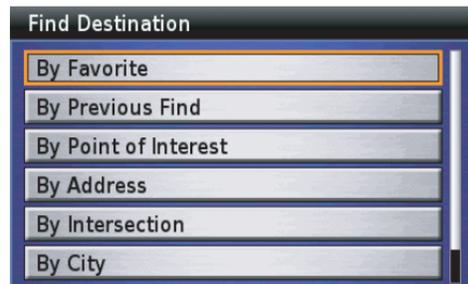

A scroll bar is visible on the right side of some menus and lists when the items exceed the six lines available on a screen display. To advance through the list, use the down directional arrow button to move to the item you want.

NOTE:

Throughout this manual you will see some menu screens with more than six items (example: the "Find Destination" menu with seven items). These illustrations are graphic creations to display the complete menu choices available.

There are two ways to speed up scrolling with some (but not all) lists.

- To jump from the first selection to the last, press the up arrow instead of scrolling down item by item.
- To jump from the last selection to the first, press the down arrow instead of scrolling up item by item.

This feature may not work if there is a large number of items in the database (such as *Point of Interest*).

To fast scroll from one screen page to another:

- To scroll forward one page at a time in a long list, press the right arrow. The first press moves the highlight to the bottom item on the screen page. Each successive press advances the screen list one page, with the bottom selection of the previous page now at the top of the next page.
- To scroll back one page at a time in a long list, press the left arrow. The first press moves the highlight to the top item on the screen page. Each successive press returns the screen list one page, with the top selection of the forward page now at the bottom of the previous page display.

Map Screens

Map Layouts

There are three choices for map display while riding a route: *Full Map*, *Wide Map*, and *Half Map*. The system default is the *Half Map*. To change the map layout, see *Map Layout* on page 139.

Full Map



NOTE:

- When no route is entered, the initial display is "Full Map."
- See "Map Screen" on page 47 for a complete explanation of features and symbols on the map screens.

Wide Map




Half Map (default)



Map Screen

Here is a typical map screen (in the *Half Map* default setting):

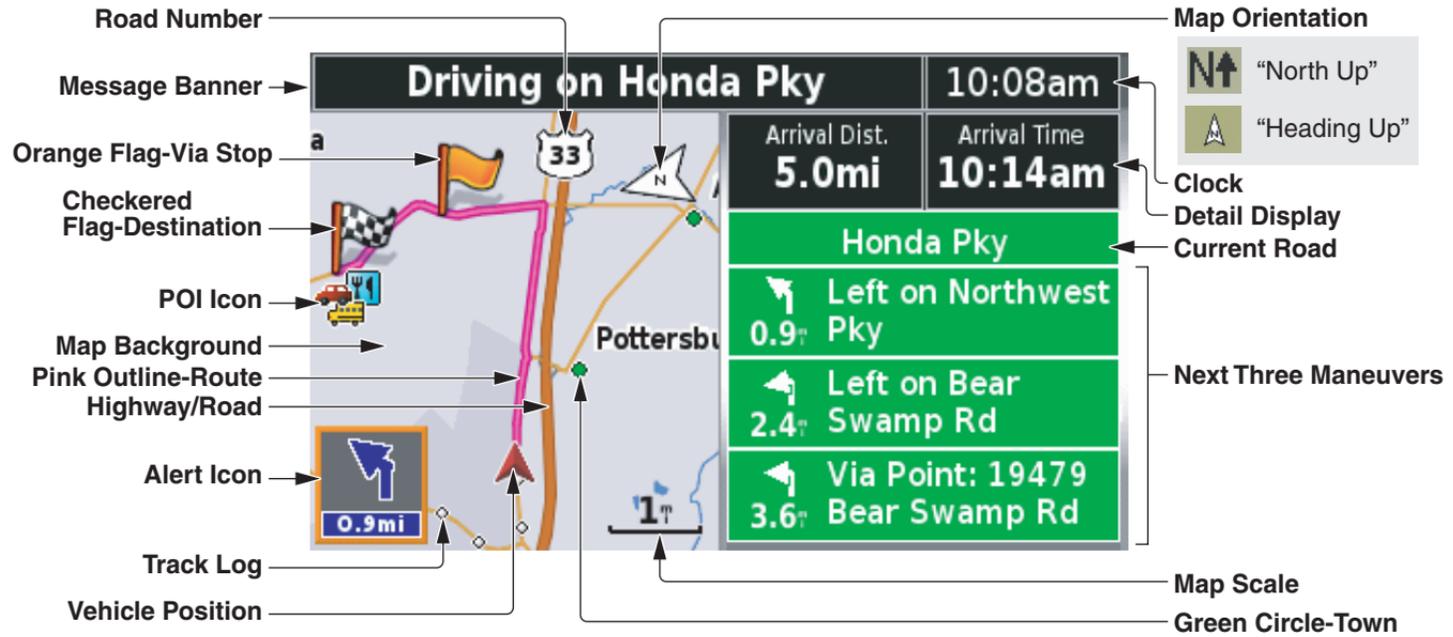

- NOTE:**
- The explanations above are for daytime display. For information about the map background and street colors at night, see page 49.
 - The POI icons will appear when the map scale is 0.2 mile or smaller.

Map Screens

Map Features

Border Line	White around a black line indicates a border line.
Green Circle-Town	The green circle with white outline indicates a town. To see the name of town, use the <i>White Arrow Point Locator</i> feature (see page 54).
Map Orientation	Indicates either <i>2D Heading Up</i> , <i>2D North Up</i> , or <i>3D Heading Up</i> (see page 140).
Map Scale	The length of the scale line represents the distance indicated above the scale. There are 12 selections: from 200 feet to 800 miles.
Pink Outline-Route	Indicates your route.
Road Number	Indicates a road number. The shape of the sign varies such as oval, shield, etc.
Track Log	White dot indicates a track log.
Vehicle Position	The red arrowhead indicates your vehicle location and, when moving, which direction your motorcycle is facing.

Map Icon

Checkered Flag- Destination	Indicates destination of your route.
Home Icon	Indicates your designated <i>Home</i> location, visible for 120 miles or smaller map scale.
POI Icon	Indicates a point of interest loaded in the database. See page 143 for a table of all POI icons in the system.
Orange Flag-Via Stop	Indicates a stop along the route (via).

Information

Alert Icon	There are three types of the alert icon which indicates the next turn guidance, weather warning, or traffic incident.
Clock	Indicates the current time according to system setup (see page 150).
Current Road	If you are riding a route in the <i>Half Map</i> (default) mode, displays the road you are on.
Detail Display	Two details related to time and/or distance. In the <i>Wide Map</i> mode, three details are available.
Message Banner	If riding a route, gives route instructions. If not riding a route, identifies upcoming streets/roads. Also delivers a message such as “Lost Satellite” or “Poor Satellite.”
Next Three Maneuvers	If you are riding a route in the <i>Half Map</i> (default) mode, lists the next three maneuvers.

Map Background Color

Types	DAYTIME	NIGHTTIME
Airport		
Basic Background		
Body of Water		
College, Mall, or Large Business		
Parks or Golf Courses		


(cont'd)

Map Screens

Street Color

Types	DAYTIME	NIGHTTIME
Arterial Roads Collector Roads Major Highway Minor Highway		
Interstate Highway		
Ramps		
Residential Roads		


Next Turn Pop-up

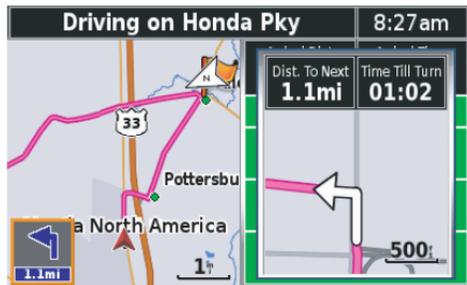

If you are riding a route with the default *Next Turn Pop-up* option, a window will appear when you are 1.7 miles (2.7 km) or less away from your next turn. You will see an arrow icon along with two travel details: *distance to next* and *time till next*. The number of prompts, up to three, will depend on your speed and the distance from the last turn. Your prompt will occur at least 140 yards (125 meters) before a turn. The distance to an intersection is shown automatically between 200 feet and 0.2 miles.

Countdown Bar

A countdown bar (a pyramid of eight bars) appears in the popup window when you are approaching a turn. The initial display shows a single blue bar on the bottom with seven green bars above it. As you approach the turn, the lowest green bar turns blue in increments until all eight bars are blue as you reach the turn.

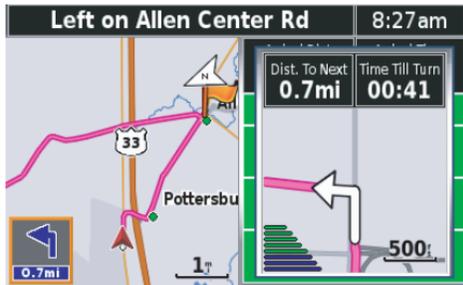

NOTE:
If the Auto zoom is Off when Map Orientation is set to 2D Heading Up or 2D North Up, Next Turn Pop-up will be displayed.

Alert Icon



The system notifies you of urgent conditions with the alert icon and voice guidance (default setting). The alert icon will appear in the lower left corner of the screen.

NOTE:
You can select the notification method, such as with voice only, with icon only, etc. For information about Alert Setup, see page 148.

(cont'd)

Map Screens

There are three types of the alert icon.

Types	Description
 Turn Prompt	The alert active from the time the vehicle approaches a turn on the current route until the vehicle has completed the turn. It will display the angle of the turn and the distance to completion.
 Traffic Alert	The traffic alert notifies you of traffic incident along the current route. It will report the approximate delay to be expected as a result of the traffic.
 Weather Alert	There are two modes of weather alert: a precipitation in the area alert and a National Weather Service Bulletin alert. A precipitation in the area alert will take precedence in case both conditions exist and will show the weather map in the alert filed.

NOTE:


- To use this feature, you may need to subscribe to XM NavTraffic/NavWeather services. See page 159.
- XM service only available in the 48 contiguous United States.

Automatic Re-routing

If you go off route, or use the *Stop Route* and *Resume Route* functions, the system automatically calculates how to get you back on the route. You will receive a voice and screen alert. The alert is activated at about 33 yards (30 meters) if you are riding the route.

Map Scale Zoom

Pressing the *Zoom In/Out* button lets you change the scale of the map display.

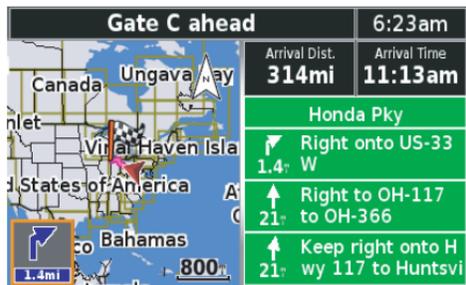

Your choices are 200 ft, 500 ft, 0.2 mi, 0.5 mi, 1 mi, 3 mi, 8 mi, 20 mi, 50 mi, 120 mi, 300 mi, and 800 mi.

The length of the zoom scale in the lower right of the map screen represents the distance listed above the scale line. Once you change the map scale, that zoom setting will remain the default for subsequent map screens.

However, there are zoom limitations for the *Next Turn Pop-up* option. For both, the scale will adjust automatically between 200 feet and 0.2 miles, depending on the distance to the junction. The *Next Turn Pop-up* cannot be zoomed.

Automatic Zooming

If the *Auto zoom* option is turned on when *2D Heading Up* or *2D North Up* is selected for *Map Orientation*, automatic zooming on the map for optimal viewing will be activated. When the vehicle approaches the next turn, the system will zoom in on the map automatically; conversely, when the vehicle drives away from the turn, the system will zoom out on the map automatically. The map scale zooming in or out depends on the distance to the next turn and the vehicle speed.

Map Screens

White Arrow Point Locator

In addition to using the *Find Destination* and *Route* menus to create a route, you may use a third option – a *White Arrow Point Locator* that you can move around any main map screen in the system to a new location.

You may use this feature to select a destination, a via, or a *Favorite Place*.

If you have a map on the screen:

1. Press any of the four directional arrow buttons on the right fairing panel to make the white arrow appear at your current vehicle position.



NOTE:


To remove the white arrow and return to the main map display showing your current location, press the MAP button. If you are riding, you may press the DISP button below the center display.

2. Use the four directional arrow buttons to move the white arrow cursor to any point on any map in the system. The map will automatically shift in response to your movement of the cursor.



3. Zoom in or out to find the desired location, using the zoom control on the right fairing panel or the left handlebar.

4. Press ENT to bring up a *Point Review Screen* for the new location.

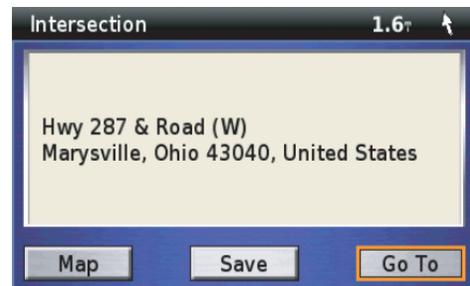

NOTE:


You can adjust the location or store it as a favorite place. For more information about Point Review Screens, see page 68.

5. With *Go To* highlighted, press ENT. When you have no route entered, a *Route Calculate Screen* will appear. Go to step 7.

NOTE:

For more information about the Route Calculate Screen, see page 71.

If you have a route entered in the system, the following screen will appear.

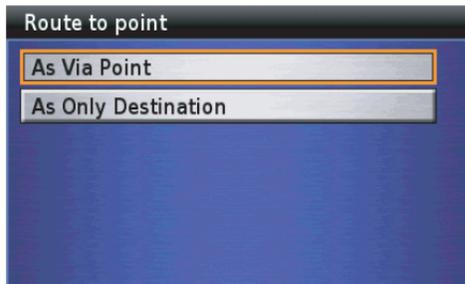

6. Highlight *As Only Destination* and press ENT to bring up a *Route Calculate Screen*.

NOTE:

You can add the selected location as your stop (via) by choosing As Via Point.

7. With *Calculate* highlighted on the *Route Calculate Screen*, press ENT. The screen will display a routing map to your new destination. (Your old route will automatically be deleted from the system.)


Menu Screens

The *Main Menu* provides access to the seven major selections of your Navigation System. The system defaults to highlight *Find Destination* when you enter the *Main Menu* because it is the selection you will use the most.




To choose one of the seven *Main Menu* selections, use the right fairing panel controls (up and down directional arrow buttons) to highlight the desired function and then push ENT.

Find Destination offers seven different ways to find or select a desired location. If there are no *Favorite Places* or *Previous Finds* in the system, the menu will not display those options.

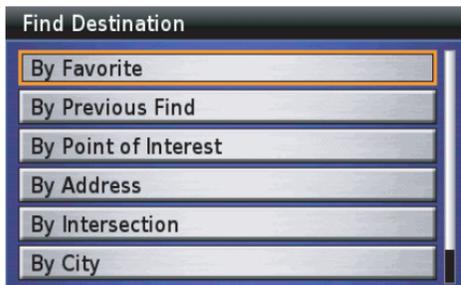

Favorite Places allows you to enter your current location (indicated by the red arrowhead on the map screen) as a favorite place for future routing use. *Home* (if designated) and any *Favorite Places* already entered in the system will be displayed.

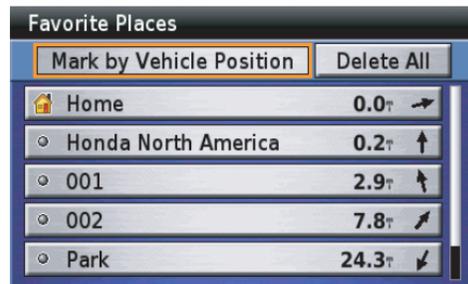

Route allows you to choose a route to your destination as well as adding other locations along the way. You may also refine your trip with route preferences and avoids.

The first time you select *Route*, or anytime there is no route in the system, you will see the following screen:



If you have entered a route in the system, you will see the following screen.



NOTE:
“Detour” will not appear on the menu if you go off route or lose satellite reception.


Route to Home is a shortcut to a *Route Calculate Screen* with your *Home* entry as the destination. “Home” is not limited to your residence, but may be any location, such as where you are staying while out of town. If you have not entered a *Home* selection in the system, the following screen will be displayed.



(cont'd)

Menu Screens

If you have a *Home* selection in the system, the display will be a *Route Calculate Screen* which lets you route to your home position.

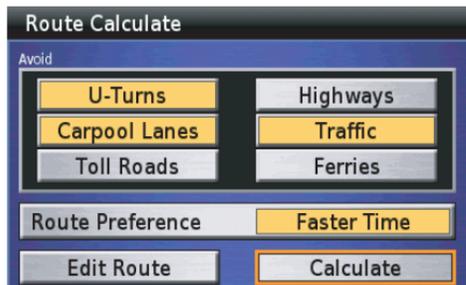


Weather allows you to review the weather information, which includes weather forecasts, road conditions, winds, etc. You can check the weather for the current location and the city you select.



NOTE:

- To use this feature, you may need to subscribe to XM NavTraffic/ NavWeather services. See page 159.
- XM service only available in the 48 contiguous United States.


Traffic allows you to review the traffic information, which includes traffic flow data, congestion, accidents, etc. You can check the traffic incidents on the map screen, or check them along a road you select or along the current route.

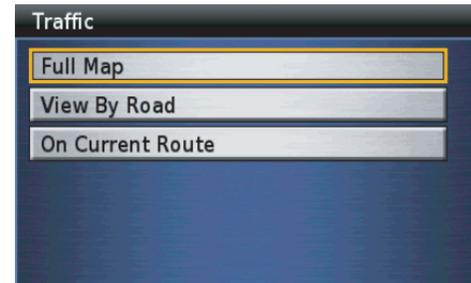

NOTE:

- To use this feature, you may need to subscribe to XM NavTraffic/ NavWeather services. See page 159.
- XM service only available in the 48 contiguous United States.


The *Setup / Info* function lets you set the system and screen displays and guidance voice, and provides system information (three menus).

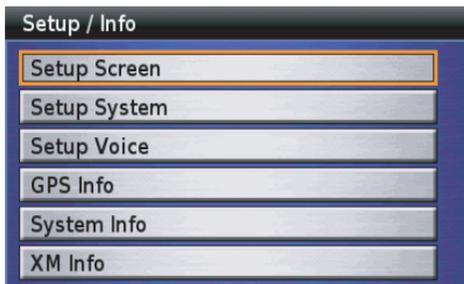

Menu Screens

Main Menu Diagram

The circular diagram on the right shows the menu selections that can be accessed from the *Main Menu*. The page number for each menu function appears in the diagram.

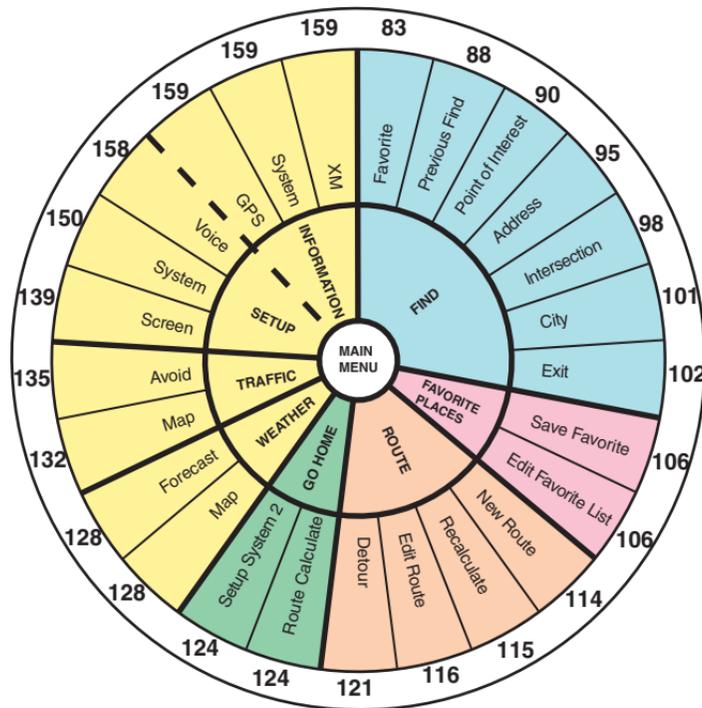

Summary of Main Menu Functions

Here is a summary of the seven *Main Menu* functions:

Find Destination	page 81	used to find a location.
<i>By Favorite</i>	page 83	to select from up to 2,000 favorite locations saved in the system.
<i>By Previous Find</i>	page 88	to select from your 30 previous finds.
<i>By Point of Interest</i>	page 90	to select from points of interest loaded in the database.
<i>By Address</i>	page 95	to locate a known address.
<i>By Intersection</i>	page 98	to find an intersection of two known roads.
<i>By City</i>	page 101	to locate a city or town.
<i>By Exit</i>	page 102	to locate the nearest highway exits or exits on a highway you choose.

These seven *Find Destination* functions are also used by the *Route to New Destination* menu, *Edit Route-Add Stop* menu, and *Set Home using Find Menu* (see page 154).

Favorite Places	page 105	used for easier routing to locations you have previously saved as a favorite. (Use the <i>Find</i> menu to save a favorite.)
<i>Mark by Vehicle Position</i>	page 107	to add your current location to your <i>Favorite Places</i> storage list.
<i>Delete All</i>	page 109	to remove all items from your saved favorites.

(cont'd)

Menu Screens

Route	page 111	used to create a new route or edit an existing route.
<i>Route to New Destination</i>	page 114	to create a route to a destination.
<i>Stop Route</i>	page 113	to suspend your current route guidance for an intentional “detour.”
<i>Resume Route</i>	page 113	To resume your current route after stopping it. This function does not appear on the <i>Route</i> menu until after you use the <i>Stop Route</i> function.
<i>Recalculate Route</i>	page 115	to modify an existing route for preferences, including six “avoids.”
<i>Edit Route</i>	page 116	to review your route and add (or delete) one or more locations (vias) en route to your destination.
<i>Detour</i>	page 121	to recalculate your route because of a detour.

You can create a new route with a route in the system. However, the system only maintains one route at a time so the current route will be overwritten (automatically deleted).

Route to Home	page 123	used to route to a home location.
<i>Calculate</i>	page 125	to calculate a route home if you have saved a <i>Home</i> location. (Otherwise, this selection directs you to the <i>Setup System 2</i> screen.)

Weather	page 127	used to check the weather information, such as weather forecasts, road conditions, wind, or weather warnings.
<i>Map</i>	page 129	to review the weather map on the current location.
<i>Other City</i>	page 129	to select the city for which you want to get the weather information.
<i>Forecast</i>	page 130	to review the weather forecast on the current location.

Traffic	page 131	used to check traffic information, such as traffic flow or traffic incidents, and to recalculate a detour route to avoid the traffic incidents.
<i>Full Map</i>	page 133	to review the all traffic information on the map.
<i>View By Road</i>	page 133	to review the traffic information by selecting a road.
<i>On Current Route</i>	page 134	to review the traffic information on your current route.

Setup / Info	page 137	used to change or restore the factory-set defaults of the system and display system information. (See page 156 for a list of the defaults.)
<i>Setup Screen</i>	page 139	to select how your screens will appear and certain screen functions.
<i>Setup System</i>	page 150	to select time elements and store a <i>Home</i> location for routing.
<i>Setup Voice</i>	page 158	to select the type of voice for the route guidance and prompts.
<i>GPS Info</i>	page 159	to check your GPS status, current location, elevation, accuracy, date, and time.
<i>System Info</i>	page 159	to identify the software operating your system and the unit ID number, and check the maps used in the system.
<i>XM Info</i>	page 159	to identify the software used in the system, available channels and data services, and your Radio ID.

Keyboard Screens

Use the right fairing panel directional arrow buttons and ENT button to “type” information in the eight different system keyboards:

- Enter Any Part of Name
- Enter State/Province
- Enter City
- Enter Address Number
- Enter Street
- Enter Highway
- Enter Name of Favorite
- Please Enter Your Name



Typing in the Keyboard

Enter an address, the name of a favorite place or point of interest, and other information in the entry field at the top of the screen. Highlight the letter or numeral you want and press ENT.

Initials

The database includes some entries that leave a space between initials and some entries that do not. If your entry fails, try the alternative.

Punctuation

If a name was entered in the system database with a punctuation mark, the punctuation mark “key” will appear on the keyboard.

Correcting a “Typo”

Use the ← or → key.

Operating Keyboards

Press the following buttons on the right fairing panel controls.

Left Arrow Button	To move the cursor in the entry field one space to the left. (The directional arrow buttons do not create a space between words.) If the cursor is full left, pressing the left arrow moves the cursor to the far right of the keyboard.
Right Arrow Button	To move the cursor in the entry field one space to the right. If the cursor is full right, pressing the right arrow moves the cursor to the far left of the keyboard.
Up Arrow Button	To move up one row at a time on the keyboard. Also, to jump to the bottom row when a top row item is highlighted.
Down Arrow Button	To move down one row at a time on the keyboard. Also, to jump to the top row when a bottom row item is highlighted.

Keyboard Screens

Highlight the following items on the screen and press ENT.

<i>Space</i>	To enter a space between words or numbers and names. Also, serves as a substitute for punctuation such as periods.
<i>Done</i>	To execute what appears in the entry field.
→	To move the highlight in the entry field to the right. Use this feature to enter the “guess” gray word.
←	To move the highlight in the entry field to the left. Use this feature to “overwrite” an incorrect entry. All characters typed to the right of the correction will be lost.
<i>Shift</i>	To make upper-case or lower-case conversion.
<i>ABC</i>	To switch to the keyboard for alphabets or numerals.
<i>? & % ...</i>	To switch to the keyboard for symbols.
<i>Delete</i>	To delete the character the cursor is positioned on.

List Screens

The list screen is compiled from the system database based on the information you enter. When one of the following lists appears, highlight a location on a list and press ENT.

- *Find By Favorite*
- *Find By Previous Find*
- *Find By Point of Interest*
- *Find By City*
- *Find By Exit*
- *Select Address*
- *Select Intersection*
- *Select City*

The *Point Review Screen* then appears and allows you to create or edit a route.


The screen below is the *Find By Point of Interest* list.



Point Review Screens

After entering your destination, a *Point Review Screen* appears. The *Point Review Screen* presents information about the point (location) you have selected as well as a menu.

The screen shown below is just an example. The menu items may differ.

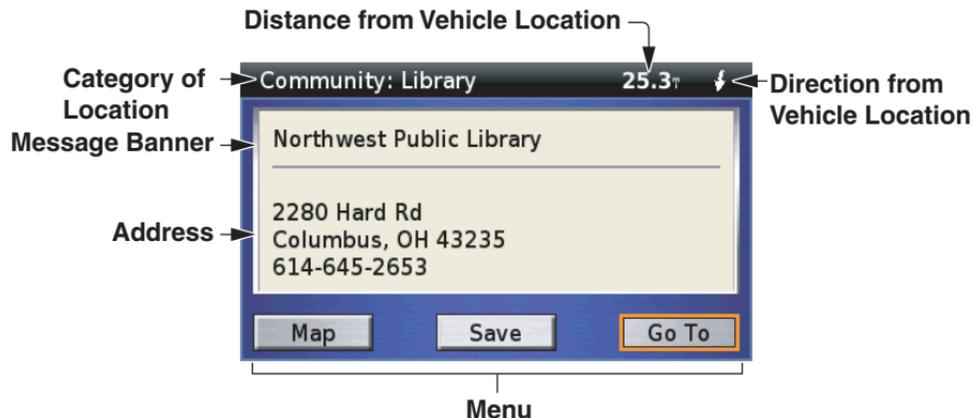

NOTE:


The address may not appear if the system cannot locate the position. In that case, a blank space is shown on the display.

There are two kinds of *Point Review Screens*, and the menu items shown may differ depending on the screen:


When a location is designated from Find menu or the White Arrow Point Locator, but is not already saved as a Favorite Place



When a location is designated from the Find menu or White Arrow Point Locator (If the location is already saved as a Favorite Place)

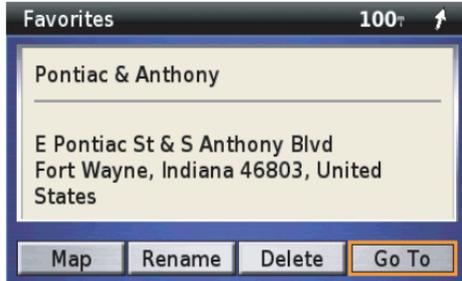

When you have a route entered in the system and select *Go To*, the following screen will appear.

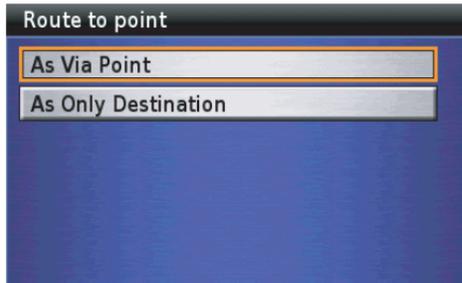


The following menu items appear on the *Point Review Screens*.

<i>Go To</i>	To create a route to your selected destination.
<i>Save</i>	To save the location in the <i>Favorite Places</i> storage file.
<i>Map</i>	To display the selected location on the map.
<i>Rename</i>	To change the name of a favorite for easy recognition. (This option appears only if the location is already saved as favorite.)
<i>Delete</i>	To delete the location as a favorite. (This option appears only if the location is already saved as favorite.)
<i>As Via Point</i>	To add the location as a stop (via) on the current route.
<i>As Only Destination</i>	To create a new route to your selected destination.

Point Review Screens

On the *Point Review Screen*, highlight *Map* and press ENT. The system will show you the *Browse Map* screen. Note the white arrow cursor pointing to the location. You can zoom in or out by using the zoom control on the right fairing control panel or the left handlebar controls, and adjust the location by using the four directional arrow buttons. To return to the *Point Review Screen*, press the BACK button.

The screen shown below is just an example.

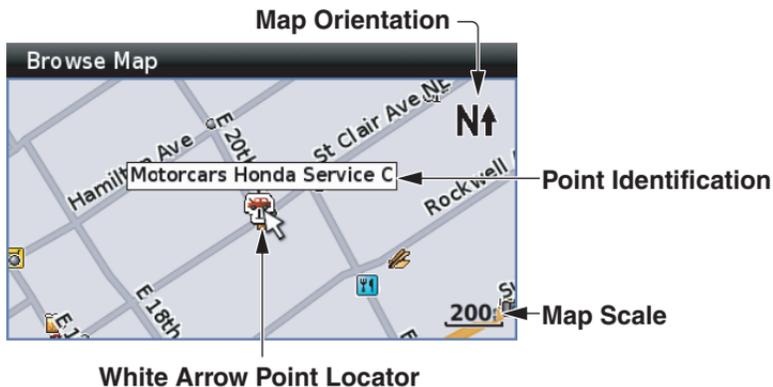


NOTE:

Map Orientation is always selected 2D-North Up on the Browse Map screen.


Adjusting the Location

If the designated location shown on the *Point Review Screen* is not what you desired, you may adjust the location.

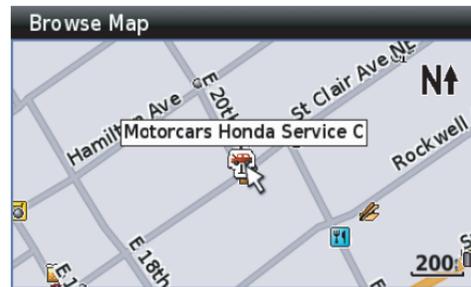

Use the four directional arrow buttons to move the white arrow cursor to any point on any map in the system. Press ENT when the white arrow cursor is positioned at your desired location.


Route Calculate Screen

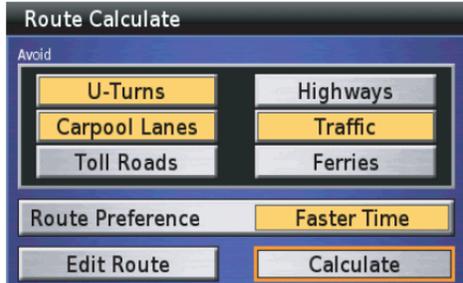


From this screen, you activate the system's calculation function. Before calculation, you may choose some categories you want the system to avoid and a *Route Preference* (either *Faster Time* or *Shorter Distance*). (In some situations, the calculation may prioritize your selections and not apply all elements you choose.) The *Edit Route* option takes you to the *Add Stop (Find)* menu and lets you add one or more stops (vias) before reaching your destination.

Avoid

To select each *Avoid* element you want, highlight the field, and press ENT.

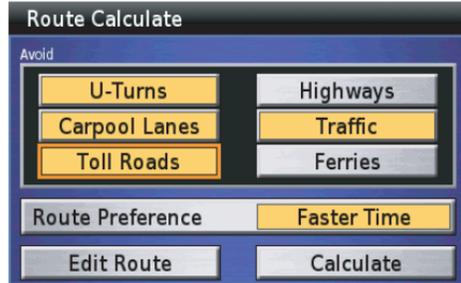

The field turns yellow, indicating its selection. To deselect an *Avoid*, highlight the yellow field, and press ENT.

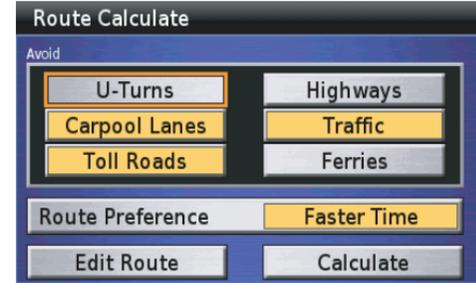


The field turns light gray. The *Avoid* is deselected. (You may select or deselect any combination of the all options.)

After choosing any *Avoids* and a *Route Preference*, you may edit the route to add another location en route to your destination (select *Edit Route*) or route directly to your destination (select *Calculate*).

Route Calculate & Edit Route Screens

Route Preference

To change a current selection (yellow field) shown on the screen, highlight *Route Preference* and press ENT.

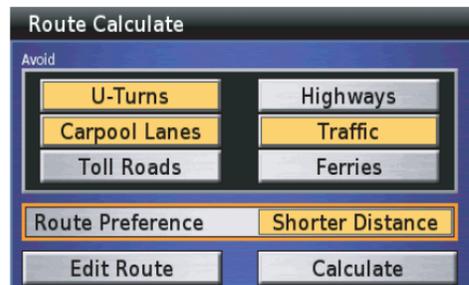


NOTE:

The system may calculate a route that includes a ferry passage. The *Route Preference* does not allow you to choose whether or not to include a ferry passage.

Calculate

With *Calculate* highlighted, press ENT. A map screen will appear and the message banner will show "Calculating" plus a percentage indicating the progress of the calculation.

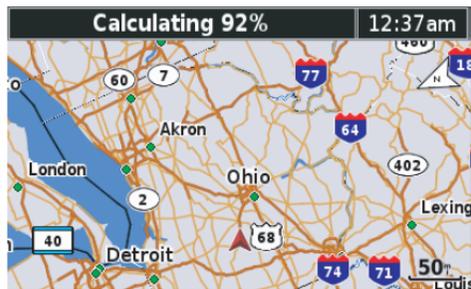


Upon completion of the calculation, you will see your route map.



Edit Route Screens


With *Edit Route* highlighted on the *Route Calculate Screen*, press ENT.

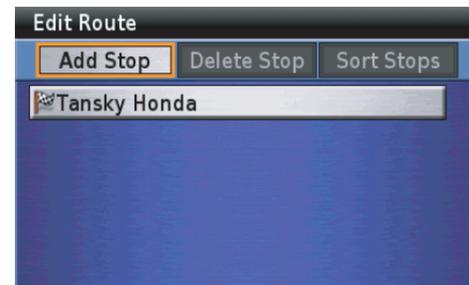


The *Edit Route Screen* shows the destination of your route (indicated by the checkered flag). If you press the BACK button, you will cancel the process.

Route Calculate & Edit Route Screens


To edit the route, highlight *Add Stop*, and press ENT.

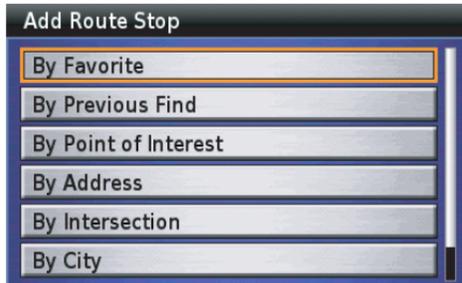

The *Add Stop* menu offers the seven *Find Destination* menu selections. Use any of these selections to add a location to your route. Example – using the *By Point of Interest* option brings up the following screen:

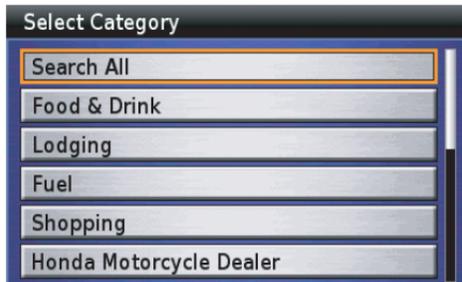

With *Search All* highlighted and press ENT.

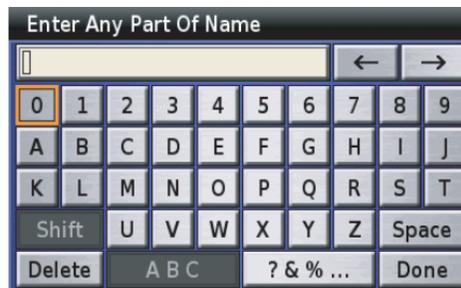


Use the keyboard to type your desired name.


NOTE:

For information about the keyboard screen, see page 64.

After typing, highlight *Done* and press ENT.

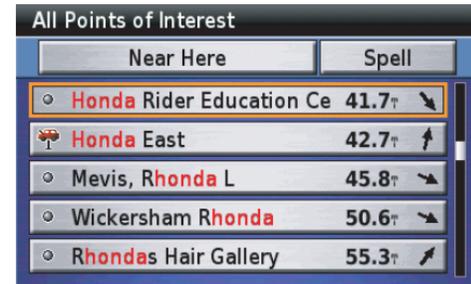


With your choice highlighted, press ENT.

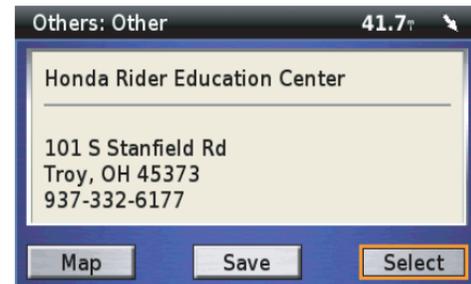

With *Select* highlighted, press ENT.

(cont'd)

Route Calculate & Edit Route Screens

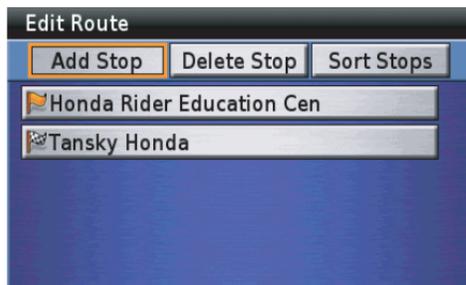


The *Edit Route Screen* now shows your destination (checked flag) preceded by any via stops (orange flag) en route and offers two editing options.

The following options are available from the *Edit Route Screen*.

<i>Add Stop</i>	To add another location to the current route. With <i>Add Stop</i> highlighted, press ENT to bring up the <i>Add Stop (Find)</i> menu.
<i>Delete Stop</i>	To remove a location from the current route. With <i>Delete Stop</i> highlighted, press ENT. Highlight the item to be deleted and press ENT. (This option appears after selecting <i>Add Stop</i> .)
<i>Sort Stops</i>	To rearrange the order of the locations on the <i>Edit Route</i> list. To sort, highlight and select <i>Sort Stops</i> , then highlight the item to be repositioned. Press ENT. Use the up and down directional arrows to move the item up or down the list. (This option appears after selecting <i>Add Stop</i> .)

Route Calculate & Edit Route Screens

Press the MAP button. The confirmation screen will appear.

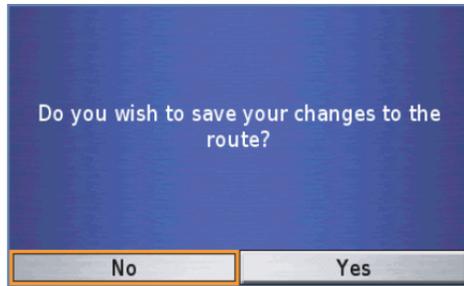

Highlight *Yes*, and press ENT. A map screen will appear and the message banner will show “Calculating” plus a percentage indicating the progress of the calculation.



Upon completion of the calculation, you will see your route map.



Weather/Traffic Information Screen

Weather Information Screen

When you select *Weather* on the *Main Menu*, the following screen will be displayed.




Highlight *Map* and press ENT to review the weather information on the map.

NOTE:

- To use this feature, you may need to subscribe to XM NavTraffic/ NavWeather services. See page 159.
- XM service only available in the 48 contiguous United States.
- For information about other options (Other City and Forecast), see page 127.

The system shows you four weather maps, such as *Current Conditions*, *Road Conditions*, *Winds*, and *Weather Bulletins*. To switch weather maps, highlight *Previous* or *Next* and press ENT. The screen shown below is just an example.

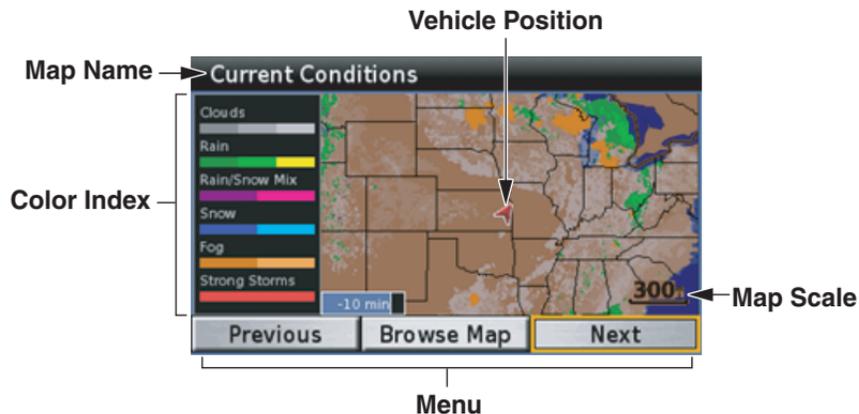

Weather/Traffic Information Screen


The following options are available from the weather information screen.

<i>Previous</i>	to show the previous weather map.
<i>Browse Map</i>	to show the full map. You can scroll the map using four directional arrow buttons and zoom in or out on the map screen.
<i>Next</i>	to show the next weather map.

NOTE:

- You cannot select a destination on the *Browse Map* screen for weather information.
- You can also see the weather information map on the *Traffic/Weather Review* screen. For information about the *Traffic/Weather Review* screen, see page 79.

If your XM subscription is Basic Weather, the system will display the weather icons instead of graphical “radar” depictions on the *Current Conditions* map.

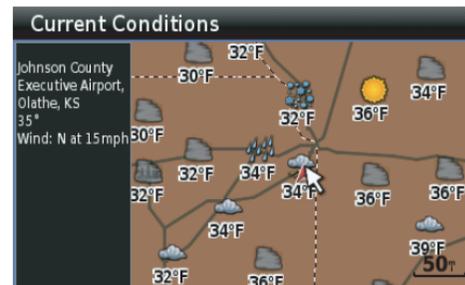


Weather/Traffic Information Screen

Traffic Information Screen

The navigation system can display up-to-the minute traffic information when available. The screen shown below is just an example.

NOTE:

- To use this feature, you may need to subscribe to XM NavTraffic/NavWeather services. See page 159.
- XM service only available in the 48 contiguous United States.



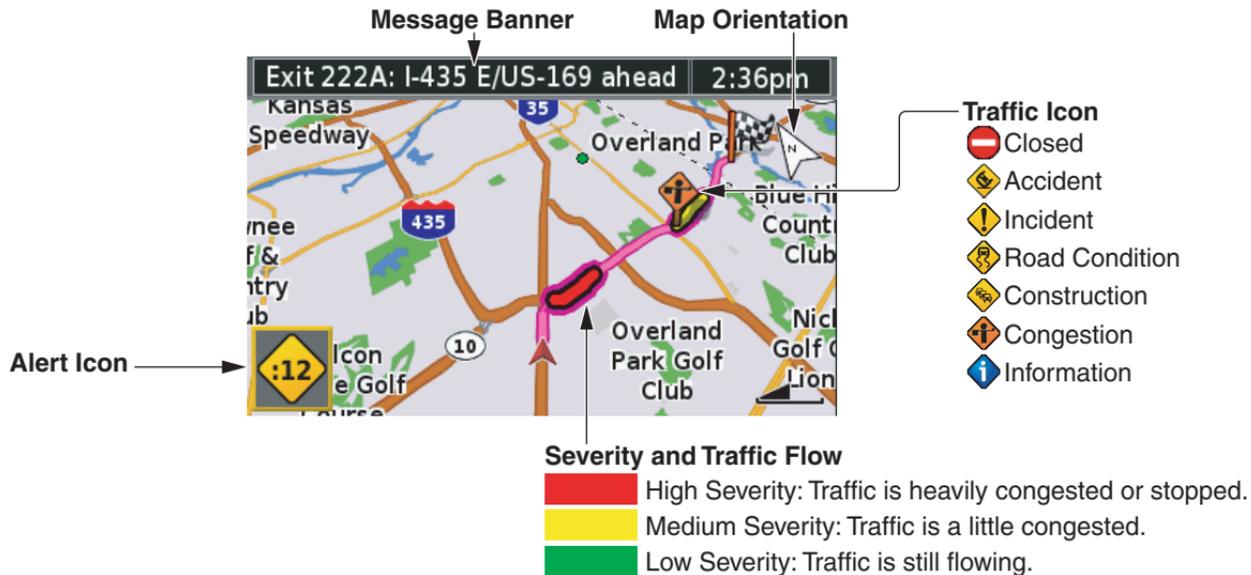


Traffic/Weather Review Screen

When you push in and hold the VOICE/GUIDE button on the left handlebar controls, the *Traffic/Weather Review* screen will be displayed. The *Traffic/Weather Review* screen can display one of five different screens. Move the ZOOM IN/OUT toggle to the right or left and hold it to switch the review screens. To return to the navigation map screen, push in and hold the VOICE/GUIDE button or press the MAP or DISP button.

NOTE:

- To use this feature, you may need to subscribe to XM NavTraffic/NavWeather services. See page 159.
- XM service only available in the 48 contiguous United States.

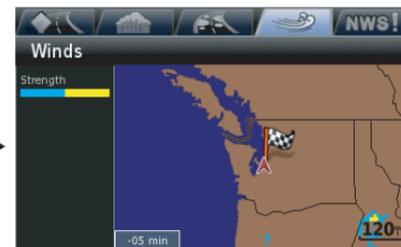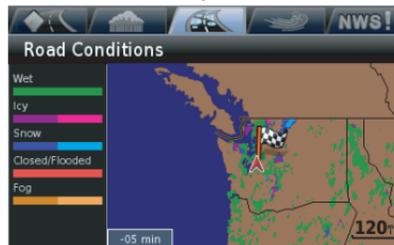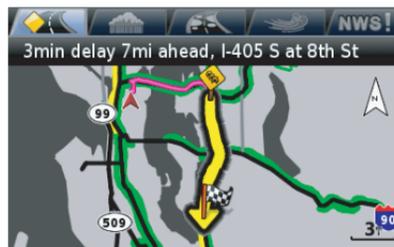

Return to the first screen.


Find Destination

Find Destination	82
By Favorite.....	83
Finding Nearest.....	83
Finding by Name.....	86
By Previous Find	88
By Point of Interest	90
Category/Subcategory.....	90
Point of Interest – Categories & Subcategories	91
Finding Nearest.....	92
Finding by Name.....	93
By Address	95
By Intersection.....	98
By City.....	101
By Exit.....	102
Finding Nearest Exits.....	102
Selecting Exit Road.....	103


Find Destination

This section explains the seven methods you may use to find a destination.

On the *Main Menu*, highlight *Find Destination*.

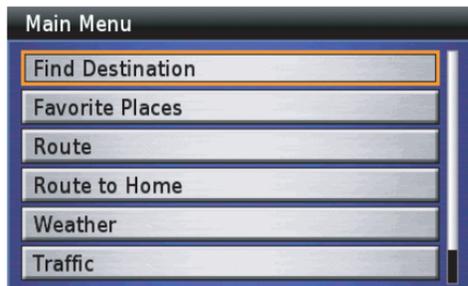

Press ENT. The *Find Destination* menu appears.

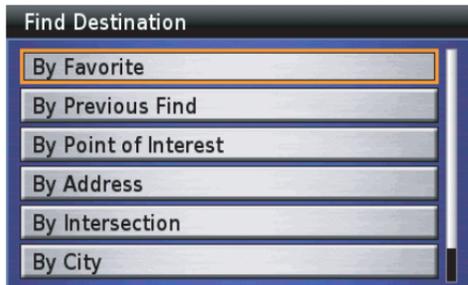

The following options are available from the *Find Destination* menu.

<i>By Favorite</i>	To select from up to 2,000 favorite locations you have saved in the system.
<i>By Previous Find</i>	To select from your previous 30 finds.
<i>By Point of Interest (POI)</i>	To select from points of interest loaded in the OEM database. (You may not add to the database.)
<i>By Address</i>	To route to a known address.
<i>By Intersection</i>	To find a location when you do not know the street address, but do know the intersection.
<i>By City</i>	To find a known city or town.
<i>By Exit</i>	To locate the nearest highway exits or exits on a highway you choose.

NOTE:

If you have no favorites or previous finds in the system, the “By Favorite” or “By Previous Find” choices will be grayed out.

The *By Favorite* option gives you two ways to find a favorite place you have already entered in the system.

On the *Find Destination* menu, highlight *By Favorite* and press ENT. The following screen appears.



NOTE:
For procedures on storing favorite places, see page 107.

Finding Nearest

You will see the *Near Here* option at the top of the screen. The default *Near Here* includes the favorite places near your current location. You may change the list by selecting one of the other five options. To do that, highlight *Near Here* and press ENT.



NOTE:
If you do not have a route in the system, the “Near Current Route” and “Near Destination” options will be grayed out.

Finding Near Here

The favorite places near your current location will appear in the list. With *Near Here* highlighted, press ENT.



The screen will display the name of the nearest favorites you have entered in the system. Highlight your choice and press ENT. A *Point Review Screen* appears.

By Favorite

Finding Near Other City

The favorite places near the city you select will appear in the list. Highlight *Near Other City* and press ENT.

Enter City

<input type="text"/>	←	→							
0	1	2	3	4	5	6	7	8	9
A	B	C	D	E	F	G	H	I	J
K	L	M	N	O	P	Q	R	S	T
Shift	U	V	W	X	Y	Z	Space		
Delete	A B C	? & % ...	Done						

Type in the name of the desired city.

NOTE:

For information about the keyboard screen, see page 64.

After typing, highlight *Done* and press ENT.

Select City

Chicago, IL	242	↑ ↓
Chicago Heights, IL	232	↑ ↓
Chicago Park, CA	1983	↑ ↓
Chicago Ridge, IL	244	↑ ↓

Highlight your choice and press ENT.

Find By Favorite

Near Chicago	Spell	
Community Center	141	↑
Lakefield Airport	186	↑
Virginia Theater	215	↑
003	215	↑
Honda Rider Educatin	217	↑

Next, highlight your specific destination and press ENT. A *Point Review Screen* appears.

Finding Near Current Route

The favorite places near the current route will appear in the list. Highlight *Near Current Route* and press ENT.

Find By Favorite

Near Current Route	Spell	
Home	0.0	↑ ↓
Honda North America	0.3	↑ ↓
001	7.2	↑
Fashion Bug	9.1	↑

Highlight your choice and press ENT. A *Point Review Screen* appears.

Finding Near Current Road


The favorite places near the current road will appear in the list. Highlight *Near Current Road* and press ENT.




Highlight your choice and press ENT. A *Point Review Screen* appears.

Finding Near Previous Find

The favorite places near the previous find you select will appear in the list. Highlight *Near Previous Find* and press ENT.

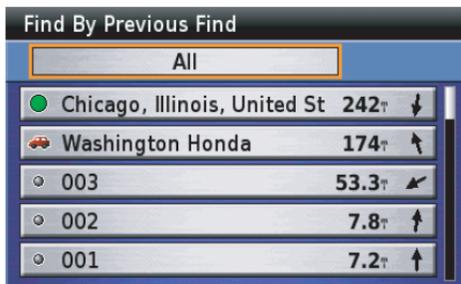


Highlight your choice and press ENT.

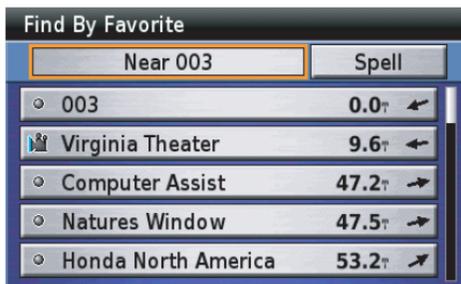

Next, highlight your specific destination and press ENT. A *Point Review Screen* appears.

Finding Near Destination


The favorite places near the destination will appear in the list. Highlight *Near Destination* and press ENT.

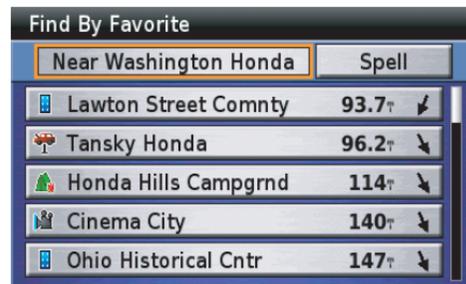

Highlight your choice and press ENT. A *Point Review Screen* appears.

(cont'd)


By Favorite

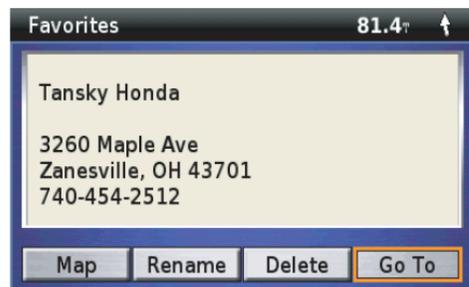

NOTE:

For more information about the Point Review Screen, see page 68.

With *Go To* highlighted, press ENT. A *Route Calculate Screen* appears.

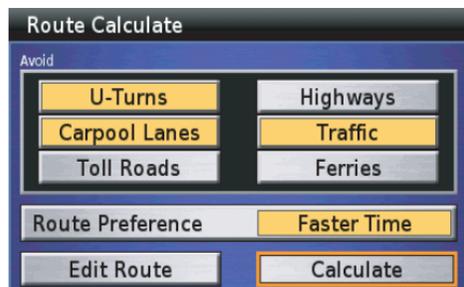


NOTE:

For more information about the Route Calculate Screen, see page 71.

With *Calculate* highlighted, press ENT. The system calculates the route to the destination and starts the voice and route guidance.

Finding by Name

This search option allows you to select your favorite place by name. Highlight *Spell* and press ENT.

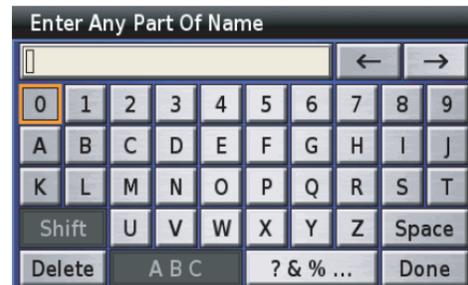


Type in the name of the desired favorite.


NOTE:

For more information about the keyboard screen, see page 64.

After typing, highlight *Done* and press ENT.

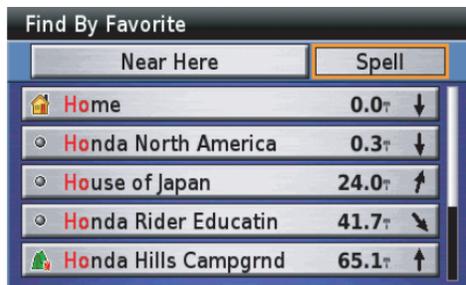


Highlight your choice and press ENT.
A *Point Review Screen* appears.

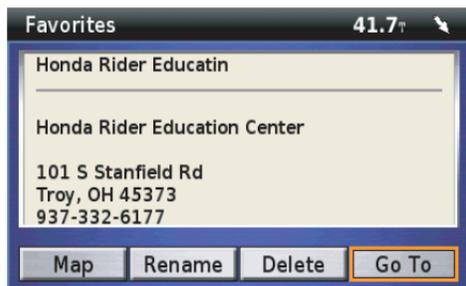

NOTE:
For more information about the *Point Review Screen*, see page 68.

With *Go To* highlighted, press ENT.
A *Route Calculate Screen* appears.

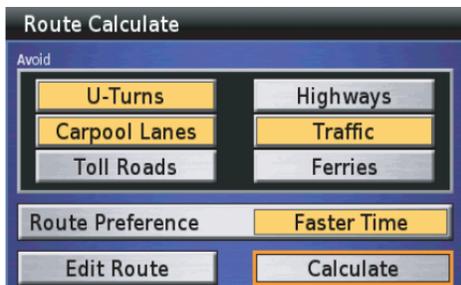


NOTE:
For more information about the *Route Calculate Screen*, see page 71.

With *Calculate* highlighted, press ENT.
The system calculates the route to the destination and starts the voice and route guidance.


By Previous Find

The *By Previous Find* option displays your 30 previous finds (including those that may have been designated as *Favorite Places*).


On the *Find Destination* menu, highlight *By Previous Find* and press ENT. The following screen appears.

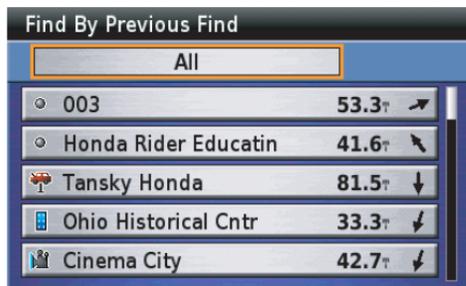


You will see the *All* category at the top of the screen. The default *All* includes all previous finds. You may reduce the list by selecting one of the other four categories. To do that, highlight *All* and press ENT.

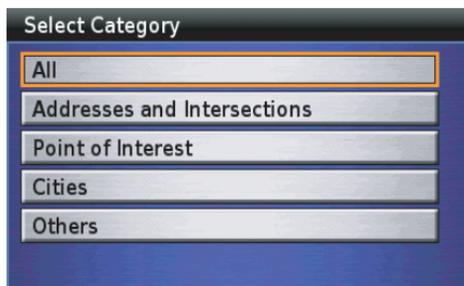

Highlight your desired category and press ENT.

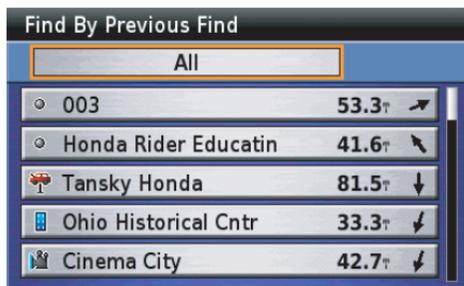


The screen will show the list for the category you selected. Highlight your choice and press ENT. A *Point Review Screen* appears.

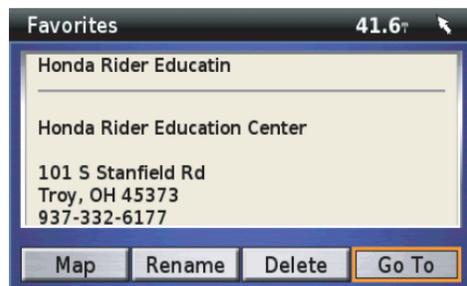

NOTE:
For more information about the *Point Review Screen*, see page 68.

With *Go To* highlighted, press ENT.
A *Route Calculate Screen* appears.

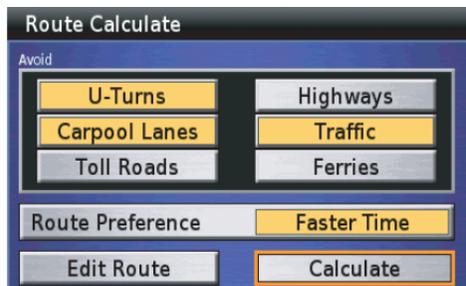

NOTE:


For more information about the Route Calculate Screen, see page 71.

With *Calculate* highlighted, press ENT.
The system calculates the route to the destination and starts the voice and route guidance.

By Point of Interest


The *By Point of Interest* option displays *Points of Interest* loaded in the data system. (You may not add locations to the database.)

On the *Find Destination* menu, highlight *By Point of Interest* and press ENT. The screen will show the category list.

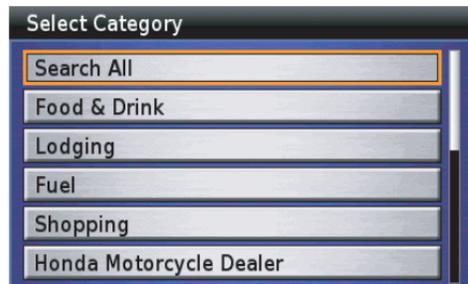

Category/Subcategory


There are 14 categories for *Point of Interest*. You may refine your search to a specific category and then to a sub-category of that selection.

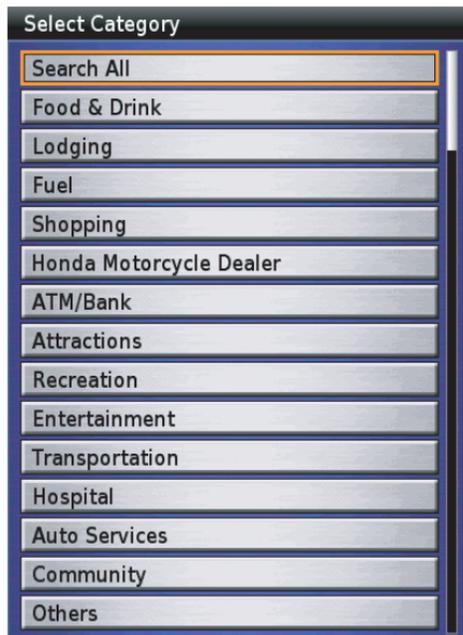

Highlight your choice (example: *Auto Services*) and press ENT.



There are nine sub-categories for *Auto Services*. Scroll down the menu. Highlight your sub-category choice and press ENT.

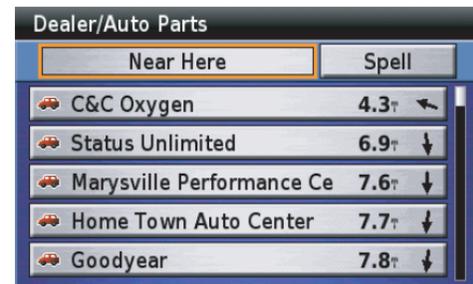

The screen will offer the *Near* and *Spell* options for searching the selected sub-category.

Point of Interest – Categories & Subcategories

Food & Drink

All Categories
 American
 Asian
 Barbecue
 Chinese
 Deli/Bakery
 International
 Fast Food
 Italian
 Spanish/Mexican
 Seafood
 Steak/Grill
 Cafe/Diner
 French
 German
 British Isles
 Specialty Food Products

Lodging

All Categories
 Hotel/Motel
 Bed & Breakfast Inn
 Campground/RV Park

Fuel

All Categories
 Convenience
 Auto Fuel
 Truck Stop

Shopping

All Categories
 Department
 Grocery
 General Merchandise
 Shopping Center
 Pharmacy/Chemist
 Convenience
 Apparel
 House and Garden
 Home Furnishings
 Specialty Retail
 Computer/Software

Honda Motorcycle Dealer

ATM/Bank

Attractions

All Categories
 Amusement/Theme Park
 Museum/Historical
 Landmark
 Park/Garden
 Arena/Track
 Hall/Auditorium
 Winery

Recreation

All Categories
 Golf Course
 Skiing Center/Resort
 Bowling Center
 Sports/Fitness Center
 Amusement/Theme Park
 Park/Garden
 Arena/Track

Entertainment

All Categories
 Live Theater
 Bar/Nightclub
 Movie Theater
 Casino

Transportation

All Categories
 Auto Rental
 Air Transportation
 Ground Transportation
 Transit Service

Hospital

Auto Services

All Categories
 Auto Rental
 Auto Repair
 Dealer/Auto Parts
 Wrecker Service
 Parking
 Rest Area/Tourist Info
 Automobile Club
 Car Wash
 Truck Stop

(cont'd)

By Point of Interest

Community

All Categories
Library
School
Place of Worship
Police Station
City Hall
Court House
Community Center
Border Crossing
Government Office
Fire Department
Post Office
Bank/ATM
Utility

Others

All Categories
Marina/Repair & Storage
Garmin Dealer
Personal Service
Business Service
Communications
Repair Service
Social Service

Finding Nearest


With *Near Here* highlighted, press ENT.



Highlight your desired search option and press ENT.

NOTE:

- If you do not have a route in the system, the “Near Current Route” and “Near Destination” options will be grayed out.
- For more information about the *Near* search option, see page 83.

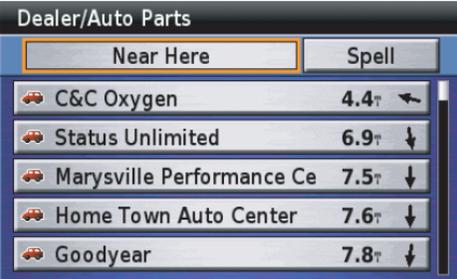

NOTE:


If the system database does not find any POI within 200 miles, the pop-up says: “None Found.” Select another search option or press the **BACK** button to return to the Point of Interest screen.

With your choice highlighted, press ENT. A *Point Review Screen* appears.



NOTE:
For more information about the *Point Review Screen*, see page 68.

With *Go To* highlighted, press ENT. A *Route Calculate Screen* appears.

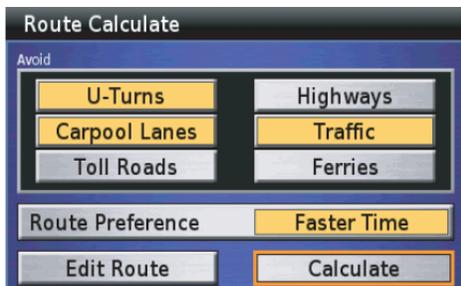


NOTE:
For more information about the *Route Calculate Screen*, see page 71.

With *Calculate* highlighted, press ENT. The system calculates the route to the destination and starts the voice and route guidance.

Finding by Name

With *Spell* highlighted, press ENT.

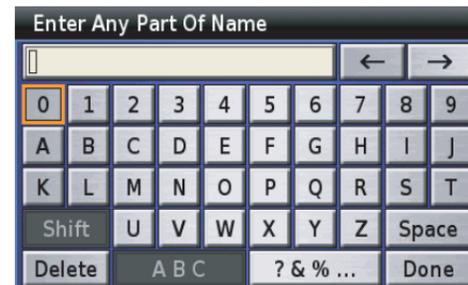


Use the keyboard to type the name.

NOTE:
For more information about the *keyboard screen*, see page 64.


After typing, highlight *Done* and press ENT.

(cont'd)

By Point of Interest

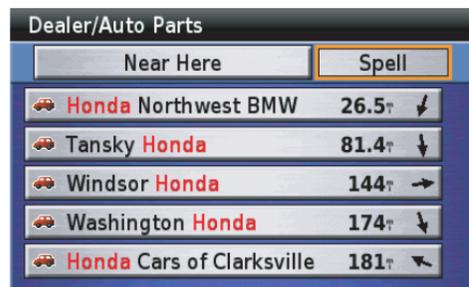


Highlight your choice and press ENT.
A *Point Review Screen* appears.

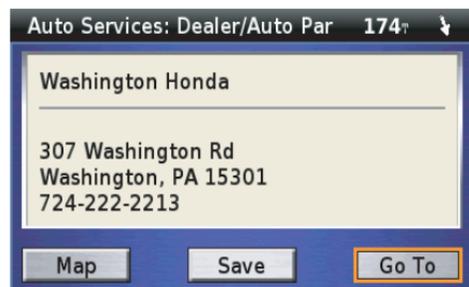

NOTE:

For more information about the *Point Review Screen*, see page 68.

With *Go To* highlighted, press ENT.
A *Route Calculate Screen* appears.

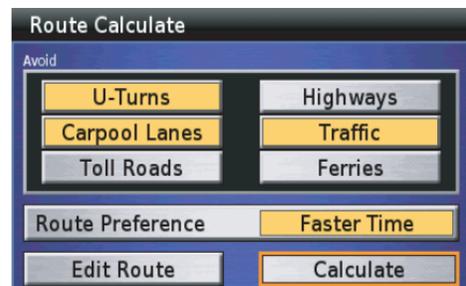


NOTE:

For more information about the *Route Calculate Screen*, see page 71.

With *Calculate* highlighted, press ENT.
The system calculates the route to the destination and starts the voice and route guidance.

The *By Address* option lets you put an address into the system so you may route to it.

On the *Find Destination* menu, highlight *By Address* and press ENT. The following screen appears.

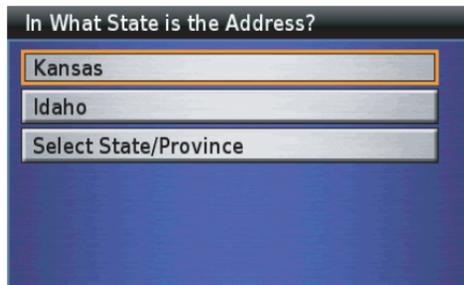


The system shows your current state, recently selected state. If you use the *Select State/Province* option, you can search for an address in another state. Highlight your choice and press ENT.

If you choose the *Select State/Province* option, the keyboard screen will appear. Type the name of state/province. After typing, highlight *Done* and press ENT. The *Select State/Province* screen will appear. Highlight your desired state/province and press ENT.

NOTE:


For information about the keyboard screen, see page 64.

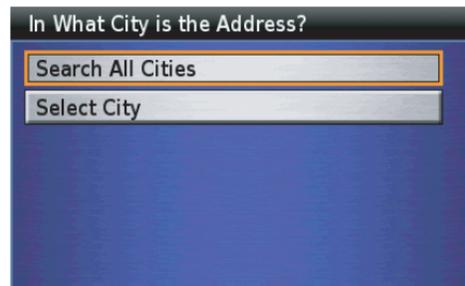

Highlight *Search All Cities* and press ENT.

NOTE:

The Select City option will narrow your search. If you use this option, you will need to type the city name you want on the keyboard screen.

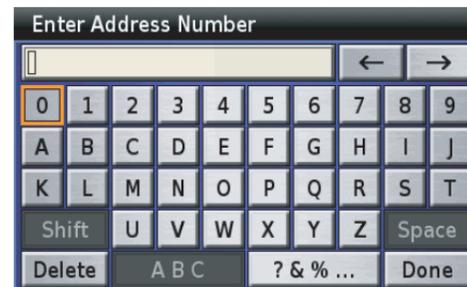

Use the keyboard to type in the number.

NOTE:

For more information about the keyboard screen, see page 64.

After typing, highlight *Done* and press ENT.

(cont'd)


By Address



Type in the Street. After typing, highlight *Done* and press ENT.



Highlight your choice and press ENT.

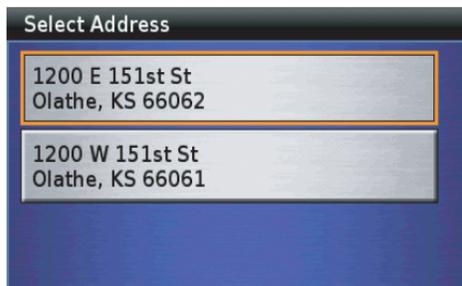

NOTE:

If the system database does not find the address you are looking for, the pop-up says: "None Found." Press the BACK button to return to the Find Address screen.


Highlight the address you want and press ENT. A *Point Review Screen* appears.



NOTE:

For more information about the Point Review Screen, see page 68.

With *Go To* highlighted, press ENT.
A *Route Calculate Screen* appears.

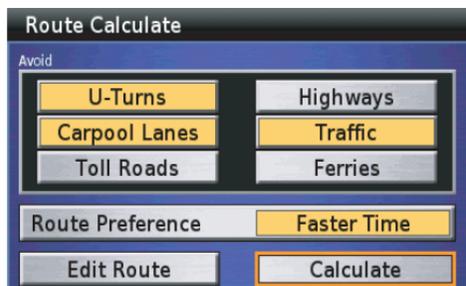

NOTE:


For more information about the Route Calculate Screen, see page 71.

With *Calculate* highlighted, press ENT.
The system calculates the route to the destination and starts the voice and route guidance.

By Intersection

You may know an intersection, but not know the street address (example: Main and E Vine St). This option lets you locate the intersection.


On the *Find Destination* menu, highlight *By Intersection* and press ENT. The following screen appears.

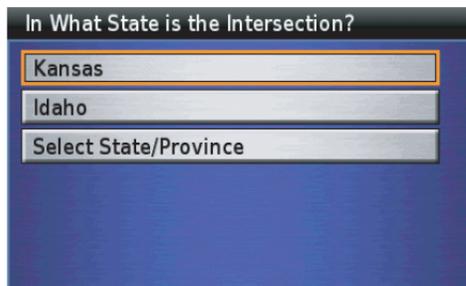

The system shows your current state, recently selected state. If you use the *Select State/Province* option, you can search for an address in another state. Highlight your choice and press ENT.

If you choose the *Select State/Province* option, the keyboard screen will appear. Type the name of state/province. After typing, highlight *Done* and press ENT. The *Select State/Province* screen will appear. Highlight your desired state/province and press ENT.

NOTE:
For information about the keyboard screen, see page 64.

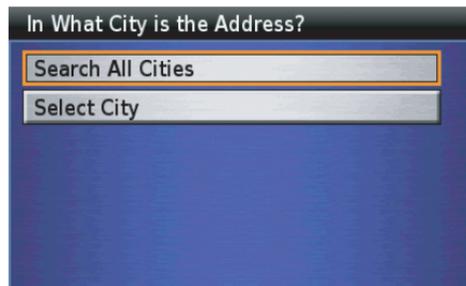

Highlight *Search All Cities* and press ENT.

NOTE:
The *Select City* option will narrow your search. If you use this option, you will need to type the city name you want on the keyboard screen.



Use the keyboard to type the first street name. After typing, highlight *Done* and press ENT.


NOTE:
For more information about the keyboard screen, see page 64.




Highlight your choice and press ENT.



Repeat the keyboard process for the *Second Street*.

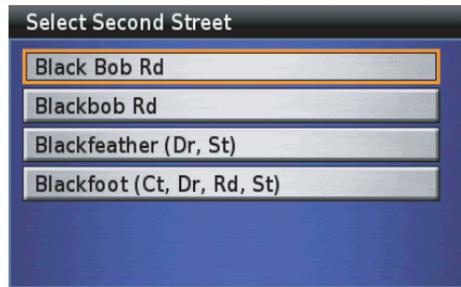


With your choice highlighted, press ENT.

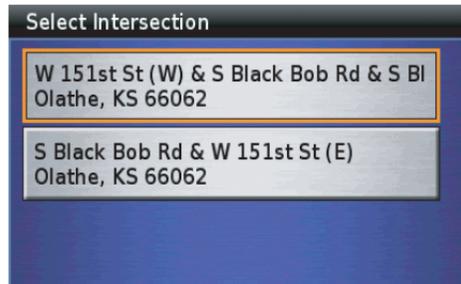

NOTE:
If the system database does not find the intersection you are looking for, the pop-up says: "None Found." Press the BACK button to return to the Find Intersection screen.

If you find the intersection you want, highlight it and press ENT. A *Point Review Screen* appears.

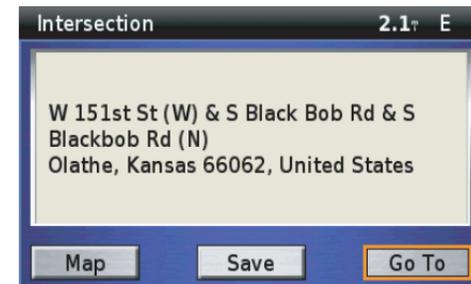


NOTE:
For more information about the Point Review Screen, see page 68.

(cont'd)

By Intersection

With *Go To* highlighted, press ENT.
A *Route Calculate Screen* appears.

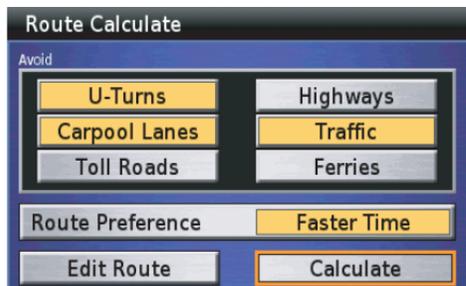


NOTE:

For more information about the Route Calculate Screen, see page 71.


With *Calculate* highlighted, press ENT.
The system calculates the route to the destination and starts the voice and route guidance.

You can locate a city as your destination. On the *Find Destination* menu, highlight *By City* and press ENT. The following screen appears.

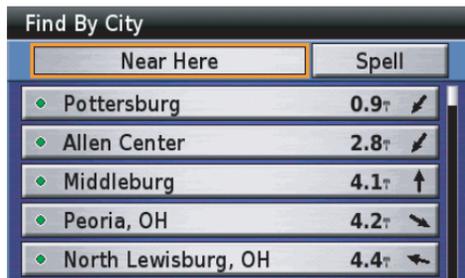


To find a closest city to your current location, current road, destination, etc., select *Near Here* and see page 83. To find a city by its name, select *Spell* and see page 93.

Highlight your desired city and press ENT. A *Point Review Screen* appears.

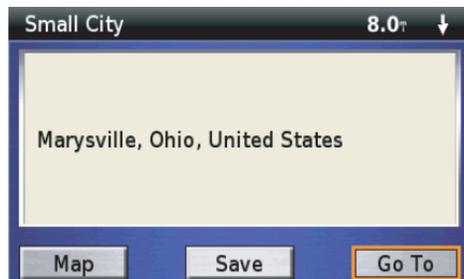

NOTE:
For information about the *Point Review Screen*, see page 68.

With *Go To* highlighted, press ENT. A *Route Calculate Screen* appears.

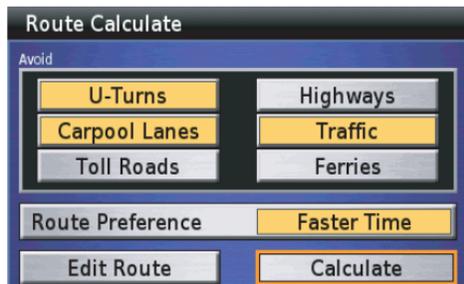

NOTE:
For information about the *Route Calculate* screen, see page 71.

With *Calculate* highlighted, press ENT. The system calculates the route to the destination and starts the voice and route guidance.

By Exit

Use the *By Exit* option to locate the nearest highway exits or exits on a highway you choose.

On the *Find Destination* menu, highlight *By Exit* and press ENT. The following screen appears.



Finding Nearest Exits


You will see the *All Categories On* option at the top of the screen. The default *All Categories On* includes the all exits of the closest road from your current location. You may change the list by selecting one of the other three categories. To do that, highlight *All Categories On* and press ENT.



Highlight your choice and press ENT.




Highlight your choice and press ENT. A *Point Review Screen* appears.

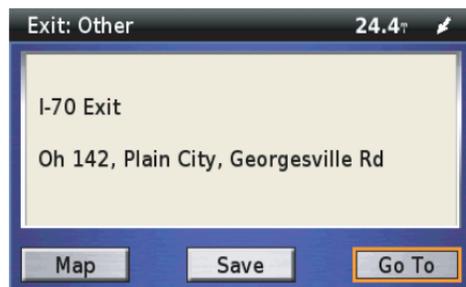

The *Point Review Screen* shows the exit on its map and offers menu routing choices.

NOTE:
For more information about the *Point Review Screen*, see page 68.

With *Go To* highlighted, press ENT.
A *Route Calculate Screen* appears.

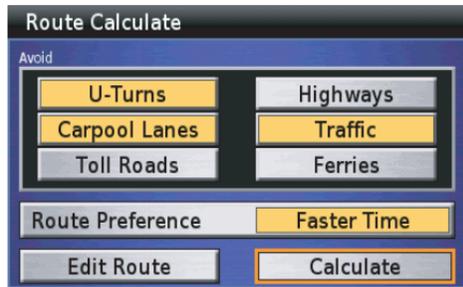

NOTE:
For more information about the *Route Calculate Screen*, see page 71.

With *Calculate* highlighted, press ENT.
The system calculates the route to the destination and starts the voice and route guidance.

Selecting Exit Road

Highlight the exit road box at the upper-right corner of the *Find By Exit* screen and press ENT.




Use the keyboard to type in the number of the exit road. For example, 88 (for Interstate 88).

NOTE:
For more information about the *keyboard screen*, see page 64.


(cont'd)

By Exit

After typing, highlight *Done* and press ENT.

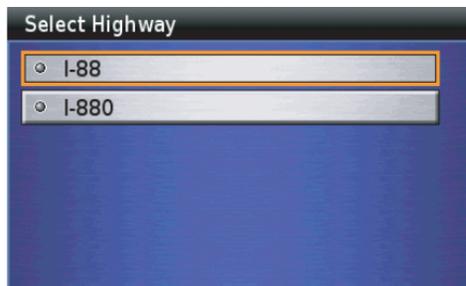

Highlight your choice and press ENT.

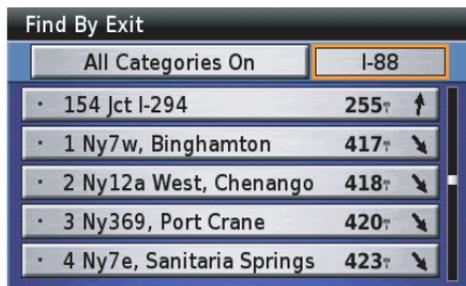


Highlight your choice and press ENT.

NOTE:

- *The system will narrow your search when you select the exit category. For information about the exit category, see page 102.*
- *If the system database does not find the match, the pop-up says: “None Found.” Select another category or press the BACK button to return to the Find Exits screen.*

Highlight your choice and press ENT. A *Point Review Screen* appears.

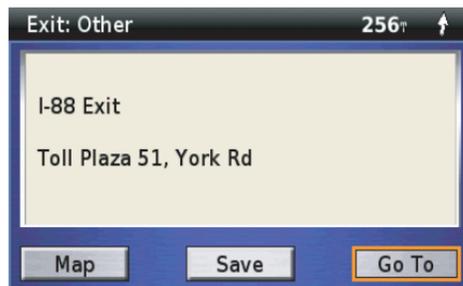


The *Point Review Screen* shows the exit on its map and offers menu routing choices.

NOTE:

For more information about the Point Review Screen, see page 68.

With *Go To* highlighted, press ENT. A *Route Calculate Screen* appears.

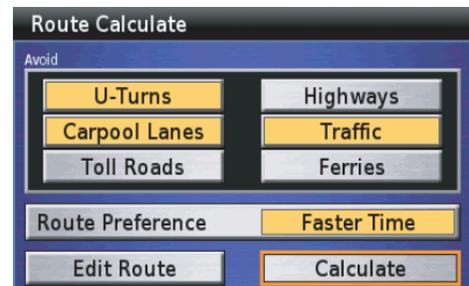

NOTE:

For more information about the Route Calculate Screen, see page 71.

With *Calculate* highlighted, press ENT. The system calculates the route to the destination and starts the voice and route guidance.

Favorite Places

Favorite Places.....	106
Storing Favorite Places	107
Renaming Favorite Places.....	108
Deleting Favorite Places	109


Favorite Places

The *Favorite Places* option allows you to designate your current location as a favorite place for future navigation or to select a stored favorite from the system.

On the *Main Menu*, highlight *Favorite Places*.



Press ENT.

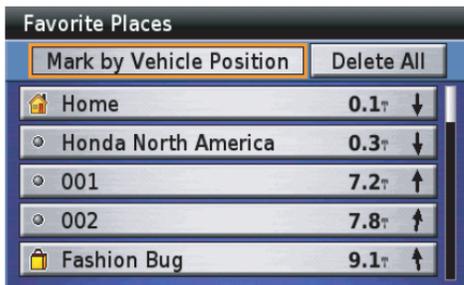

The following options are available from the *Favorite Places* screen.

<i>Mark by Vehicle Position</i>	To add your current location to your favorites list.
<i>Delete All</i>	To remove all locations from your saved favorites.

NOTE:


If you have saved a "Home" location, it will appear in the "Favorite Places" list even if you have not saved any "Favorite Places."

Storing Favorite Places

The *Favorite Places* screen offers the *Mark by Vehicle Position* option to store favorite locations.

Mark by Vehicle Position


On the *Favorite Places* screen, highlight *Mark by Vehicle Position* and press ENT. The *Point Review Screen* then appears.

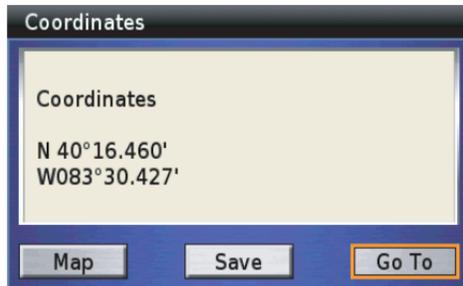

NOTE:

For more information about the Point Review Screen, see page 68.

Highlight *Save* and press ENT.

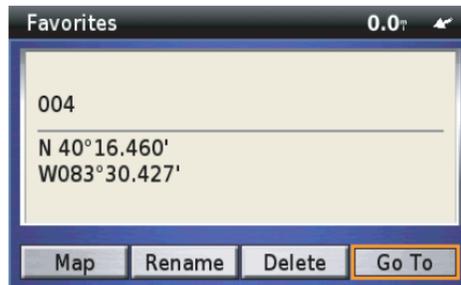

The screen will assign an ID number to your selection and offer several options. The current vehicle position is saved in the system.

Mark by Cursor Position

Follow steps 1 to 3 on page 54 to move a cursor to the location you want to save. Press ENT. A *Point Review Screen* then appears.



The screen will assign an ID number to your selection and offer several options. Highlight *Save* and press ENT. The current cursor position is saved in the system.


NOTE:

For more information about the Point Review Screen, see page 68.

Favorite Places

Renaming Favorite Places

On the *Favorite Places* screen, highlight the location you want to rename and press ENT. A *Point Review Screen* appears.

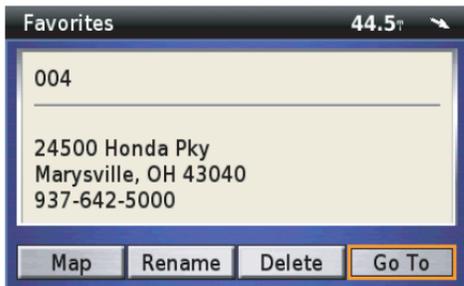

NOTE:

For more information about the *Point Review Screen*, see page 68.

Highlight *Rename* and press ENT.




Use the keyboard to type in the name you selected for the new favorite place.

NOTE:

For more information about the keyboard screen, see page 64.




After typing, highlight *Done* and press ENT.

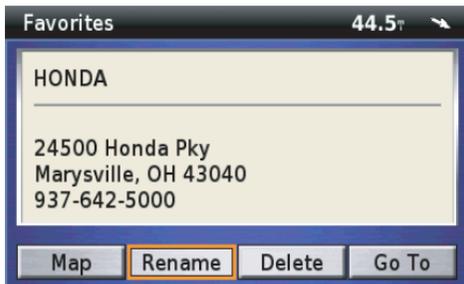

Press the BACK button to return to the *Favorite Places* screen.

Deleting Favorite Places

On the *Favorite Places* screen, highlight the location you want to delete and press ENT. A *Point Review Screen* appears.

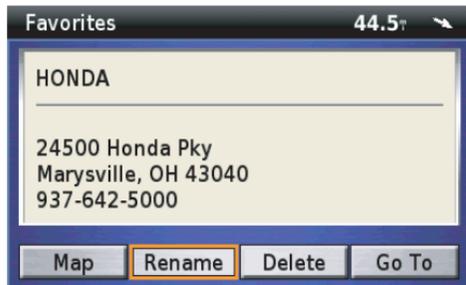

NOTE:

For more information about the *Point Review Screen*, see page 68.

Highlight *Delete* and press ENT.



The screen asks you to confirm your selection. Highlight *Yes* and press ENT.

The display returns to the *Favorite Places* screen with your selection deleted.

To delete all *Favorite Places* from the list, highlight *Delete All*. Press ENT to execute the deletion.

Route	112
Route to New Destination	114
Edit Route	116
Adding a Location as a Via.....	117
Adding a Road as a Via	119
Recalculate Route.....	115
Detour.....	121

Route

To access the *Route* menu, highlight *Route* on the *Main Menu*.



Press ENT. The first time you select the *Route* option, or any time you do not have a route in the system, you will see the following screen.



Use *Route to New Destination* to create a route to a destination. Anytime you have a route entered in the system, you will see the following screen.



NOTE:

- “*Detour*” will not appear on the menu if you go off route or do not have satellite reception.
- If the system calculates a route but does not have satellite reception, the voice guidance will not operate until reception is acquired.

The following options are available from the *Route* menu.


<i>Route to New Destination</i>	To create a route to a destination.
<i>Stop Route</i>	To suspend your current route for an intentional “detour” so you do not lose your current route or receive off-route messages. You may also use <i>Stop Route</i> if you reach the vicinity of your destination (example: large parking lot) but the route does not terminate. To return to your route, go to the <i>Main Menu</i> , select <i>Route</i> , and then <i>Resume Route</i> .
<i>Resume Route</i>	To resume your current route after stopping it. This function does not appear on the <i>Route</i> menu until after you use the <i>Stop Route</i> function.
<i>Recalculate Route</i>	To modify an existing route by picking a route preference (either faster time or shorter distance) and entering up to four “avoid” preferences.
<i>Edit Route</i>	To review your route and add (or delete) one or more locations en route to your destination.
<i>Detour</i>	To recalculate your route because of an unexpected detour of from ½ to 15 miles.

NOTE:

The “*Route to New Destination*” and “*Edit Route*” selections take you to the seven *Find Destination* functions. In this “*Route*” section of the manual, the instructions will refer you to the “*Find Destination*” step-by-step sequences.

Route to New Destination

On the *Route* menu, highlight *Route to New Destination* and press ENT. The following screen appears.

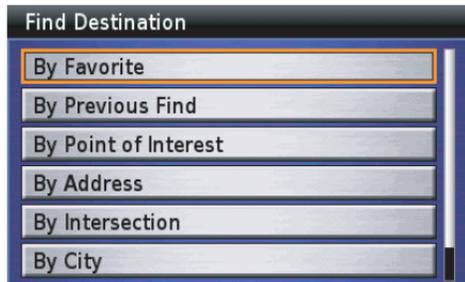


The *system* offers the seven *Find Destination* menu choices.

See *Find Destination* on page 81 for information about designating a location. A *Point Review Screen* will appear.



NOTE:
For more information about the *Point Review Screen*, see page 68.

With *Go To* highlighted, press ENT. A *Route Calculate Screen* appears.

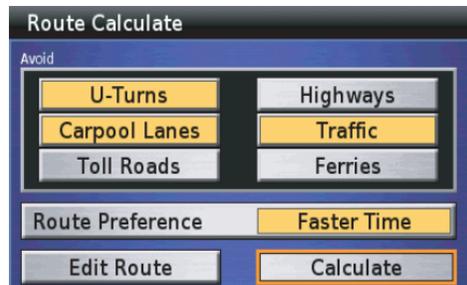


NOTE:
For more information about the *Route Calculate Screen*, see page 71.

With *Calculate* highlighted, press ENT. The system calculates the route to the destination and starts the voice and route guidance.

The *Recalculate Route* option lets you modify your current route to shorten the time or distance, as well as enter up to four “avoid” preferences.

On the *Route* menu, highlight *Recalculate Route* and press ENT. A *Route Calculate Screen* appears.

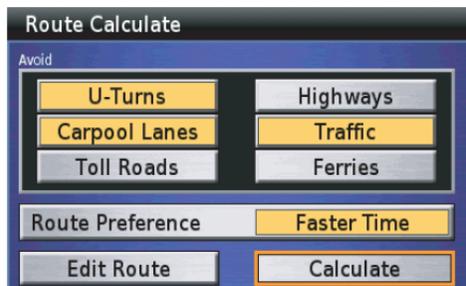

NOTE:
For more information about the *Route Calculate Screen*, see page 71.

After entering your preferences, highlight *Calculate* and press ENT. The system calculates the route to the destination and starts the voice and route guidance.


Edit Route

The *Edit Route* option on the *Route* menu lets you edit an existing route in the system to add (or delete) one or more locations on the way to your destination.

On the *Route* menu, highlight *Edit Route* and press ENT. The *Edit Route* screen appears, identifying the destination of your current route.



If you have already entered more than one destination into the system, the *Delete Stop* and *Sort Stops* options appear.

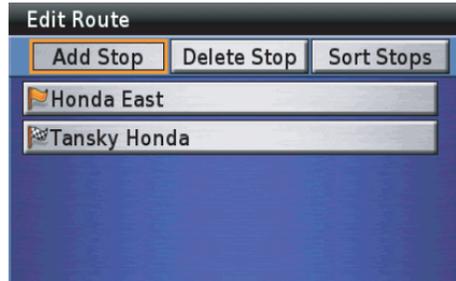

NOTE:


Selecting “Edit Route” in the Route menu initiates the same process as selecting “Edit Route” on the Route Calculate screen.

The following options are available from the *Edit Route* screen.

<i>Add Stop</i>	To add another location to the current route. With <i>Add Stop</i> highlighted, press ENT to bring up the <i>Add Stop (Find)</i> menu. See <i>Adding a Location as a Via</i> on this page.
<i>Delete Stop</i>	To remove a location from the current route. With <i>Delete Stop</i> highlighted, press ENT. Highlight the item to be deleted and press ENT. (This option appears after selecting <i>Add Stop</i> .)
<i>Sort Stops</i>	To rearrange the order of the locations on the <i>Edit Route</i> list. This includes switching a current via with the current destination. To sort, highlight the item to be repositioned. Press ENT. Use the up and down directional arrows to move the item up or down the list. (This option appears after selecting <i>Add Stop</i> .)

Adding a Location as a Via

On the *Edit Route* screen, highlight *Add Stop* and press ENT. The following screen appears.

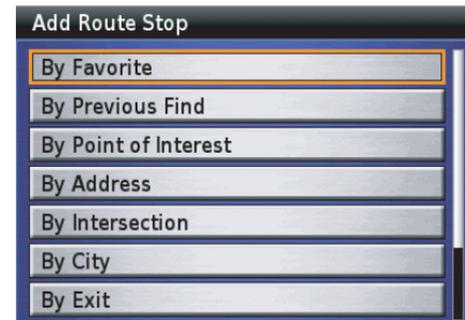

The *Add Route Stop* menu offers the seven *Find* menu selections.

(cont'd)

Edit Route


See *Find Destination* on page 81 for information about adding a location to the route. A *Point Review Screen* will appear.



NOTE:

For more information about the *Point Review Screen*, see page 68.

With *Select* highlighted, press ENT.

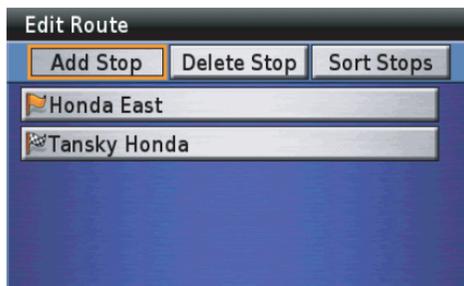


If you want to add another via stop, highlight *Add Stop*, press ENT, and repeat the procedure. The second added via stop will become your first stop on your route.

NOTE:

When you enter two or more via stops, add them in the reverse order of your travel plan (enter the final via before your destination first). Otherwise, use the "Sort" option to change the order of via stops.

Press the MAP button if you completed adding or removing a location from the current route and rearranging the order of the locations.

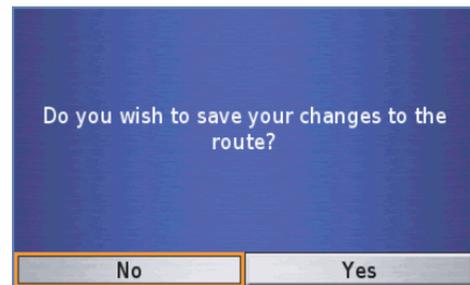

Highlight *Yes* and press ENT.

The system calculates the route to the destination(s) and starts the voice and route guidance.

Adding a Road as a Via

You may enter a section of a road (such as a scenic ride) as a via to your route by using the *White Arrow Point Locator* feature.


1. Position the white arrow where you want to end riding the road on the map screen.




NOTE:

For more information about the *White Arrow Point Locator*, see page 54.


2. Bring up the *Point Review Screen* by pressing ENT.

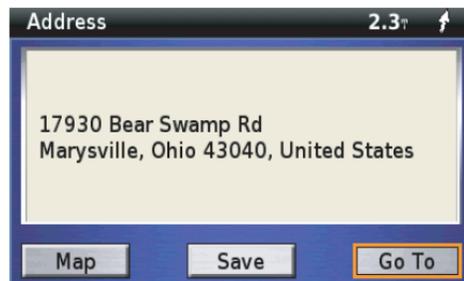

3. With *Go To* highlighted, press ENT.

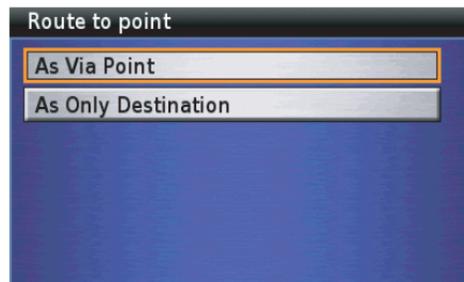

4. With *As Via Point* highlighted, press ENT.

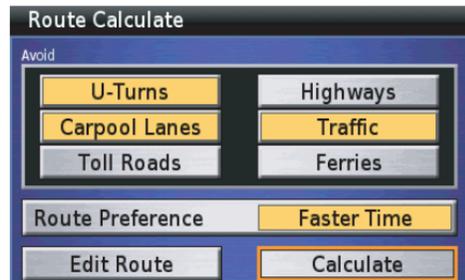


5. With *Calculate* highlighted, press ENT. The system recalculates the route to the destination and displays the map screen.
6. Position the white arrow point locator where you want to start your ride on the road and repeat the process to add it as a via.

It may be necessary to create additional points along the road to make sure the system does not route you off the selected road to calculate what it considers a more direct route.

(cont'd)

Edit Route

7. With *Go To* highlighted, press ENT.
8. With *As Via Point* highlighted, press ENT. A *Route Calculate Screen* appears.

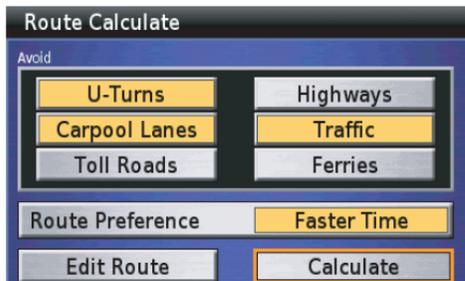


NOTE:

For more information about the Route Calculate Screen, see page 71.

With *Calculate* highlighted, press ENT. The system calculates the route to the destination and starts the voice and route guidance.

Detour

On the *Route* menu, highlight *Detour* and press ENT. The following screen appears.

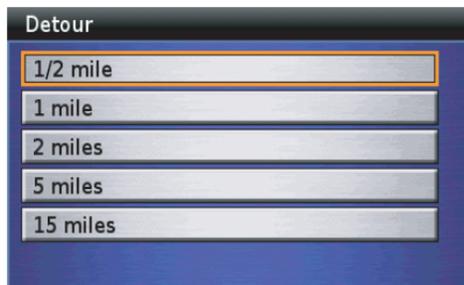

Highlight the distance you want to detour, and press ENT.

NOTE:

To cancel your entry, press the BACK button. The original route display returns.


The system calculates the route to the destination and starts the voice and route guidance.

Route to Home	124
Calculating a Route Home	125
Checking Your Home Location	125
Deleting Your Home Location.....	126

Route to Home


Once you store a *Home* location using *Set Home using Find Menu* (see page 154) or *Set Home using Vehicle Position* (see page 155), *Route to Home* offers a quick method to route there.

On the *Main Menu*, highlight *Route to Home*.

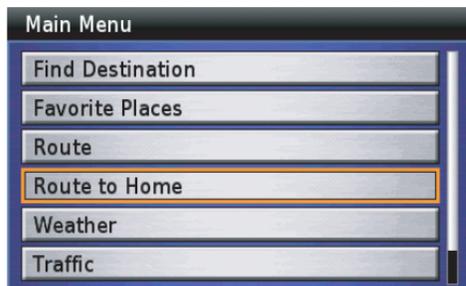

Press ENT.

If you have previously entered a *Home* location, a *Route Calculate Screen* appears.

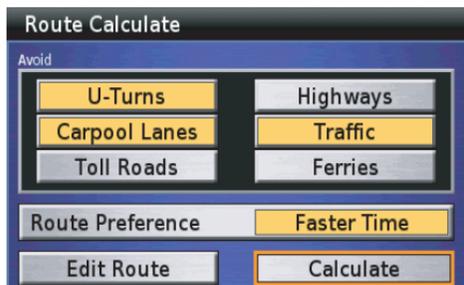

If there is no *Home* in the system, you will be directed to *Setup System 2* screen.




For storing a *Home* location, see *Set Home using Find Menu* on page 154 or *Set Home using Vehicle Position* on page 155.

NOTE:

Once you save a “Home” location, the map screen will display a “Home” icon for 120 miles or smaller map scale.

Calculating a Route Home


If you have already entered a *Home* location in the system, the screen will display a *Route Calculate* screen.

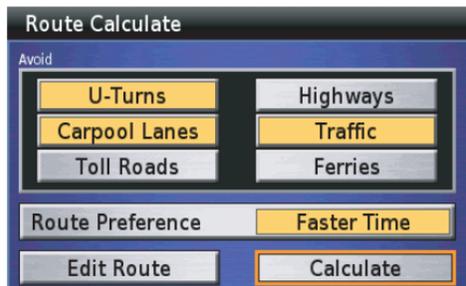


With *Calculate* highlighted, press ENT. The system calculates the route to the destination and starts the voice and route guidance.

Checking Your Home Location

If you forget what location you have designated as *Home*, go to the *Main Menu*, and with *Favorite Places* highlighted, press ENT.

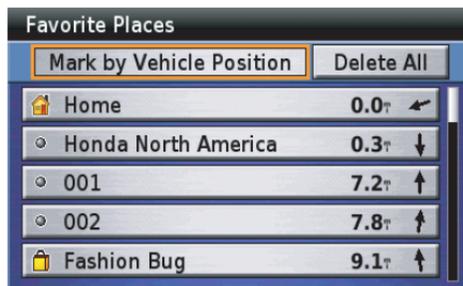

Home will appear in the *Favorite Places* list. To see the *Point Review Screen* for your *Home* selection, highlight *Home* and press ENT.

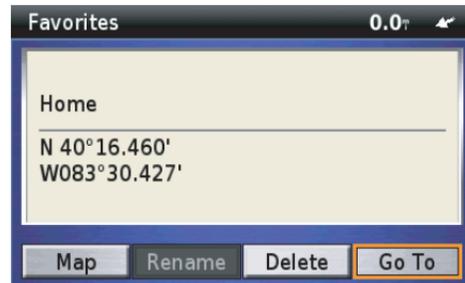


NOTE:

If you want to change your Home location, you may do so with the Find menu or by Vehicle Position. See page 154.

Route to Home

Deleting Your Home Location

On the *Favorite Places* screen, highlight *Home* and press ENT. A *Point Review Screen* appears.

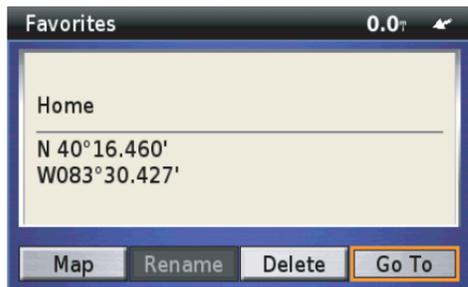

NOTE:

For information about the *Point Review Screen*, see page 68.

Highlight *Delete* and press ENT.



The screen asks you to confirm your selection. Highlight *Yes* and press ENT. The display returns to the *Favorite Places* screen with your *Home* deleted.

Weather	128
Viewing Weather Map.....	129
Viewing Weather for Other City.....	129
Viewing Weather Forecast.....	130

Weather

The *Weather* option allows you to review weather information, such as weather forecasts and four kinds of weather maps.

On the *Main Menu*, highlight *Weather*.



Press ENT.



The weather information for the current location will be displayed.

The following options are available from the weather information screen.


<i>Map</i>	to review four kinds of weather maps for the current location.
<i>Other City</i>	to select the city for which you want to get weather information.
<i>Forecast</i>	to review the weather forecast for the current location.

NOTE:

- *To use this feature, you may need to subscribe to XM NavTraffic/NavWeather services. See page 159.*
- *XM service only available in the 48 contiguous United States.*
- *You can also see the weather information map on the Traffic/Weather Review screen. For information about the Traffic/Weather Review screen, see page 79.*

Viewing Weather Map

On the weather information screen, highlight *Map* and press ENT. A *Current Conditions* map will be displayed.

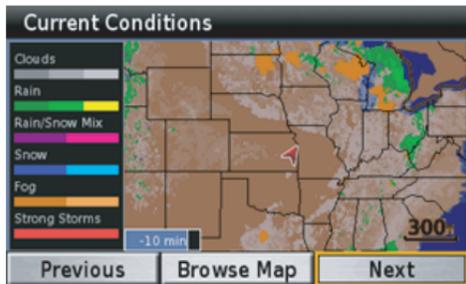

Highlight *Previous* or *Next* to switch other weather maps. Press the BACK button to return to the weather information screen.

NOTE:

For more information about viewing weather maps, see page 76.

Viewing Weather for Other City

On the weather information screen, highlight *Other City* and press ENT.




Use the keyboard to type the name of the city you want.

NOTE:

For information about the keyboard screen, see page 64.

After typing, highlight *Done* and press ENT.

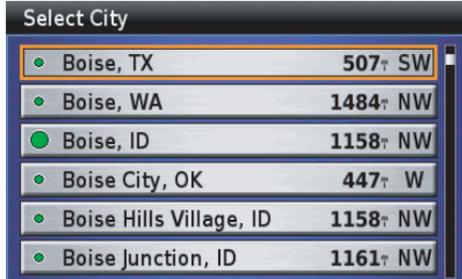

Highlight your choice and press ENT.



The weather information for the selected city will be displayed. Highlight *Map* or *Forecast* to review the weather map or the forecast for the selected city. Press the BACK button to return to the weather information screen.

Weather

Viewing Weather Forecast

On the weather information screen, highlight *Forecast* and press ENT.

Kansas City, MO: Nov 14			
Thursday	Thur. Night	Friday	Fri. Night
			
Clear	Clear	Partly Cloudy	Partly Cloudy
51°	31°	59°	38°
Precip: 5%	Precip: 5%	Precip: 5%	Precip: 5%


Press the BACK button to return to the weather information screen.

Traffic	132
Viewing Traffic on Full Map.....	133
Viewing Traffic by Road.....	133
Viewing Traffic on Current Route.....	134
Traffic Avoidance.....	135

Traffic

The *Traffic* option allows you to review traffic information, such as traffic flow and traffic incident, or to recalculate your current route to avoid the traffic incident.

On the *Main Menu*, highlight *Traffic*.

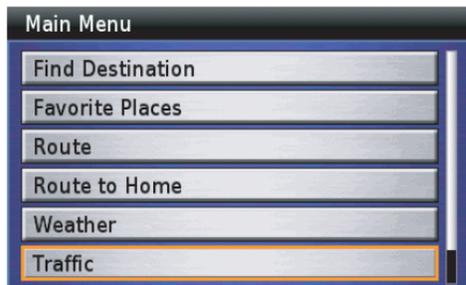

Press ENT.



The *Traffic* screen will be displayed.

The following options are available from the traffic information screen.


<i>Full Map</i>	to review all traffic incidents close to your current location.
<i>View By Road</i>	to review traffic incidents by selecting the road close to your current location.
<i>On Current Route</i>	to review traffic incidents along your current route, and to recalculate your current route to avoid the traffic incident.

NOTE:

- *To use this feature, you may need to subscribe to XM NavTraffic/NavWeather services. See page 159.*
- *XM service only available in the 48 contiguous United States.*
- *You can also see the traffic information map on the Traffic/Weather Review screen. For information about the Traffic/Weather Review screen, see page 79.*

Viewing Traffic on Full Map

On the *Traffic* screen, highlight *Full Map* and press ENT. The following screen will be displayed.

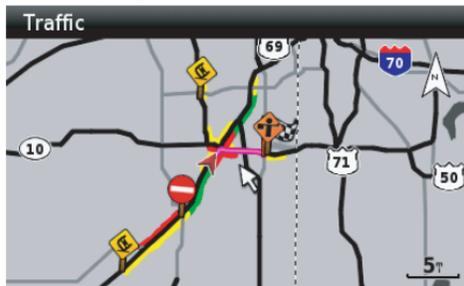

You can scroll the map using the four directional arrow buttons, and zoom in or out on the map.

NOTE:

For more information about viewing traffic map, see page 78.

Viewing Traffic by Road

On the *Traffic* screen, highlight *View By Road* and press ENT. The system will display the list of the roads near your current location




The color box (red, yellow, or green) to the left of the road name indicates the traffic event severity.

NOTE:

- When you select the “View By Road” option, traffic incidents other than traffic flow will be displayed.
- For more information about the traffic event severity, see page 78.

Highlight your choice and press ENT.

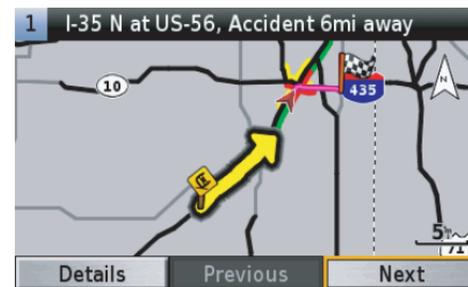

Highlight *Previous* or *Next* and press ENT to switch to another road screen.



(cont'd)

Traffic

Highlight *Details* and press ENT to review the detailed information for the selected road.



Press the BACK button to return to the previous screen.

Viewing Traffic on Current Route

On the *Traffic* screen, highlight *On Current Route* and press ENT.



To avoid all traffic incidents on your current route, highlight *Avoid All* and press ENT. The system will recalculate your current route.

When you select *View All*, the following screen will be displayed.



Highlight *Previous* or *Next* and press ENT to view traffic incidents. To avoid a traffic incident, highlight *Avoid* and press ENT. The system will recalculate your route avoiding the selected traffic incident.

Traffic Avoidance

Automatic Traffic Avoidance

The system periodically tries to find the best route available, taking in factors such as traffic speed, road speed, road closures and other traffic congestion. When updated traffic information is received and it affects the current route, the system will find a better route and avoid the traffic congestion.

Manual Traffic Avoidance


If you select *On Current Route* when a traffic incident is on your route, you can avoid traffic incidents manually. See *Viewing Traffic on Current Route* on page 134.

Setup / Info	138
Setup Screen 1	139
Setup Screen 1.....	139
Setup Screen 2	143
Setup Screen 2.....	143
Setup System 1	150
Setup System 1.....	150
Setup System 2	152
Setup System 2.....	152
Setup Voice	158
Info Screens	159
GPS Info.....	159
System Info	159
XM Info	159

Setup / Info



On the *Main Menu*, highlight *Setup / Info* and press the ENT button on the right fairing panel. The *Setup / Info* menu appears.

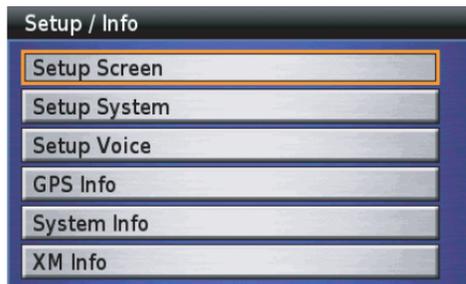


These options let you set up what will or will not appear on your screen as well as when and how it will look. There are three *Setup* categories for *Screen*, *System*, and *Voice* functions. Each function has a default setting from the factory. For a complete list, see *Factory Default Settings* on page 156. To change any default setting, highlight a category and press ENT. Use the right panel controls to highlight the option you want and press ENT. The field will turn yellow, indicating your choice is now operative. When you have completed your changes, press the BACK button. The screen will return to the *Setup / Info* menu.

The following items are available from the *Setup / Info* menu:

<i>Setup Screen</i>	To select how your screen will appear, including color, intensity, and map orientation, pop-ups, and other features.
<i>Setup System</i>	To select time elements, designate a home base for routing, and return all optional settings to the initial settings selected by the factory.
<i>Setup Voice</i>	To select the pre-recorded voice or text-to-speech (TTS) voice for the system's voice guidance.
<i>GPS Info</i>	To check your GPS status, display the time and date, see the coordinates of your current location and check the accuracy range of the GPS signal.
<i>System Info</i>	To check the software operating your system and the unit ID number and identify the maps used in the system.
<i>XM Info</i>	To check the software used in the system, available channels and data services, and your Radio ID.

Setup Screen 1

On the *Setup / Info* menu, highlight *Setup Screen* and press ENT. The *Setup Screen 1* appears.

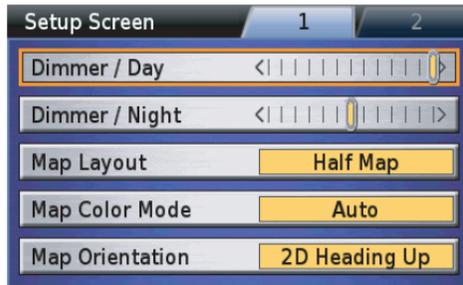

Dimmer / Day

For a dimmer daylight display, select a segment to the left. For a brighter display, select a segment to the right. The default setting for daylight is Full Brightness.

Dimmer / Night

For a dimmer night display, select a segment to the left. For a brighter night display, select a segment to the right. The default setting for night display is Half Brightness.

Map Layout

Move the highlight to the *Map Layout* field and press ENT. The *Map Layout* screen appears.



There are three map options:

- The *Full Map* fills the screen with no detail shown.
- The *Half Map* appears on half of the screen with two details related to time and distance as well as the next three route maneuvers.
- The *Wide Map* appears on three-quarters of the screen with three details related to time and distance.

NOTE:

For more information about map layouts, see page 46.

On the *Map Layout* screen, highlight your choice and press ENT. Your choice will appear in the *Map Layout* field on the *Setup Screen 1* screen.

Setup Screen 1

Map Orientation

Move the highlight to the *Map Orientation* field on the *Setup Screen 1*, and press ENT. The *Map Orientation* screen appears.




There are three options. The default is *2D Heading Up*.

Selecting 2D Heading Up

This option rotates the map so that the direction you are heading always points toward the top of the screen. An “N” arrow in the upper right of the screen indicates where north is.



Highlight *2D Heading Up* and press ENT.

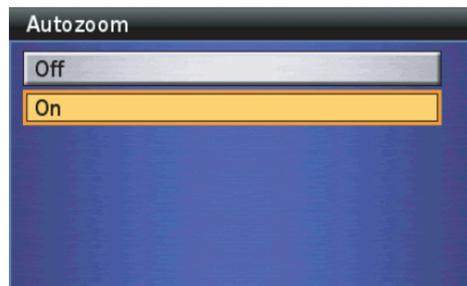

Highlight your choice and press ENT.

NOTE:

For information about Auto zoom, see page 53.


2D Heading Up will appear in the *Map Orientation* field on the *Setup Screen 1* screen.

Selecting 2D North Up

This option fixes the display with north always positioned at the top of the screen.



Highlight *2D North Up* and press ENT.

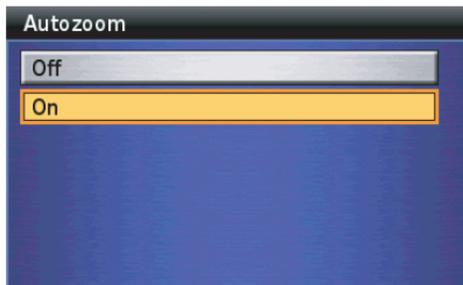

Highlight your choice and press ENT.


NOTE:

For information about *Auto zoom*, see page 53.

2D North Up will appear in the *Map Orientation* field on the *Setup Screen 1* screen.

Selecting 3D Heading Up

This option displays the map in 3 dimensions (3D), with the direction you are heading always pointed toward the top of the screen. An “N” arrow in the upper right of the screen indicates where north is.

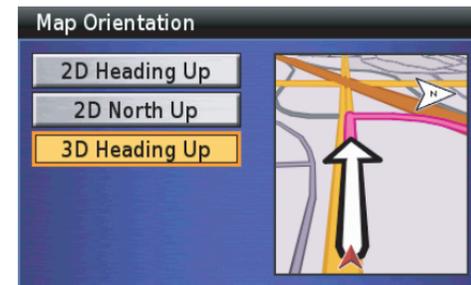

Highlight *3D Heading Up* and press ENT. *3D Heading Up* will appear in the *Map Orientation* field on the *Setup Screen 1* screen.

Setup Screen 1

Map Color Mode

Move the highlight to the *Map Color Mode* field on the *Setup Screen 1*, and press ENT. The *Map Color Mode* screen appears.



You have three color mode choices:

- The *Day* option offers higher intensity for easier viewing during daylight hours.
- The *Night* option offers lower intensity and a black background for easier viewing at night.
- The *Auto* option automatically switches between the day and night modes based on the time of day and GPS sunrise/sunset data. This is the default setting.


Tip:

To activate the Navi System, press either the *DISP* or *MAP* button. Press *DISP* again for the multi-information display.

On the *Map Color Mode* screen, highlight your choice and press ENT. Your choice will appear in the *Map Color Mode* field on the *Setup Screen 1* screen.

NOTE:

The “*Night*” mode or the “*Auto*” mode after sunset provides a black background as shown below.

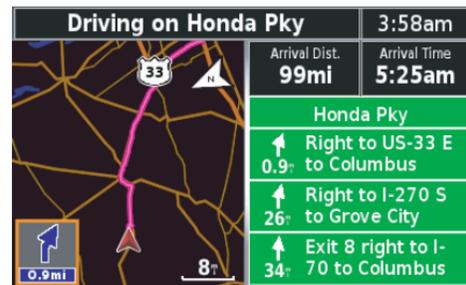

For more information about the night screen, see page 49.

Setup Screen 2

To move to screen 2, highlight the 2 tab at the top of the *Setup Screen 1*, and press ENT. The *Setup Screen 2* appears.



POI Display

The default is *Off*. If the option is *On*, POI (point of interest) icons will appear when the map scale is 0.2 mile or smaller.

NOTE:

The POI icon of the location you stored as Favorite will be displayed on the 120 miles or smaller map scale.

There are two other icons that are not part of the *POI Icon* option. They appear whether the option is on or off.




Honda motorcycle dealer (wing) icons remain visible until you zoom out past the 8 miles map scale.




The *Home* icon appears if you have designated a *Home* location (for 120 miles or smaller map scale).

Turning on POI Icons on the Map

If you want to show POI icons on the map, highlight *POI Display* on the *Setup Screen 2* screen and press ENT.

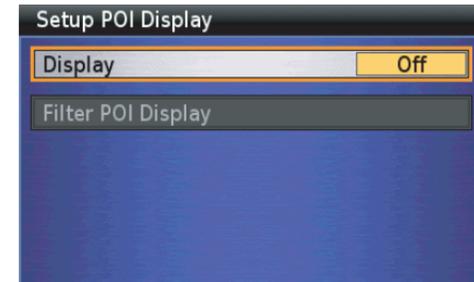

Highlight *Display* and press ENT to turn on *POI Display*.

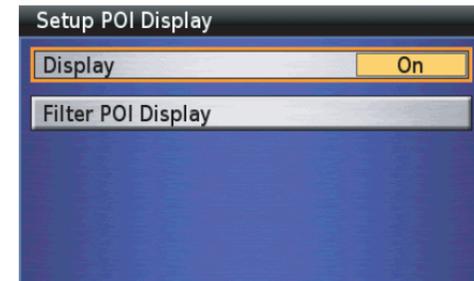

(cont'd)

Setup Screen 2


Highlight *Filter POI Display* and press ENT. The POI category menu appears.



All items are selected by default.

When Displaying All POI icons on the Map

If you want to show all POI icons on the map, highlight *All Categories* and press ENT.

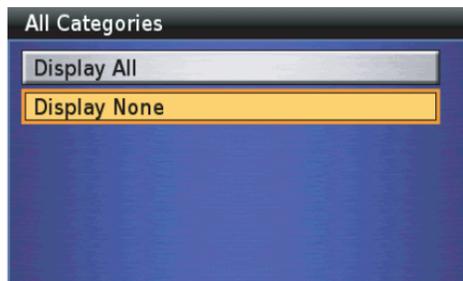

Highlight *Display All* and press ENT.



When Displaying Your Desired POI icons

If you want to show your desired POI icons, highlight your desired categories and press ENT. If subcategories are displayed, highlight your desired item and press ENT.



The yellow field indicates selection. Press the BACK button to return to the *Setup POI Display* screen.

The icons will appear on all maps, whether you are riding a route or not. The points of interest are loaded in the system and you cannot add any locations to the database or control when the icons appear. To get more information for a POI that interests you, stop your motorcycle and press any directional arrow on the right fairing panel to bring up the *White Arrow Point Locator*. Move the locator to the POI icon. The POI's name will appear. To bring up a *Point Review Screen* for the location, press ENT.

Setup Screen 2

POI (Point of Interest)

Icons

Food & Drink



American, Barbecue, Spanish/Mexican, French, etc.



Asian, Chinese



Deli/Bakery, Café/Diner



Fast Food



Italian



Seafood



Steak/Grill

Lodging



Hotel/Motel, Bed & Breakfast Inn



Campground/RV Park

Fuel



Convenience



Auto Fuel



Truck Stop

Shopping



Department, General Merchandise, Apparel



Grocery, Shopping Center



Pharmacy/Chemist



Convenience

Honda Motorcycle Dealer



Honda Motorcycle Dealer

ATM/Bank



ATM/Bank

Attraction



Amusement/Theme Park



Museum/Historical, Hall/Auditorium



Landmark



Park/Garden



Arena/Track



Winery

Recreation



Golf Course



Skiing Center/Resort



Bowling Center



Sports/Fitness Center



Amusement/Theme Park



Park/Garden



Arena/Track

Entertainment



Live Theater



Bar/Nightclub



Movie Theater



Casino

Transportation



Auto Rental



Air Transportation



Ground Transportation

Hospital



Hospital

Auto Services

-  Auto Rental
-  Auto Repair
-  Dealer/Auto Parts, Automobile Club, Car Wash
-  Wrecker Service
-  Parking
-  Rest Area/Tourist Info
-  Truck Stop

Community

-  Library
-  School
-  Place of Worship
-  Police Station
-  City Hall
-  Court House, Community Center

 Border Crossing

 Post Office

 Bank/ATM

Others

 Marina/Repair & Storage

 Garmin Dealer

Setup Screen 2

Alert Setup

The system notifies you of urgent conditions with the alert icon and voice guidance (default setting). The alert icon will appear in the lower left corner of the screen. You can select the notification method, such as with voice only, with icon only, etc.




NOTE:

For more information about the alert icon, see page 51.

To change this option, highlight *Alert Setup* and press ENT.



Highlight your choice and press ENT.

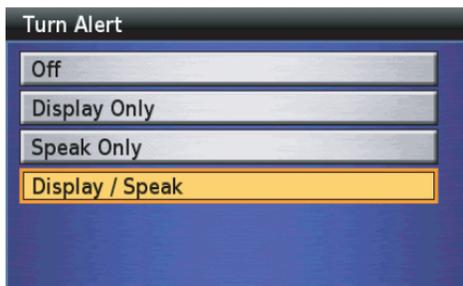


Highlight your choice and press ENT. Press the BACK button to return to the *Setup Screen 2* screen.

Track Log Setup

The option creates a visual log of where you have ridden by spreading “breadcrumbs” (up to 10,240 white diamonds) every 275 yards (250 meters), depending on the scale of your map display. These breadcrumbs appear, whether or not there is a route in the system, for any map scale up to and including 3 miles. If the system spreads the maximum number of breadcrumbs, the first created will disappear as the latest breadcrumb appears.




To turn this option on, highlight *Track Log Setup* and press ENT.

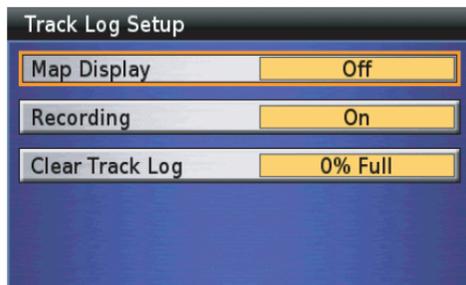

To record your track log, highlight *Recording* and press ENT. To display the breadcrumb on the map, highlight *Map Display* and press ENT

To clear the breadcrumbs from the system, highlight *Clear Track Log* and press ENT.

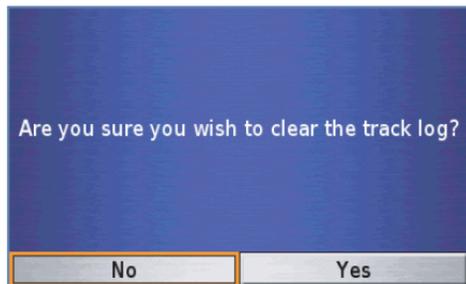


Highlight *Yes* and press ENT. If you clear the track log from the system with *Recording* option *On*, new breadcrumbs will appear as you continue - regardless of whether or not you have a route in the system.

When you complete your selections for *Setup Screen 2*, press the BACK button to return to the *Setup / Info* menu.

Setup System 1

Setup System 1

On the *Setup / Info* menu, highlight *Setup System* and press ENT. The *Setup System 1* screen appears.

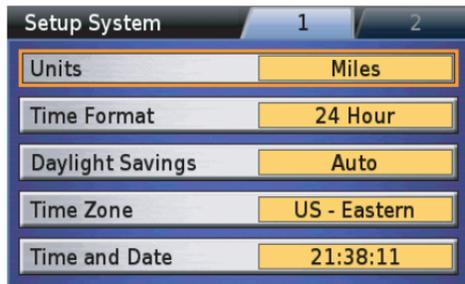

Units

The default is *Mile*. To select *KM*, highlight *Units* and press ENT. The *KM* option will appear on the *Units* field.

Time Format

The default is *12 Hour* (am and pm) display. To select *24 Hour* (military) time, highlight *Time Format* and press ENT. The *24 Hour* option will appear on the *Time Format* field.

Daylight Savings

The default is *Auto*. To change the selection, highlight *Daylight Savings* and press ENT.




The *Auto* option will automatically adjust for time changes in the spring and fall. The *Yes* option voids the automatic time change for daylight saving time. The *No* option keeps the time standard. Highlight your desired option and press ENT.

Time Zone

The default is *US-Eastern*. To change the selection, highlight *Time Zone* and press ENT.



Highlight your time zone and press ENT. The *Other* selection allows you to enter any local time that is not covered by the other choices.

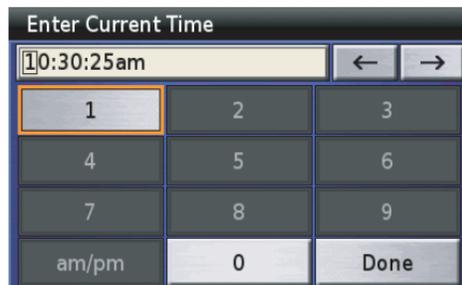

NOTE:

If “24 Hour” is set on the “Time Format,” the *am/pm* button is not available.

Use the keyboard to enter the time.

NOTE:

For information about keyboard screen, see page 64.

When you are finished, highlight *Done* and press ENT.

Time and Date

You can check the time, date, time zone setting, and daylight saving setting. Press the BACK button to return to the *Setup System 2* screen.



Setup System 2

Setup System 2

To move to screen 2, highlight the 2 tab at the top of the *Setup System 1* screen, and press ENT. The *Setup System 2* screen appears.



Greeting

You can select the greeting screen that appears when you turn the ignition on. Highlight *Greeting* and press ENT.



Selecting Standard Greeting

The default for the opening/ending greeting is the *Standard* greeting, which shows the Goldwing logo and then fades out. The same logo appears as the closing greeting.

Highlight *Standard* and Press ENT.



Your choice will appear in the *Greeting* field on the *Setup System 2* screen. To return to the *Setup / Info* menu, press the BACK button.

Selecting Personal Greeting

The opening greeting includes the Goldwing logo screen followed by a screen that reads: *Hello!* followed by the text you enter. The closing greeting will be *See You!* followed by the text you enter.

To choose the customized greeting, highlight *Personal*, and press ENT.




Use the keyboard to type your name or phrase you want to appear below *Hello!* in the customized greeting.

NOTE:

For more information about the keyboard screen, see page 64.


After typing, highlight *Done* and press ENT.

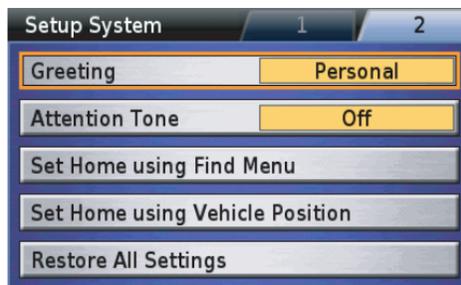

Your choice will appear in the *Greeting* field on the *Setup System 1* screen. To return to the *Setup / Info* menu, press the BACK button. The next time you start the Navigation System, you will see a two-screen sequence: the Goldwing logo followed by a second screen that says *Hello!* with the text you entered. When you exit the system, you will see a screen that says: *See you!* followed by the text you entered.

Selecting Off (No Greeting)

If you do not want an opening greeting, highlight *Off* and press ENT.

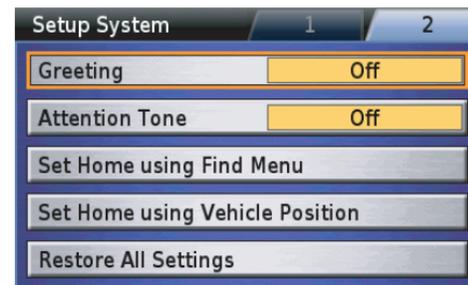

Your choice will appear in the *Greeting* field on the *Setup System 2* screen. To return to the *Setup / Info* menu, press the BACK button.

NOTE:

“Off” only affects the opening greeting. You will still see the standard closing.


Setup System 2

Attention Tone


If this option is set to *On* (default is *Off*), the attention tone sounds before voice prompts. Highlight *Attention Tone* and press ENT to turn the attention tone on or off.

Set Home using Find Menu

If you want to designate a location from the *Find* menu, highlight *Set Home using Find Menu* and press ENT. The *Find Home Location* menu appears.

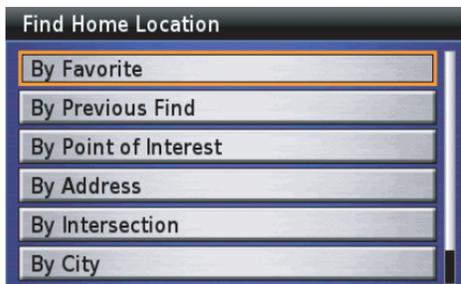

The *Find Home Location* menu offers the seven *Find* menu functions. For the following procedure, see *Find Destination* on page 81. The *Point Review Screen* then appears.

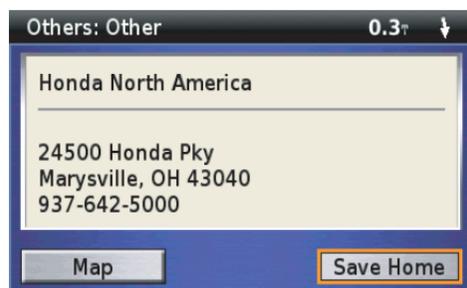


With *Save Home* highlighted, press ENT. The display returns to the *Setup System 2* screen.

NOTE:

Your new “*Home*” designation will be listed in “*Favorite Places*.”

Set Home using Vehicle Position

If you want to designate your current location as *Home*, highlight *Set Home using Vehicle Position* and press ENT. The *Point Review Screen* appears.

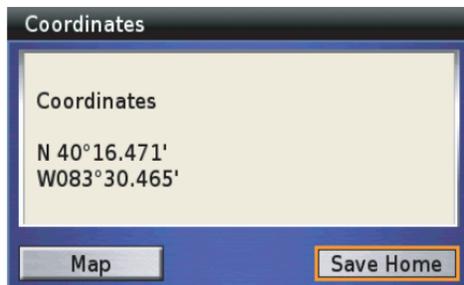

With *Save Home* highlighted, press ENT. The display returns to *Setup System 2* screen.

NOTE:

Your new "Home" designation will be listed in "Favorite Places."

Restore All Settings

The *Restore All Settings* option lets you return the system to initial default settings selected by the factory. (See the table on page 156.)

Highlight *Restore All Settings* and press ENT. The following screen appears.



The screen will ask you to confirm your request. Highlight *Yes* and, press ENT to restore all settings.

NOTE:

Executing the Restore All Settings option deletes the "Home" location stored in the system.

Setup System 2

Factory Default Settings

Setup Screen

FEATURE	DESCRIPTION	DEFAULT
Dimmer / Day	For daytime screen viewing.	Full Brightness
Dimmer / Night	For nighttime screen viewing.	Half Brightness
Map Layout	Three map layout choices.	Half Map
Map Color Mode	Background color for daylight map display/screen mode.	Auto
Map Orientation	Three map orientation choices.	2D Heading Up
POI (Point of Interest) Display	If the map scale is 0.2 mile smaller, point of interest icons appear on the map screen.	Off
Alert Setup	Three alert notification choices.	Display/Speak
Track Log Setup	Creates log of your journey by spreading “breadcrumbs” every 275 yards (250 meters), depending on the map scale. If on, breadcrumbs appear whether or not there is a route in the system.	Map Display : Off Recording : On

Setup System

FEATURE	DESCRIPTION	DEFAULT
Units	Distance measurement (miles or kilometers).	Mile
Time Format	12 hour (am/pm) or 24 hour (military).	12 Hour
Daylight Savings	Automatically adjusts for standard/daylight savings time changes.	Auto
Time Zone	Allows you to change time zone.	US-Eastern
Greeting	Three options including no greeting.	Standard
Attention Tone	Turns the attention tone on or off that sounds before voice prompts	Off


Setup Voice

FEATURE	DESCRIPTION	DEFAULT
Voice	Allows you to select the type of voices for the route guidance and prompts.	American English-Jill (TTS)

Setup Voice

The *Setup Voice* option allows you to select the type of voices from the pre-recorded voice or text-to speech (TTS) voice.

On the *Setup / Info* menu, highlight *Setup Voice* and press ENT. The following screen appears.

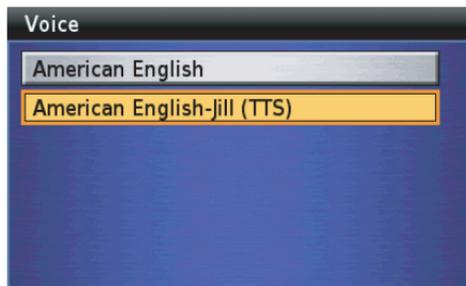

American English is pre-recorded voices, which have a limited vocabulary and do not speak names of locations or streets. *American English-Jill (TTS)* is a text-to-speech voice, which will read and speak the same words that are displayed on the screen. The voices have an extensive vocabulary, and they pronounce the street names as you approach turns. To change the voice setting, highlight your choice and press ENT. The screen will return to the *Setup / Info* menu.

Info Screens

GPS Info

The *GPS Info* option lets you check your GPS status, shows the position of the satellites to which the system is connected, displays the time and date, shows your current coordinates, and indicates the accuracy range of the GPS signal.

On the *Setup / Info* menu, highlight *GPS Info* and press ENT. The following screen appears.



Press the BACK button to return to the *Setup / Info* menu.

System Info

The *System Info* option identifies the software operating your Navigation System and provides the software ID number. In addition, the version of map software loaded in the system appears at the bottom of the screen.

On the *Setup / Info* menu, highlight *Info/ System* and press ENT. After checking the information, press the BACK button to return to the *Setup / Info* menu.

XM Info

The *XM Info* option identifies the software, available audio channels, and data services used in your Navigation System, and provides the radio ID number.

NOTE:

XM service only available in the 48 contiguous United States.


On the *Setup / Info* menu, highlight *XM Info* and press ENT. The following screen appears.




(cont'd)

Info Screens


You need to activate your XM subscription before you use the XM features. If you have not already subscribed to XM but wish to do so, read the information on the screen, then highlight *Subscribe* and press ENT.

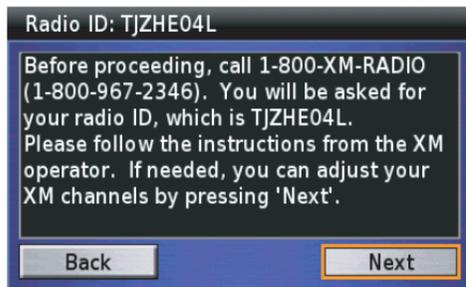

Highlight *Next* and press ENT.

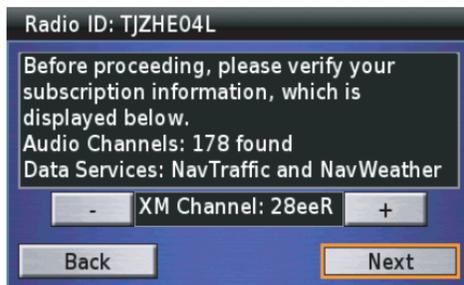

Highlight – or +, and press ENT to change the channel. After selecting channel, highlight *Next* and press ENT.

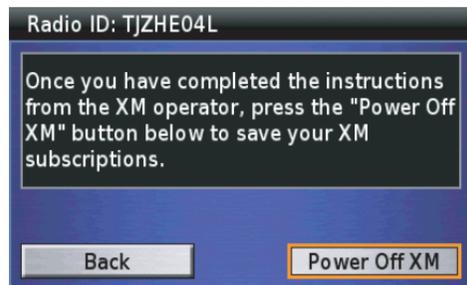

Highlight *Power Off XM* and press ENT.

For more information about XM, See your Owner's Manual.

Technical & Consumer Information

Glossary.....	162
System Messages	164
Troubleshooting	165
System Limitations.....	170
Database Limitations	172
Customer Support.....	173

Glossary

The following is a glossary of terms related to your Navigation System.

Banner	The message or direction's information area across the top of the map display screen.
Yellow Field	In the system setup fields, indicates that the field is selected as the default.
Breadcrumbs	Tracking dots that can be followed on the map to retrace your route. This function can be turned on/off in <i>Setup Screen 2, Track Log Setup</i> . The default is off.
SD Memory Card	Abbreviation for Secure Digital memory card. An SD memory card containing map software is installed in the Navi box in the travel trunk.
Database	This consists of the map data and the POI (Point of Interest) data stored on the SD memory card.
GPS	Global Positioning System. A network of 24 satellites in orbit around the earth. The navigation system can simultaneously receive signals from up to 12 satellites to accurately position the vehicle on the map.
GPS Antenna	Located on the top of the fairing under the windscreen air vent. Electronic items operating in this general location can interfere with the GPS signal.
Icon	Symbol representing a Point of Interest (POI) that appears on a map scale of 0.2 mile or smaller screen if the <i>POI Icon</i> option is selected.
Initialization	This refers to the time needed to reacquire the GPS satellite signals whenever the power has been disconnected.
Map Matching	Refers to the matching of the vehicle position to mapped roads in the system.
Navi	Abbreviation for Navigation or Navigation System.
North Pointer	The map symbol showing the map orientation.
Off Route	This occurs when you leave the route entered in the system. The banner at the top of the screen will read: <i>Calculating...</i> The Navi voice guidance will announce: <i>Off Route. Recalculating.</i>
Outlying Areas	Rural areas that typically have only their main roads mapped.

POI	Point of Interest. These are businesses, schools, etc., found on the <i>Find Destination</i> , <i>Route to New Destination</i> , <i>Edit Route/Add Stop</i> , <i>Recalculate Route/Edit Route</i> , or <i>Route to Home/Edit Home Location (Route to Home)</i> menus.
Point	Used to refer to a location (point on a map). Example: <i>Point Review Screen</i> .
Speed Sensor	Provides speed signals to the Navi system for moving the vehicle icon on the map.

System Messages

Screen Message	Explanation – Suggested Action
<i>Antenna Shorted to Ground</i>	The antenna has been shorted. See your Honda dealer.
<i>GPS Antenna Disconnected</i>	The antenna connection has been disconnected. Check the antenna connection that goes into the Navi box. If that is not the cause of the problem, see your Honda dealer.
<i>Lost GPS Satellite Reception</i> (message banner turns red)	Satellite reception has been lost.
<i>Poor GPS Satellite Reception</i> (message banner turns yellow)	Satellite reception has degraded. Use caution, the position presented by the system may not be accurate. (For subsequent incidents of temporary poor reception, the message banner will continue to give navigation information, but the color will change to yellow as an alert to use caution.)
<i>Calculating Route...</i>	The Navi is calculating a route.
<i>Route Calculation Pending...</i>	The Navi is waiting to calculate a route. Occurs rarely.
<i>Route Truncated</i>	You attempted to create an overly long route. The system shortened the route so it would fit the available memory.
<i>Invalid Operation</i>	You tried to operate controls that are shut off while your motorcycle is in motion.
<i>Sunrise, Switching to Day Mode/ Sunset, Switching to Night Mode</i>	Messages indicating the Navi is switching between day and night modes.
<i>Favorite Memory is Full</i>	You have tried to save more favorites than the system can handle (approximately 2,000).
<i>Favorite Name Already Exists</i>	Each favorite must have a unique name.

Troubleshooting

Hardware

PROBLEM	EXPLANATION
The Vehicle Position icon does not move on the map screen while I'm riding my motorcycle.	The map will not display if the speed sensor is not working. See your Honda dealer.

Voice Guidance

PROBLEM	EXPLANATION
I did not hear the voice guidance when I expected to hear it.	The Navigation System voice guidance operates whether the audio system is on or off. However, the volume of the voice guidance depends on the setting of the VOLUME knob on the audio system controls. If the knob is turned fully off, you will not hear the voice guidance. Also, since the Navi voice can be routed through the speakers or the headphones, check that you are listening to the sound source you selected.

Screen

PROBLEM	EXPLANATION
While I ride, my screen shows “white dots” on it. What do they mean?	These are called “breadcrumbs.” They appear if the <i>Track Log Setup</i> option is on. (The default is off.) See page 148.
What is the sequence of messages I will see if the system has not been initialized recently?	Searching for Satellites. Locating Satellites. Acquiring Satellites. GPS Ready.

(cont'd)

Troubleshooting

PROBLEM	EXPLANATION
The distance appears like “_ _ . _”	Satellite reception has been lost.
Arrival Time appears like “_ _ : _ _” am/pm.	The system estimates it will take more than 24 hours to get to the destination.
After using the <i>White Arrow Point Locator</i> , I resumed riding, but the map display is frozen.	If you resume riding after using this feature without removing it from the screen, the screen will continue to display the last map screen until you terminate the point locator feature by pressing the DISP button. We suggest you press the MAP button before you resume riding. Either action will return your main map display.
I get inconsistent results when I type in initials searching for a location.	The database includes some entries that leave spaces between initials and some entries that do not. If your entry fails, try the alternative.
When I approached the Canadian border, the map showed a border crossing POI icon, but this did not happen when I approached Mexico.	The system does not include border crossing icons for Mexico.

Software

PROBLEM	EXPLANATION
I found some errors in the database. How do I report them?	Minor errors are bound to occur in a database this big. If you encounter major errors, you can report them per the instructions on page 173.
I want to buy a new SD memory card. How do I purchase one?	See <i>Map Software & Navigation System Software Upgrades</i> on page 173.
How can I determine the software version in my Navigation System?	Select <i>System Info</i> from the <i>Setup / Info</i> menu.
When is my city going to become part of a fully verified detailed coverage area?	The mapping database supplier is constantly verifying new and existing areas that currently show on the map as unverified. Alaska and Hawaii are covered.

PROBLEM	EXPLANATION
Will the Navigation System work outside North America?	It will work in Hawaii, Alaska, and Canada as well as the continental U.S., but XM feature will not work in Hawaii and Alaska.
Why is the street I am on not on the map? It has been here for a year.	The mapping database is constantly undergoing revision. See page 173 to learn how to obtain the latest detailed coverage information.

Features

PROBLEM	EXPLANATION
My state does not observe daylight savings time. How do I turn off this feature?	The setting switches automatically by default, but you can change it. See <i>Setup System 1</i> screen, <i>Daylight Savings</i> on page 150.
Can I turn the Navigation System off with the ignition on?	No. You cannot turn the Navigation System off with the ignition on.

(cont'd)

Troubleshooting

Routing

PROBLEM	EXPLANATION
My system does not route me the same way I would go. Why is this?	In some situations, your local knowledge may generate a better route than the data currently available to the system.
I entered a new route with vias that would create a loop starting and ending at my current location, and turned off the ignition. When I turned the system on again, the route was gone.	Shutting the system after entering a loop from your current location cancels the route. The system assumes you reached your destination. To avoid losing a loop route, do not enter it until you are ready to ride.
I stopped for coffee about 220 yards (200 meters) from my route destination. When I started up again, the route was no longer in the system.	If you turn the ignition off when you are within 220 yards (200 meters) of your destination, the system assumes you have reached your destination.
I attempted to route to a destination that is not on a road, but the system did not calculate a route.	The system will not calculate to a destination that is not within 1.2 miles (2 km) of a road in the database.
I went more than 33 yards (30 meters) off my route, but the system did not alert me.	The automatic re-routing feature will normally give you visual and voice alerts if you move more than 33 yards (30 meters) off route. However, some situations, such as riding on a road that closely parallels another road, may prevent activation of this feature because the system may be reading your location on the other road, within the 33 yards (30 meters) limit. As explained in <i>System Limitations</i> , there are elements that can affect the accuracy of all GPS equipment.

GPS Signal

PROBLEM	EXPLANATION
The Navigation System is unable to acquire a proper GPS signal.	Make sure there is nothing blocking the GPS antenna located under the windshield (see page 7). If there is not, move the vehicle to an open space away from tall buildings, trees, etc.
How long should it take for my system to become GPS-ready if it has not been used for some time?	In a garage or other area that would interfere with receiving GPS signals, turn on the ignition for four minutes. Then move your motorcycle outside to a clear area where it should be able to pick up GPS signals. If you don't receive any signals, contact your dealer.

XM NavTraffic and XM NavWeather

PROBLEM	EXPLANATION
XM NavTraffic/NavWeather is missing and is not displaying properly. What is wrong?	Verify the following: <ul style="list-style-type: none"> • Your XM subscription may have expired. Call XM at (800) 967-2346 and verify your account status. If your subscription has lapsed, you may need to request a “rapid refresh.” After XM performs the refresh, leave the vehicle running outside for 30 minutes to receive the refresh. • It is possible that there is a temporary technical problem with your metropolitan area traffic and/or weather. You can call XM at (800) 967-2346 to see if there is an outage. • If the situation persists, see your local Honda dealer for assistance. • XM NavTraffic/NavWeather relies on a satellite signal. It will not work in Hawaii and Alaska.

System Limitations

Although your Navigation System is a highly sophisticated piece of equipment, you may find it has certain limitations. The system uses signals from the Global Positioning System (GPS) to determine its current location. The GPS is operated by the U.S. Department of Defense. The system is subject to changes that could affect the accuracy and performance of all GPS equipment, including your Navigation System.

Although the system will direct you to your desired destination, it may not always do it by what you consider to be the most direct route.

The points of interest listings are not as complete in outlying areas as they are in metropolitan areas. For example, only limited numbers of gas stations, restaurants, supermarkets, banks, etc., are included. In outlying areas, you may not find listings for places you know exist, and the facilities listed may not be the closest. This is also true for police, agencies and hospitals. Always check with local information sources if you need law enforcement or hospital services.

On rare occasions, you may find that the system “reboots.” This is indicated by the display returning to the logo screen. A reboot can be caused by a number of things, including excessive heat or shock. It does not necessarily indicate a problem that requires service. After the system completes the reboot, it should allow you to complete whatever functions you were performing before the reboot.

Honda has made every effort to verify that the system’s database was accurate at the time it was created. However, businesses do close or move to new locations, and new businesses start in the old locations. For this reason, you may occasionally find inaccurate information when you select and drive to a point of interest. The number of these inaccuracies will increase as time goes on. However, database updates are available annually. See *Map Software & Navigation System Software Upgrades* on page 173.

Loss of Satellite Signal

If the system loses power for more than five minutes, it takes a while to reacquire the GPS signal (satellite positions).

- The ignition must be turned to ON or ACC.
- The motorcycle must be parked outside, away from buildings.
- The motorcycle should be stationary. (Acquiring the signal takes longer if the motorcycle is moving.)

The average acquiring time is about five minutes, but it can take as long as 30 minutes. If the system is unable to acquire a signal, follow the instructions on the screen. Contact your local Honda dealer if a problem still persists.

Database Limitations

The navigation system's digitized map database reflects the most complete and accurate data available at the time of production. Accordingly, your copy may contain inaccurate or incomplete data or information due to the passage of time, road construction, changing conditions, or other causes.

In addition, this database does not include, analyze, process, consider, or reflect any of the following categories of information:

- Population density
- Neighborhood quality or safety
- Availability or proximity of law enforcement
- Construction work, zones, or hazards
- Legal restrictions (such as vehicular type, weight, load, height, and speed restrictions)
- Road slope or grade
- Bridge height, width, weight, or other limits
- Traffic facilities safety
- Pavement characteristics or conditions
- Special events

We assume no liability for any incident that may result from an error in the program or from changed conditions not noted above.

Honda Customer Support

You may contact Honda Customer Service, Motorcycle Division, American Honda Motor Co., Inc., P.O. Box 2200, mailstop: 100-4C-7B, Torrance, CA 90509-2200. Telephone: (866) 784-1870.

Reporting Errors

Occasionally, you may encounter database errors. Report errors online at <http://update.navtech.com>.

Map Software & Navigation System Software Upgrades

Honda is continually expanding the scope of the Map software and Navigation System software. The Map software is updated to correspond with new model releases. You cannot update the current SD memory card installed in your Goldwing. You must replace it with a new SD memory card. The replaced SD memory card may be used in other electronic equipment such as a digital camera.

In the future, as updates become available, you may purchase a new SD memory card with map software and Navigation System software installed by going online to the Honda Owner Link website (<http://www.ahm-ownerlink.com>) or the Honda Rider's Club of America website (<http://www.hrca.honda.com>), which both link to the website of the software developer, Garmin Ltd, (<http://www.garmin.com/goldwing>). You may also order directly from Garmin by going to their website or by calling (866) 606-7555.

When updating your system, keep the following in mind.

- A new SD memory card consists of the new Map software and the updated Navigation System software that enables the new maps to operate on the screen.
- When you install a new SD memory card, there may be some changes not only in the map content, but in the Navigation system itself.

NOTE:

For information about identifying the software currently operating your system, see page 159.

Customer Support


Upgrading the Software

The SD memory card (1) is located in the Navi box (2) attached to the backside of the travel trunk.

NOTE:

The Navigation System is a precision device that can be damaged by static electricity. Before touching the Navi box, discharge any static electricity by touching a metal area of your motorcycle outside the travel trunk.

1. Make sure the ignition switch is **OFF**.
2. Open the travel trunk cover.
3. Push the latch (3) on the left side of the Navi box to open the cover.

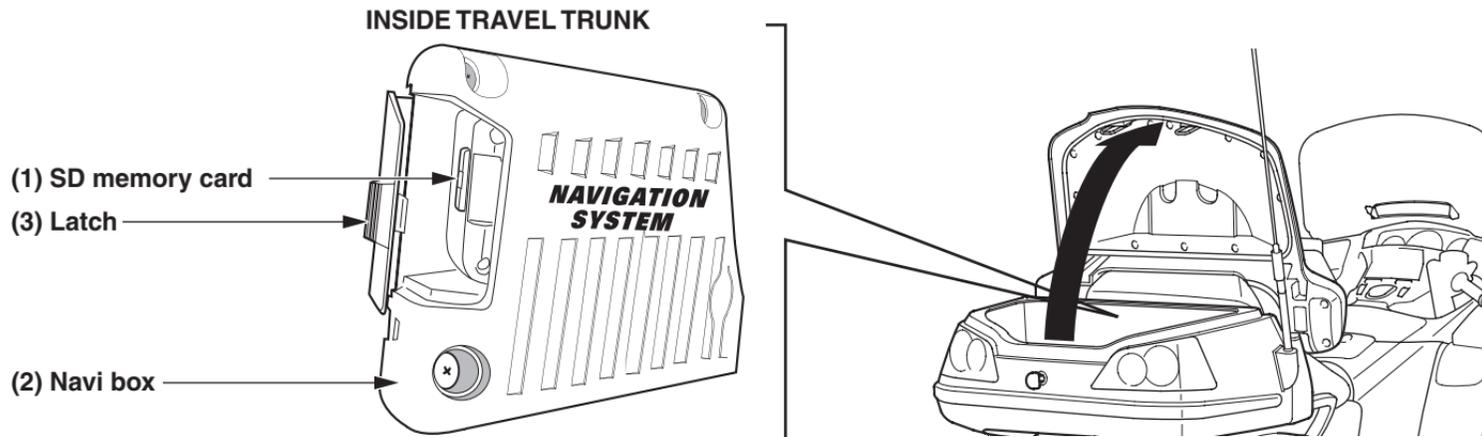

4. Push in to eject the SD memory card (1).

5. Insert the new SD memory card and push in until it clicks.
6. Turn the ignition switch to ACC. It automatically starts updating. The initial Navigation System screen (sunrise beyond the Earth) will appear, followed by the *Copyrights* screen. This means the update is completed.
7. Close the Navi box cover and push the latch to the right until it clicks. Check that the cover is securely closed.
8. Close the travel trunk cover.
9. To check the update was successful, go to the *Setup / Info* menu and select *System Info*. Check that the screen identifies the new update.
10. Turn the ignition switch to OFF.

Index

A

- address,
 - find destination by 95
- alert icon..... 51
- audio system controls 41

B

- button,
 - BACK 38
 - DIM 40
 - DIRECTIONAL ARROW 38
 - DISP 40
 - ENT 38
 - MAP 38
 - MENU 38
 - NAVI 41
 - VOICE/GUIDE 39
 - ZOOM IN/OUT 38
- button/knob,
 - MODE 41
 - VOLUME 41

C

- center display controls..... 40
- changing SD memory card 174
- city,
 - find destination by 101
- controls,
 - audio system 41
 - center display 40
 - left handlebar 39
 - right fairing panel..... 38
- customer support 173

D

- database limitations..... 172
- detour 121

E

- edit route screen..... 72
- errors,
 - reporting..... 173
- exit,
 - find destination by 102

F

- favorite places 105
- favorite places,
 - find destination by..... 83
- find destination,
 - by address 95
 - by city 101
 - by exit 102
 - by favorite 83
 - by intersection..... 98
 - by point of interest..... 90
 - by previous find 88
 - menu 82
- full map 46

G

- getting started 14
- glossary 162
- GPS info menu..... 159

H

- half map 46

I

intersection,
 find destination by 98

K

keyboard screens 64

L

left handlebar controls 39
 lever, volume 39
 limitations,
 database 172
 system 170
 list screens 67

M

main menu 26, 56
 maneuver list 51
 map,
 full 46
 half 46
 scale zoom 53

screen layouts 46
 memory card,
 accessing 174
 menu,
 detour 121
 favorite places 106
 find destination 82
 GPS info 159
 main 26
 recalculate 115
 route 111
 route to home 124, 128
 route to new destination 114
 screens 56
 setup / info 138
 setup screen 139
 setup system 150
 setup voice 158
 system info 159
 traffic 132
 weather 128
 XM info 159
 message banner 46
 messages,
 system 164

N

next turn pop-up 51

O

operating controls 37
 operating keyboards 65

P

point of interest,
 find destination by 90
 point review screens 68
 previous find,
 find destination by 88

R

recalculate 115
 re-routing, automatic 52
 resume 113
 right fairing panel controls 38
 route to home 123, 127, 131
 route to new destination menu 114

Index

route,	
calculate screen	71
edit	116
menu	111, 112
new destination	114

S

screen,	
center display	43
edit route	72
info	159
keyboard	64
list	67
map	46
menu	56
point review	68
route calculate	71
traffic	78
traffic/weather review	79
weather	76
scroll bar	44
settings,	
factory default	156
setup / info menu	138
setup screen menu	139

setup system menu	150
setup voice menu	158
startup	16
stop	113
support, customer	173
system info menu	159
system,	
limitations	170
messages	164
startup	16

T

tips, getting started	35
toggle, zoom	39
traffic,	
avoiding incidents	135
review screen	79
screen	78
viewing by road	133
viewing current route	134
viewing full map	133
trip, let's take a	29
troubleshooting	165

V

volume lever	39
--------------------	----

W

weather,	
review screen	79
screen	76
viewing forecast	130
viewing map	129
viewing other city	129
white arrow point locator	54
wide map	46

X

XM info menu	159
XM subscription	159

Z

zoom, map scale	53
-----------------------	----







