## BLUETOOTH® HANDSFREELINK® (if equipped)

# Pairing Your Phone



**HFL Talk button:** Give HFL commands or answer incoming calls.

**HFL Back button:** End a call, go back to the previous command, or cancel an operation.



#### Press and release the HFL Talk button before you give a command.

Enable "Discovery" or "Search" mode on your Bluetooth-compatible phone.

Has a phone been paired to the system before?

The system gives you information about pairing a phone for the first time.

NO

2 Say "Phone setup."

3 Say "Pair."

YES

YES

4 HFL gives you a four-digit pairing code.
This code also appears on the audio display.

HFL searches for your phone, and you must search for a Bluetooth device from your phone. When HFL finds your phone, your phone prompts you to connect to HFL.

Was connection successful?

**5** Enter the code from step 4 on your phone.

Was pairing successful?

NO
Repeat step 5.

Was pairing successful?

YES
Repeat step 5.

6 HFL asks you to name the phone. For example, say "Mary's phone."

Your phone is now paired to HFL. The system exits out of the HFL menu.

For more information or troubleshooting, call HFL consumer support at (888) 528-7876, visit handsfreelink.honda.com, or see your owner's manual for details.

Allows you to place and receive phone calls through your vehicle's audio system. Visit handsfreelink.honda.com to check if your phone is Bluetooth-compatible.

## Making a Call

Press and release the HFL Talk button before you give a command.

I. Press the HFL Talk button.



2. **Say** "Call" or "Dial" and the desired phone number.



3. **Press** the HFL Talk button, and say "Call" or "Dial" to continue.



4. The call is connected and heard through the vehicle's speakers.



### Receiving a Call

 A notification is heard and the incoming phone number appears on the audio display.





2. **Press** the HFL Talk button to accept the call.



3. **Press** the HFL Back button to end or decline the call.



20 21