

 
AUTO DOOR LOCKS

Program how and when the vehicle doors automatically lock and unlock.

Default Lock/Unlock Setting

Default Lock Setting

All doors are preset to lock when your vehicle reaches about 10 mph.

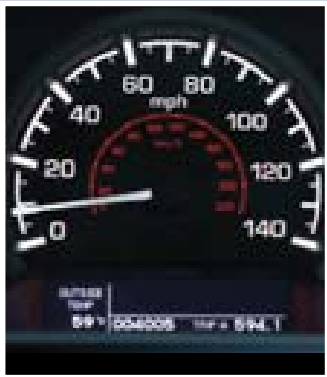


Default Unlock Setting



Only the driver's door is preset to unlock when you shift into Park (P).



Programmable Auto Door Lock/Unlock Settings

 Below are the different programmable options you can choose. See *Auto Door Locking/Unlocking* in your Owner's Manual for instructions on programming these settings.

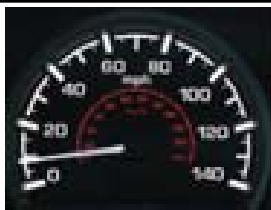
AUTO DOOR LOCK		
Auto Lock		
	When you reach 10 mph	When you shift out of Park
Turn off Auto Lock		
	Operate manually	

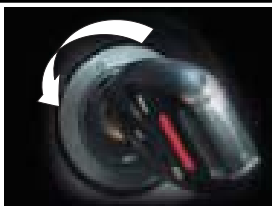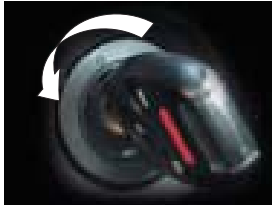  AUTO DOOR UNLOCK		
Auto Unlock (all doors)	 When you turn the ignition OFF	 When you shift into Park
Auto Unlock (only driver's door)	 When you turn the ignition OFF	 When you shift into Park
Turn off Auto Unlock	 Operate manually	


Modifying the Auto Door Unlock Setting

To program all doors to unlock when you shift to Park:

 
1. **Close** the driver's door. **Shift** into Park.

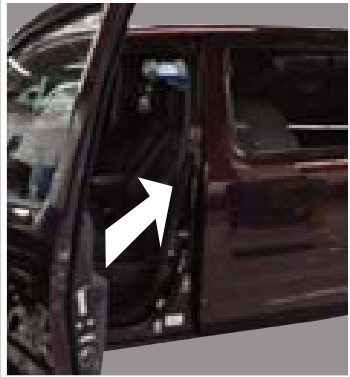

 2. **Turn** the ignition switch to ON (II).

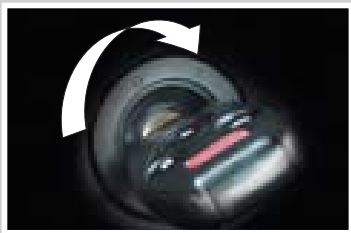

 3. **Press and hold** the unlock side of the master lock switch for about 10 seconds. In that time, you will hear three clicks.

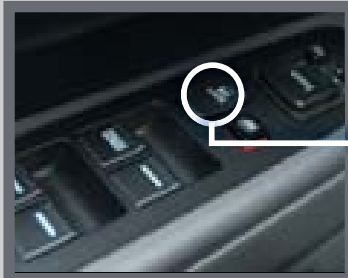

4. Within 20 seconds, **turn** the ignition switch to LOCK (0).

