 
 


INSTRUMENT PANEL INDICATORS



Malfunction Indicators

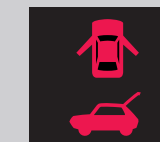
 
If an indicator remains on, there may be a problem; see your dealer

- | | |
|---|---|
|  Charging system |  Electric power steering (EPS) |
|  Low brake fluid, Brake system |  Malfunction indicator lamp (check engine light) |
|  Low oil pressure |  Vehicle Stability Assist® (VSA) |
|  Supplemental restraint system (SRS) |  Tire Pressure Monitoring System (TPMS) (<i>blinks and stays on</i>) |
|  Transmission (<i>blinking</i>) |  All-Wheel Drive (AWD) system* |
|  Anti-lock Brake System (ABS) |  Daytime running lights (DRL) |

 
 
 
Condition Indicators

Action is needed by driver

- | | |
|---|---|
|  Parking brake on:
Release |  Seat belt reminder:
Fasten seat belt(s) |
|---|---|

- | | |
|--|--|
|  Door/Tailgate open:
Close door(s) / tailgate |  Low fuel:
Refill |
|  Low tire pressure:
Add air or calibrate system |  Maintenance Minder™:
Make service appt |
|  All-Wheel Drive* (<i>blinks</i>):
Pull over and idle |  Immobilizer (<i>blinks</i>):
Use other vehicle key and see dealer |

On/Off Indicators

- | | |
|--|---|
|  PASSENGER AIRBAG OFF
(next to i-MID) |  Exterior lights on |
|  SIDE AIRBAG OFF |  Turn signals/hazards on |
|  VSA OFF |  Fog lights on |
|  CRUISE MAIN on |  High beams on |
|  CRUISE CONTROL on |  ECON mode on |

*if equipped