

INSTRUMENT PANEL INDICATORS

Briefly appear with each engine start. Red and amber indicators are most critical. Blue and green indicators are used for general information. See your Owner's Manual for more information.



Malfunction Indicators

If an indicator remains on, there may be a problem; see your dealer



Charging system



Low brake fluid, brake system



Low oil pressure



Supplemental Restraint System (SRS)



Smart Entry system



Power tailgate*



 
Power sliding door



Daytime running lights (DRL)




Anti-Lock Brake System (ABS)

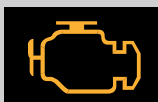

Malfunction lamp (check engine light)



 Vehicle Stability Assist® (VSA)

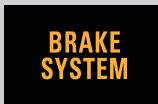

Brake override system



Forward Collision Warning (FCW)*



Lane Departure Warning (LDW)*



Starter system



Tire Pressure Monitoring System (TPMS)

Condition Indicators

Action is needed by driver



Parking brake on:
Release



 
Low fuel:
Refill



Door/Tailgate open:
Close door(s)/tailgate



Seat belt reminder:
Fasten seat belt(s)

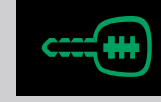

Immobilizer (blinks):
Use other vehicle key and see your dealer



 
Low tire pressure:
Add air



FCW (blinks)*:
Brake or change lanes



LDW (blinks)*:
Steer to stay in lane

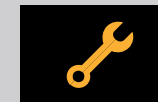

Maintenance Minder™:
Make dealer appointment

On/Off Indicators



PASSENGER AIRBAG **OFF**
(located on center panel)



VSA **OFF**



FCW* **off**



High beams **on**



Exterior lights **on**



Fuel economy **on**



Turn signals/hazards **on**



CRUISE MAIN **on**



CRUISE CONTROL **on**

*EX-L only