


Tire Pressure Monitoring System (TPMS)

Monitors the tire pressure while you are driving.

If your vehicle's tire pressure becomes significantly low, the low tire pressure indicator comes on and a message appears on the multi-information display.

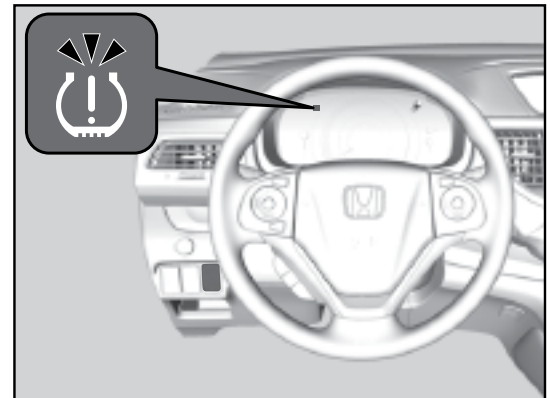

■ What to Do


Stop your vehicle in a safe place. Check the tire pressure and adjust the pressure to the specified level. The specified tire pressure is on a label on the driver's doorjamb.

■ TPMS Calibration

Any time you inflate, change, or rotate one of more of the tires, you need to recalibrate the system.

On vehicles with information display

Press and hold the TPMS button on the dashboard. The TPMS indicator blinks, and calibration begins.

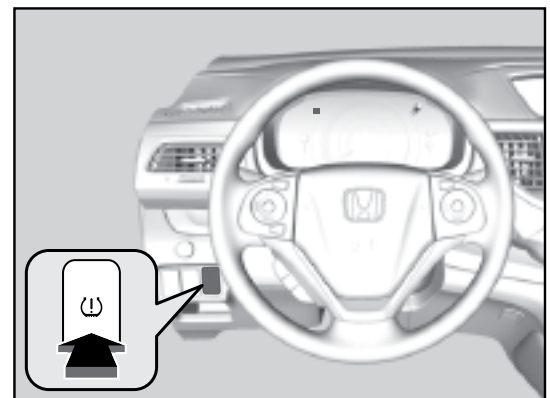

On vehicles with multi-information display (MID)

Use the buttons on the steering wheel to enter and operate the Vehicle Settings menu.

1. Scroll to the Vehicle Settings screen and enter the menu.
2. Select TPMS Calibration.
3. Select Calibrate. Calibration begins.
4. Exit the menu.

NOTICE

Driving on an extremely underinflated tire can cause it to overheat. An overheated tire can fail. Always inflate your tires to the specified pressure.