


# TIRE PRESSURE MONITORING SYSTEM (TPMS)

Monitors the vehicle's tire pressures.

## How It Works

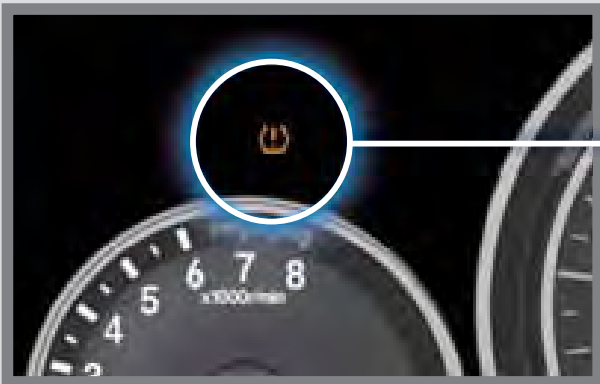


When the tire pressure drops significantly below recommended levels, the low tire pressure indicator comes on.

## What to Do

1. Visually inspect the tires for damage.
2. Use a tire air pressure gauge to check which tire(s) have low pressure.
3. Inflate the tire(s), if necessary, to the recommended pressures listed on the label on the driver's doorjamb.
4. Start TPMS calibration.

## What to Do

Any time you inflate, change, or rotate one or more of your tires, you need to recalibrate the system.

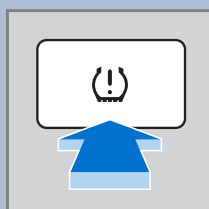

1. Make sure the shift lever is in Park (P) or the parking brake is applied and the vehicle is on.
2. Press and hold the TPMS button until the low tire pressure indicator blinks twice. Calibration begins and will finish automatically.