

















INSTRUMENT PANEL INDICATORS

Briefly appear with each engine start. Red and amber indicators are most critical. Blue and green indicators are used for general information. See your Owner's Manual for more information.





Malfunction Indicators








If an indicator remains on, there may be a problem; see your dealer

 Charging system	 Anti-Lock Brake System (ABS)
 Low brake fluid, brake system	 Malfunction lamp (check engine light)
 Low oil pressure	 Vehicle Stability Assist® (VSA)
 Supplemental Restraint System (SRS)	 Brake override system
 Smart Entry system	 Forward Collision Warning (FCW)
 Power tailgate	 Lane Departure Warning (LDW)
 Power sliding door	 Starter system
 Daytime running lights (DRL)	 Tire Pressure Monitoring System (TPMS)










Condition Indicators

Action is needed by driver

 Parking brake on: Release	 Low fuel: Refill
---	--

 Door/Tailgate open: Close door(s)/tailgate	 FCW (<i>blinks</i>): Brake or change lanes
 Seat belt reminder: Fasten seat belt(s)	 LDW (<i>blinks</i>): Steer to stay in lane
 Low tire pressure: Add air	 Maintenance Minder™: Make dealer appointment
 Immobilizer (<i>blinks</i>): Use other vehicle key and see your dealer	

On/Off Indicators

 PASSENGER AIRBAG OFF (located on center panel)	 Fuel economy on
 VSA OFF	 Turn signals/hazards on
 FCW off	 CRUISE MAIN on
 High beams on	 CRUISE CONTROL on
 Exterior lights on	