
Navigation System

See the navigation system manual for more information.

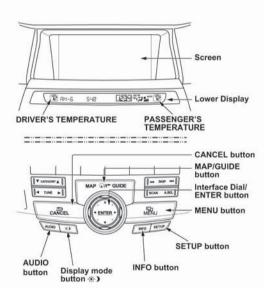

Screen: All selections and instructions are displayed on the screen. The display is not a "touch screen" – you enter information into the system either by voice or by using the interface dial.

Tip: Clean the screen with a soft, damp cloth. A mild cleanser intended for eyeglasses or computer screens may be used, but harsher chemicals may damage the screen.

Note: Shifting into Reverse (R) activates the rearview camera; the image is displayed on the screen.

AUDIO button: Press to display the audio screen.

MAP/GUIDE button: Displays the map. When en route, switches the display between the map and guidance screens.

MENU button: Displays the "Enter a destination by" screen. When en route, displays the route options on the MENU screen.

SETUP button: Displays the Setup screen to change and update information in the system.


INFO button: Displays the screen for selecting Cellular Phonebook Voice Command Help, Map Legend, Calendar, Calculator, and Key to Zagat Ratings. More options are available by pushing the Interface Dial to the right.

Interface Dial/ENTER button: Moves left, right, up, and down. Use to move the highlighting around the display, to scroll through lists, or to look around a displayed map. Push in to enter the selection into the system.

CANCEL button: Cancels the current screen and returns to the previous screen.

CLOCK: Controlled by the Navigation system and can automatically compensate for daylight savings time and time zone changes. See your navigation system manual for details.

Map Screen Legend

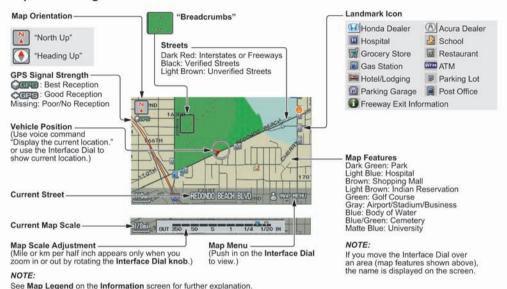

Using the Voice Control System

The voice control system allows for convenient, hands-free operation of navigation and selected audio and climate control system functions. For a complete list of voice commands, see the *Navigation System Manual* or press the INFO button, then select VOICE COMMAND HELP.

TALK/BACK Buttons



It is important to remember that two sets of TALK/BACK buttons are used. The set shown is for use **only** with the navigation system and selected audio and climate control functions.

Note: The other set of TALK/BACK buttons is used only for HFL operation (see Personalized Settings).

 TALK button: Activates the voice control system (audio system mutes). Pull forward on the TALK button, then release it and wait for a beep. Give a voice command in a clear, natural speaking voice (without pause) within 3 seconds. Otherwise, the system will prompt you to repeat your command.

Tip: A multiple beep sound indicates a function is unavailable, or is already set. For example, if fan speed is set to three, and you say "Fan speed three," you will hear "beep-beep-beep."

 BACK button: When viewing a menu screen, returns the display to the previous screen. It is enabled for navigation commands only, but can cancel an audio or climate command up to one second after the command confirmation.

General Voice Control Guidelines

The voice control microphone is located in the ceiling console. To properly control the system:

- After pressing and releasing the NAVI TALK button, wait for the beep, then give a voice command.
- Give commands in a clear, natural speaking voice without pausing between words.
- If the system cannot recognize your command because of background noise (rough pavement, other high road noise situations, etc.), speak louder.
- Voice commands from the front passenger are not accepted by the system.

Optimizing Voice Control

To optimize voice recognition and hear the voice feedback, we recommend:

- · Avoid running the fan at maximum speeds.
- Adjust the vents so they don't blow directly at the microphone in the ceiling.
- Minimize the amount of wind noise from open windows or the sunroof.

Voice Control Assistance

- To hear the valid voice commands for any screen, simply say "Help."
- To repeat the instructions for how to use any screen, say "Repeat voice."
- While learning the commands, we suggest that you ensure that the navi volume and "Voice feedback" settings in the Setup "Basic settings" menu are set to ON. The feedback provides confirmation of your command and provides the best way to say the command.

Commonly Used Voice Commands

Display Commands Thermo Vertor Food Vertor Food THE COMMAND AND ADDRESS OF FOOD THE COMMAND ADDRESS OF FOOD THE COMMAND AND ADDRESS OF FOOD THE COMMAND ADDRESS OF FOOD THE COMMAND AND ADDRESS OF FOOD THE COMMAND AND ADDRESS OF FOOD THE COMMAND AND ADDRESS OF FOOD THE COMMAND ADDRESS	Navigation Display Commands Commands accepted on a map guidance screen Display current location Display north up Display heading up Display zoom in Display zoom out Display menu Go home Setup Display or hide (choose one): ATM Post office Gas station Grocery store Restaurant	General Commands Commands accepted on a menu and map guidance screens Display map Display (main) menu Display information Voice command help (The system reads and lists all of the commands, starting with Navigation General Commands.) Help Setup
Information	General Information Commands Commands accepted on the map guidance screen and Information screen 1 How long to the destination? (after setting a destination) How far to the destination? (after setting a destination) Display destination map (after setting a destination) Display entire route (after setting a destination)	
Audio	Radio (AM/FM/XM) Commands Commands accepted on most screens • Radio on/radio play • Radio off • Radio select AM/FM1/FM2/XM1/XM2 • Radio #FM (# = frequency) • Radio seek (up/down) • Radio preset 1/2/3/4/5/6 • XM channel # (# = 1–255) • XM preset (choose one: 1/2/3/4/5/6)	DVD or CD Commands Commands accepted on most screens CD play CD play disc # (# = 1-6) Play track # (# = 1-30) Play next disc Play previous disc Track repeat Disc repeat Normal play

Climate Control Commands Climate Control Commands accepted on most screens Fan speed 1/2/3/4/5/6/7 Air conditioner on Temperature # degrees (# = 57–87) Air conditioner off Driver's temperature # degrees (# = 57–87) Climate control off • Passenger's temperature # degrees (# = 57–87) Climate control automatic Climate control fresh air · Temperature dual mode on Climate control recirculate · Temperature dual mode off Climate control defrost · Temperature up/down · Temperature max hot/cold Rear defrost on Rear defrost off Find Nearest Find Nearest Commands Commands accepted on a map guidance screen · Find nearest (choose one): Zagat restaurant Mexican restaurant Gas station - Tourist attraction Bank - Movie theater Shopping - Camping Honda dealer

Tip: To plot a route to a specific destination using voice control, say "Display menu," then enter the address. See the following page for an example of this process.

Entering a Destination Using Voice Control

Try this procedure (and other features described in the navigation system manual) while in your vehicle to help familiarize yourself with the system and its capabilities.

Note: Each time you enter a voice command, press and release the Talk button. When you hear a beep, say your command.

- Say "display menu." The display changes to the Enter Destination by screen.
- 2. Say "address."



Say "city" (or "change state" if necessary).



Say the name of the city or say "select current city."



- A list of city names appears. Say the number listed next to the desired city.
 - If the desired city is not listed, it may be included within a larger, nearby city. Press the BACK button, then say the name of that city.
 - Some cities (unincorporated townships, etc.) may be difficult to find; press the BACK button twice, and enter the street name before the city name.
- Say the street name. Do not say the direction (north, south, east, or west) or type (street, avenue, etc).
- Say the number listed next to the name of the desired street.



- Say the street address number as a continuous series. For example, for the address number 15200, say "one, five, two, zero, zero, done."
- The system displays the "Calculate route to" screen. Say "okay" to display a map of the route. The plotted route appears in blue.



Tip: While on a route, you can cancel or change your current destination or select other options by saying "display menu."



Always check the Owner's Manual for more operating information and safety features.