 
Audio System

LX Models



EX-L, EX-L Models (EX-L model shown)



With Navigation



Audio Controls

Note: Control operations are described. Check your vehicle for the types of controls used.

TUNE/Selector knob/bar:

Changes the radio station.

AM/FM/XM buttons:

Selects AM, FM1, FM2, XM1, or XM2 (if equipped)

Preset Buttons:

Selects the desired station stored in a band (AM/FM1/FM2/XM1/XM2). To store a station, press and hold the desired preset button until you hear a beep, then release.

SKIP buttons/bar:

Seeks upward (>>) or downward (<<) to find the next station with a strong signal.

A.SEL button/bar:

Turns on AUTO SELECT – This scans both bands and stores the strongest stations in the preset buttons of each band.

Tip: You will not lose your selected presets. They will come back when you turn off AUTO SELECT.

CD (CD/AUX) button:

Selects the CD player or CD changer.

Audio Display

Audio information is shown in the center display located above the audio controls.

(EX, EX-L display shown) (Navigation display shown)





Note: When the parking or headlights are on, the instrument panel brightness control knob can be used to adjust audio system illumination.

Selector Knob/Interface Dial (if equipped)

Most audio system functions can be controlled by standard buttons, bars, and knobs. In addition, you can access some functions by using the selector knob on the audio system. Press ENTER to select an item.

Selector Knob



Interface Dial



Interface Dial (models with Navigation)

Many audio and navigation functions can be accessed or controlled by using the interface dial. The dial consists of:

- The selector dial Turn clockwise or counterclockwise to scroll through the display items and adjust the levels.
- · ENTER BUTTON Use to select items.

SOUND Adjustment

Sound level adjustment is accessed by pressing the SOUND button. On EX and EX-L models, the selector knob (non-navigation models) can be used. For these models, do this:

- 1. Press and release the MENU button.
- 2. Turn the selector knob to move to any of these settings:

BASS TREBLE FADER BALANCE SUBW (EX-L only) SVC CLOCK ADJUST (on 6-CD system, this is accessed by the MENU button).



- 3. Press the selector knob to choose the desired setting.
- 4. Turn the selector knob to adjust the setting up or down.
- 5. Press the MENU button to return to the original display.

Using the Remote Audio Controls

VOL buttons: Adjusts the volume.

MODE button: Changes the system to the next mode (AM/FM1/FM2/CD/XM1/XM2).



CH buttons:

Radio:


- Press and release to change to the next of previous preset station.
- Press and hold until you hear a beep. The next station (+ or -) is selected.

CD:

 Skips to the beginning of the next track or the start of the current track.

Auxiliary Input Jack

The auxiliary input jack is located inside the center console compartment. It will accept auxiliary input from standard audio accessories. To use, connect a compatible audio unit to the jack. To use a connected compatible audio unit, press the AUX or CD/AUX button

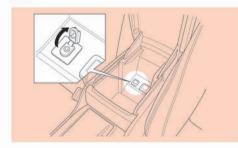

Radio Data System (RDS)

When an RDS radio station is selected, the station frequency and name are displayed. Otherwise, only the frequency is displayed.

Program Service (PS) Name Display - When selected, the name of the selected RDS station is displayed. To turn ON or OFF, press and release the TITLE button. "PS ON" or "PS OFF" appears in the display.

When either FM band is selected, RDS program category can be selected, using the either side (▲ or ▼) of the CATEGORY (models with XM)/FOLDER (models without XM) bar to display and select a RDS group. See the owner's manual for the principle RDS categories.

RDS Search - Press and release either side of the SKIP bar/button to search up and down for the next RDS station in your selected category with a strong signal. If ALL is selected, all RDS stations will be searched.

RDS SCAN - Press and release the SCAN button to sample all available RDS stations in your selected RDS category. If ALL is selected, all available RDS stations will be scanned. Press the button again when a desired station is reached.

Note: RDS Search and SCAN features function with the PS name display on or off.

Disc Player Contols

Note:

- Control operations are described. Check your vehicle for the types of controls used.
- Files in MP3/WMA mode are the equivalent of tracks in CD mode.

LX Models



EX-L, EX-L Models



With Navigation



LOAD button (6-CD changer only): Loads a CD in the next available slot (1–6) or the slot selected.

Eiect button: Eiects the disc currently selected.

SKIP button/bar: Press and release ▶▶I to skip forward to the next track, or I 4 to skip backward to the beginning of the current track. Press and hold either side to move rapidly within a track.

FOLDER bar (non-XM)/CATEGORY bar (XM equipped) (MP3, WMA Mode): Press the (*) to skip to the beginning of the next folder, or the (*) side to skip to the beginning previous (*) folder.

DISC REPEAT: Select from menu items to continuously replay the current disc (6-CD changer).

©REPEAT (Track or File): Press and release RPT on the RPT/RDM bar to continuously replay a track (files in MP3 or WMA mode). Press and hold for 2 seconds to cancel.

©FOLDER REPEAT bar: Press and release RPT on the RPT/RDM bar two times to replay in order all tracks/files in the selected folder, in the order they were recorded.

©RANDOM bar (within a disc): Press and release RDM on the RPT/RDM bar to play all the tracks on a disc in random order. Repeatedly press and release to randomly play files in MP3 or WMA format.

OFOLDER RANDOM bar: Press and release RDM on the RPT/RDM bar 2 times to play all the files in a selected folder in random order. A beep sounds and F-RDM appears in the display when activated.

SCAN TRACK/FILE SCAN/DISC SCAN: Press to hear 10-second samples of all tracks or files on the disc, in recorded order. SCAN appears in the display when active. Press for 2 seconds to deactivate this feature.

F-SCAN (FOLDER SCAN) (MP3, WMA Mode): Press two times to sample 10 seconds of the first file of each folder. F-SCAN appears in the display. To turn off, press the SCAN button or either side of the SKIP button.

TITLE button: Press to display information about tracks (CD mode), files or folders (MP3/WMA format).

Playing Discs

To load a single CD in the player:

Insert the CD halfway into the CD slot. The drive pulls it in the rest of the way. It takes a few seconds for the CD to load.

To remove a CD:

- 1. Press the Eject button.
- 2. Remove the CD as it comes out.

To load multiple CDs in the 6-CD changer:

- 1. Press and hold LOAD button until the system beeps.
- 2. When "LOAD" is displayed, insert a CD into CD slot.
- 3. When "LOAD" is displayed again, insert the next CD.
- 4. Repeat until all six positions are loaded.

Tip: If you are not loading CDs into all six positions, press the CD button after the last CD is loaded, or wait 10 seconds and the system stops the load operation.

To remove multiple CDs in the 6-CD changer:

- 1. Press and hold the Eject button until system beeps.
- 2. Remove the CDs as they come out.

Tip: If you eject the disc, but do not remove it, the system automatically reloads it after 10 seconds.

Play Mode

Press the TITLE button and the following is displayed:

- · CD text data Album, artist, track name
- MP3 or WMA format Folder, file name, artist, album, and track tag.

©EX, EX-L models: Use the selector knob or interface dial to access PLAY MODE, then select the adjustment to be made.

Note: When MP3 or WMA discs are playing, PLAY MODE appears as a selection. This mode contains 9 sub-modes.

 


Changing Folders, Tracks/Files (MP3 and WMA modes)

- 1. The selector knob can be used to select a folder or track/file on the list.
- 2. Press ENTER (push in the selector knob). The display changes to a three-folder list.



Turn the knob to scroll to a desired folder then press ENTER to select the folder. The display changes to a three-track list. Turn the knob to scroll to a desired folder, then press ENTER to select the track.




Select Repeat, Random, or Scan Modes

To select any of these modes:

- 1. Press the MENU button to display menu selections.
- 2. Turn the selector knob to display PLAY MODE and press ENTER.



 3. Turn the selector knob to the desired mode and press ENTER.



To turn off any of these features:

- 1. Press the MENU button, select PLAY MODE and press ENTER.
- 2. Select NORMAL PLAY and press ENTER.

Always check the owner's manual for more operating information and safety features.