

Personal Settings

Driver's Position Memory Settings (DPMS)

(Touring)

Two sets of positions for the driver's seat and outside mirror can be stored in memory. They can be selected by pushing the corresponding memory button on the driver's door.

Storing a Driving Position in Memory

1. With the vehicle in Park (P) and the ignition switch in the ON (II) position, adjust the seat and the mirrors to the desired positions.
2. Press and release the SET button. When you hear a beep, immediately press and hold a MEMORY button until you hear two beeps. The indicator in the memory button will come on.

Tip: Only one position for each button can be stored. Each new stored setting erases the previous setting.

Selecting a Memorized Position

1. Move the shift lever to Park (P).
2. Press the desired memory button (1 or 2) until you hear a beep, then release the button. When the adjustments are complete, you will hear two beeps, and the indicator will remain on.

