## **Power Tailgate**

## Power Tailgate (Touring)

To open or close the tailgate:

- Press and hold either the tailgate button on the remote, or the switch in the driver's door pocket, for about 1 second.
- Both front doors must be unlocked to use the power tailgate.
- The power tailgate can also be closed by pressing the button on the tailgate.



**Tip:** If the hatch glass is open, remote transmitter operation is canceled until the hatch is closed.