


Rear Entertainment System

DVD/CD Controls (on Remote Control) (if equipped)

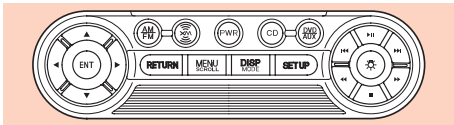

PLAY/PAUSE (▶||) button (remote): Plays or pauses the CD/DVD.

SEEK/SKIP buttons (remote): Skips to the beginning of the next track (▶▶) or the track currently playing (◀◀).

RWD/FWD buttons (remote): Moves rapidly within a track, either forward (▶) or backward (◀), when pressed and held. Release to resume playback.


MENU button: Selects the DVD menu (if the DVD has a menu).

ENT button: Enters a desired menu item on a DVD (if the DVD has a menu).

Tip: Use the arrow buttons to move to the desired menu item.

Note: For detailed operating information for the RES, see the owner's manual. For an overview of the features and functions of the RES, view the Honda Pilot DVD Demonstration Disc supplied with the vehicle.

Headset Operation (if equipped)

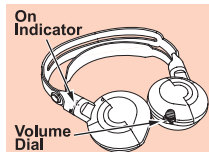

Pivot the earpieces outward to turn the headset on.

Note: The headsets do not work in the front seats or outside of the vehicle. If they do not receive a signal for several minutes, they turn off.