

Tire Pressure Monitoring System (TPMS)


Monitors the vehicle's tire pressures.

How It Works

Each tire valve stem contains a TPMS sensor.



When the tire pressure drops significantly below recommended levels, the low tire pressure indicator comes on.

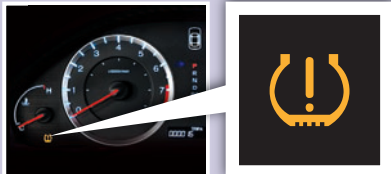

What to Do

Visually inspect the tires and **use** a tire air pressure gauge to check which tire(s) have low pressure.



Inflate the tire(s) to the recommended pressures listed on the label on the driver's doorjamb.

