



# Dashboard Details

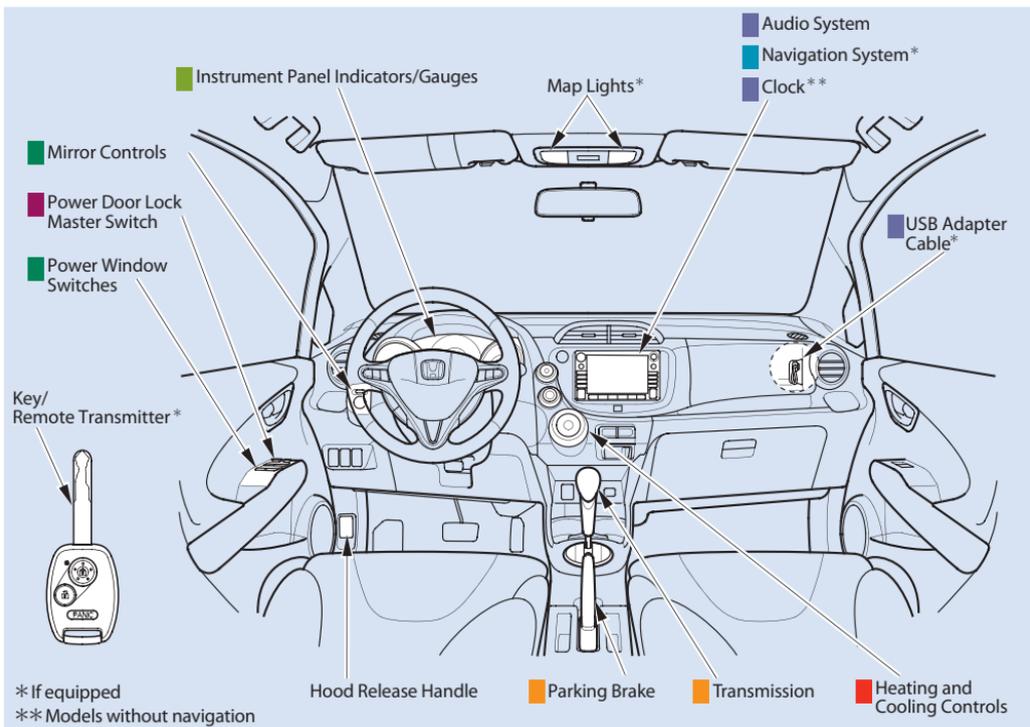

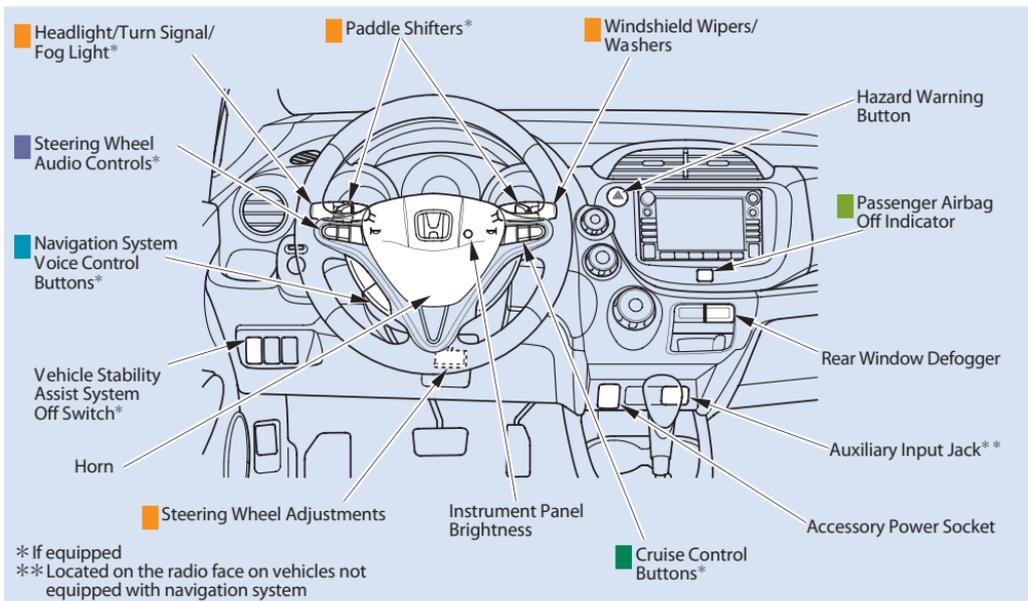

### Things You Need to Know

- See *About This Quick Start Guide* on the rear cover.
- See the owner's manual for detailed information and instructions on items marked with an asterisk (\*).
- Always check your tire pressures when the tires are cold.
- The malfunction indicator lamp may come on if the fuel fill cap is not tightened at least one click.

**\* Check the owner's manual for additional information and instructions.**


### Dashboard Details

## Instrument Panel Indicators

Indicators should go out shortly after starting the engine. If an indicator stays on or comes on while driving, follow instructions in the description.

- Red indicators are critical and require immediate attention.
- Amber indicators are urgent and require attention as soon as possible.
- Blue and green indicators are used for general information.

**Note: It is important to see the Instruments and Controls section in the owner's manual for a thorough explanation and/or instructions for each indicator.**

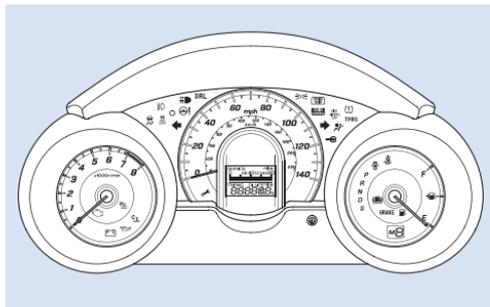

**High temperature indicator:** Monitors coolant temperature. The indicator is off in normal driving conditions. If the indicator blinks in severe driving conditions, turn off the A/C and decrease your speed. If the indicator remains on, turn off the engine as soon as safely possible; see owner's manual for more information.



**Charging system indicator:** Battery is not being charged; see dealer as soon as possible.



**Low oil pressure indicator:** If it comes on and stays on, the engine oil pressure is low; turn the engine off as soon as safely possible and refer to the owner's manual for more information. If it flashes, there is a momentary loss in oil pressure, indicating the oil level may be low.



**Supplemental restraint system (SRS) indicator:** SRS malfunction; see dealer as soon as possible\*.

**BRAKE**

**Parking BRAKE and BRAKE system indicator:** Parking brake on, low brake fluid level, or there is a problem with the brake system.



**Door or tailgate open indicator:** The indicator comes on if any door or the tailgate is not fully closed.



**Seat belt reminder indicator:** Fasten seat belts. If you drive with your seat belt unfastened, it flashes and a beep sounds.



**Low temperature indicator:** Monitors coolant temperature. Comes on when the engine is cold. If the indicator is on when the engine is at normal operating temperature, see your dealer as soon as possible.



**Malfunction indicator lamp (CHECK engine light):**

Emissions system malfunction; have your dealer inspect the vehicle.



**Maintenance Minder indicator:** Maintenance is coming due or is due now (oil change, tire rotation, etc.). Information is displayed in the Information Display. See owner's manual for complete details.



**Low fuel indicator**



**Anti-lock Brake System (ABS) indicator:** ABS malfunction-vehicle has normal braking, but no ABS; see dealer as soon as possible.



**Electric Power Steering (EPS) indicator:** If the indicator comes on and stays on, there is a problem in the EPS system. The vehicle may be harder to steer. Stop the vehicle in a safe place, and turn off the engine. Reset the system by restarting the engine. If the indicator does not go off or comes on again, have a dealer inspect the vehicle.



**SIDE AIRBAG cutOFF indicator:** Passenger's side airbag is off and will not deploy during a crash\*.



**PASSENGER AIRBAG OFF indicator:** Passenger's front airbag is off and will not deploy during a crash\*.

**Note:** Do not place objects or feet under the front seat; this could prevent the airbags from working properly.



**Daytime Running Lights (DRL) indicator:** Comes on when you turn the ignition switch ON (II), the headlight switch is off, or the parking brake is released, or if there is a problem in the circuit.

 **Turn signal/hazard warning indicators**

 **Lights on indicator:** Indicates parking lights or headlights are on.

 **Fog lights on indicator (if equipped):** Fog lights are on. Fog lights only work when the headlights are on low beam.

 **High beam indicator**

 **Cruise control main indicator (if equipped):** Cruise control is turned on by pressing the Cruise button.

 **Cruise control indicator (if equipped):** Cruise control is set.

 **Immobilizer system indicator:** Flashes briefly when the ignition switch is turned ON (II). The indicator blinks if an improperly coded key is used to try to start the engine.



**CHECK FUEL CAP Indicator (information display message):** If the fuel cap is loose or missing, a "CHECK FUEL CAP" message appears as text in the information display after you start the engine. Turn the engine off and confirm that the fuel cap is installed. If the cap is loose, retighten it until it clicks at least once. It takes several days of normal driving to clear the message.

 **Security system indicator (if equipped):** This indicator blinks when the security system is armed.

 **TPMS Tire pressure monitoring system (TPMS) indicator:** TPMS malfunction; have dealer inspect the vehicle.

 **Low tire pressure indicator:** One or more of your vehicle's tires is significantly under-inflated. Stop, inspect all tires, and add air as required.



**Vehicle stability assist (VSA) system indicator (if equipped):** VSA malfunction-comes on briefly when the ignition switch is turned to ON (II). It flashes when VSA is active. If it comes on at any other time, there is a problem with VSA. Have your dealer inspect the vehicle.



**VSA off indicator (if equipped):** Comes on when you turn the VSA system off.

### ***Resetting the Trip Meter***

1. Press the select/reset knob on the instrument panel to select tripmeter.
2. Press and hold the select/reset knob until the number resets to "0.0", then release.

### ***Adjusting Instrument Brightness***

To adjust the brightness, turn the instrument panel brightness control knob.

***Tip:*** The instrument panel dims when the parking lights or headlights are turned on, but you can change this brightness level. Turn the lights on at night, and adjust the brightness to the desired level.

***\* Check the owner's manual for additional information and instructions.***