
Navigation System

Navigation System

See the Navigation System Manual for more information.

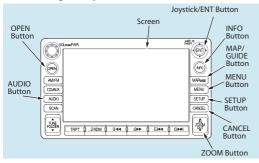

Screen: This is a "touch screen," meaning you can enter information by touching images with your finger (or by using the joystick or voice control).

Tip: Clean the screen with a soft, damp cloth and mild cleaner intended for eyeglasses or computer screens.

Note: The covered slot inside the unit is for the navigation DVD only. Access only when installing a purchased update DVD. The navigation DVD slot cannot be used to play audio CDs or DVD audio or video discs. The PC card slot is designed to play MP3 or WMA audio files. See the audio section for additional information. Joystick/ENT button: Moves left, right, up, and down, and in to make a selection. Use to move the highlighting around the display, to scroll through lists, or to look around a displayed map.

INFO button: Displays the screen for selecting Voice Command Help, Map Legend, Calendar, and Calculator.

MAP/GUIDE button: Displays the map. When en route, switches the display between a map screen and the guidance and direction list screen.

MENU button: Displays the "Enter destination by" screen. When en route, displays "Change route by" screen.

SETUP button: Displays the Setup screens to change and personalize information in the system.


CANCEL button: Cancels the current screen and returns to the previous screen display.

ZOOM buttons: Press ZOOM (\blacktriangle) to zoom in (to show more detail), or ZOOM (\blacktriangledown) to zoom out (to show more area and less detail).

AUDIO button: Press to display the audio screen. AM/FM, CD/AUX, AUDIO, SCAN, TUNE/FOLDER bar: See audio section for additional information.

OPEN/CLOSE button: Press to use the disc player and PC Card slots. To close, press the "CLOSE" button on the bottom of the screen.

CLOCK: Displayed on the screen. Controlled by the navigation system and automatically compensates for daylight saving and time zone changes (adjust in Setup).

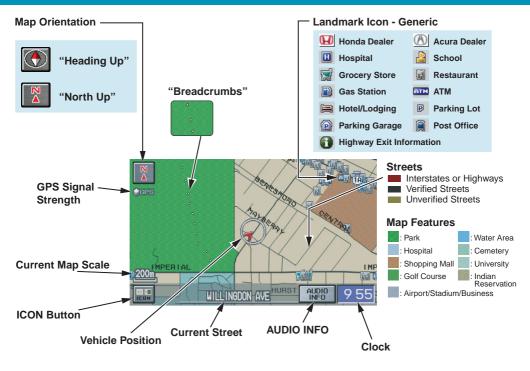

For a full explanation of each of the items on this page, see the appropriate section of the Navigation System Manual.

System Start-up

When you turn the ignition switch to the ON (II) position, the system takes several seconds to boot up, then the Disclaimer screen appears with an OK button. Select OK and a map screen appears.

If you do not select OK:

- The clock is displayed after 30 seconds.
- Some items in the information or Setup screens will not be available, and they will show up darkened.

Selecting Item

On most screens, there are items that can be selected, such as:

- Buttons with titles (e.g., OK, Return).
- · Items in a list.



These can be selected by using either the voice control system (by saying the list number), using the joystick, or by touching the item on the screen. **Tip:** Buttons that are darkened indicate an item that cannot be selected.

Using the On-screen Keyboard



When the system needs information from you, the display changes to a keyboard. Say or select the letters and/or numbers to enter the information. This information can be entered either by voice control, using the joystick, or by touch.

Entering Your Destination

When you say or select MENU, the display changes to the Enter Destination by screen. From this screen, you can select a variety of options.

C Address	SR Intersection
Places	🖓 Map input
Destination	Destination
Address Book	Go Home

Driving to Your Destination

Once you have selected a destination, the display changes to the Calculate Route to screen. From this screen, you can select a variety of options.

Calculate		ie to: NT'L AIRPO	RT ARRIVAL	8
UNNAME				
RICHMO				
(604)27	6-610	1		
	•		Þ	
	Add	rese Book	Today's	Deet,
View Bo	utes	View Des	t Map	OK

Information Features Provides tutorials on system features and operation. When you say or select "Information," the following screen appears.

	Voice Command Help
	voice command Help
	Map Legend
10	Calendar
	Calculator

System Setup

Allows you to change or personalize system information. Say or select "Setup," and this screen will appear.

Set up so	reent						More
Bright,	4 [T.	1.1	1	1-1	111	[]
Volume	Off	•	11	11	11	11111	1 •
Disp1ay		AL.	<i>t</i> to	D	вy	Night	Clock
Guidance	5	Min			lorma1	Мах	
Contrast					Ad	Just	
							Exit