 


Voice Recognition

Voice Recognition

See the Navigation System Manual, or press the INFO button, select Voice Command Help, and then Getting Started for a comprehensive tutorial on how to use this system. Help is provided on:

- Using the TALK button.
- Knowing the commands.
- Speaking clearly.
- Limiting background noise.
- Adjusting the voice feedback.



Tip: If the microphone picks up voices other than yours, the system may not understand your command.

To control the system properly:

- Be sure you are on the correct screen or mode.
- Close the windows.
- Set the fan speed to 1 or 2.
- Adjust the airflow from the center vents so it does not blow against the ceiling microphone.

TALK button: Activates the voice control system (audio system mutes). Press and release the button, wait for a beep, and then give a voice command in a clear, natural speaking voice (without pause).

BACK button: When viewing a menu screen, returns the display to the previous menu screen (until reaching a map screen), and replays the last prompt. Enabled for navigation commands only. It can cancel audio or climate commands up to one second after the command confirmation.

Commonly Used Voice Commands

Tip: A beep means the chosen voice command is not available for the current screen.

Navigation Commands:

Enabled on a map-guide screen

Display menu

Display current location

Go home

Setup

Find nearest ATM/gas station/
restaurant/bank/shopping/
parking garage/parking lot/
Honda dealer

Display/hide ATM/gas station/post
office/restaurant/grocery store

Display map

Setup Commands:

Enabled on setup screen 1

Brightness up/down

Volume up/down/off

Display auto/day/night/clock

PC Card Commands:

Enabled on most screens

Card play

Card play track # (#:1-30)

Card skip forward/back

Card track random

Card folder random

Card folder repeat

CD Commands:

Enabled on most screens

CD play

CD play track # (#: 1-30)

CD skip forward

CD skip back

CD track random

CD track repeat

CD track scan

CD folder random

CD folder repeat

CD folder scan

Radio Commands:

Enabled on most screens

Radio on

Radio off

Radio select AM/FM1/FM2

Radio # FM/AM (#: frequency)

Radio seek (up/down)

Radio preset 1/2/3/4/5/6

* Check the owner's manual for additional information and instructions.

Navigation/
Voice Recognition