## **Key Fob**

## **Keyless Entry With Remote**



**Unlock button:** Press once to unlock driver's door. Press again to unlock passengers' doors and the tailgate.

Tip: If you do not open a door within 30 seconds, the doors will relock.

**Lock button:** Press to lock all doors and the tailgate. Press again within 5 seconds, and a beep verifies that the doors are locked and the vehicle is armed (if equipped with security system).

**Tip:** The doors will not lock if any door is not fully closed or the key is in the ignition switch.

**Panic button:** Press and hold for two seconds to turn on the panic mode. Press any button on the remote transmitter or turn the ignition to the ON (II) position to turn off panic mode.

**Tip:** The panic mode will not turn on if the ignition is in the ON (II) position.

Tailgate/Hatch Glass Button: Depending on the trim level of your Pilot, pressing this button will open either the tailgate or the hatch glass. On the touring model, press the button again and the tailgate glass will close.