

DRIVING POSITION MEMORY SYSTEM (DPMS) (if equipped)

Store a driver's seat position into memory for each remote transmitter.

Programming DPMS

1. **Turn** the ignition switch to ON (II). **Shift** into Park (P).



2. **Adjust** your seat to the preferred setting.



3. **Press and hold** the SET button until you hear a beep, then release.



4. **Press and hold** the memory button # corresponding to the remote (1 or 2) you are using until you hear two beeps.



Note: A stored memory position is linked to the corresponding keyless remote (1 or 2). Each item begins to adjust when you unlock the driver's door with the remote and enter the vehicle.