













INSTRUMENT PANEL INDICATORS

Briefly appear with each engine start. Red and amber indicators are most critical. Blue and green indicators are used for general information.



Malfunction Indicators


If an indicator remains on, there may be a problem; see a dealer


 Charging system	 ABS (anti-lock brake system)
 Low brake fluid	 IMA System
 Low oil pressure	 Malfunction lamp (check engine light)
 SRS (supplemental restraint system)	 VSA (vehicle stability assist)
 EPS (electronic power steering)	 TPMS (blinks and stays on) (tire pressure monitoring system)
 Low temperature	 Transmission (blinks)

Condition Indicators

Action is needed by driver



 Parking brake on: Release	 Seat belt reminder: Fasten seat belt(s)
 Door/Hatch open: Close door(s) / hatch	 Low fuel: Refill

 Low tire pressure **on**:
Add air

 High temperature indicator:
Pull over and cool down engine

 Message indicator:
See MID

On/Off Indicators

 SIDE AIRBAG OFF	 NORMAL NORMAL mode on
 PASSENGER AIRBAG OFF (center audio panel)	 ECON mode on
 VSA Activation OFF	 Fog lights on (if equipped)
 Auto Idle Stop on (blinking)	 Immobilizer Flashes: improperly coded key; use correct key
 CRUISE MAIN on	 Exterior lights on
 CRUISE CONTROL on	 Turn signals/hazards on
 SPORT SPORT mode on	 High beams on