

Opening and Closing the Fuel Fill Door

To open, **push and release** the fuel door in the area shown until you hear a click and it pops open.



To close, **push** the fuel door flush with the body.

