## AUTO DOOR LOCKS

# Default Lock Setting The doors are preset to lock when your vehicle

## Default Unlock Setting







Only the driver's door is preset to unlock when you:

reaches about 10 mph.

- **Shift** into Park (P) for automatic transmission vehicles.
- **Turn** the ignition switch to ACC (I) for manual transmission vehicles.

Program how and when the vehicle doors automatically lock and unlock.

# Programming the Auto Door Unlock Setting

To program all doors to unlock when you shift to Park:

1. **Close** the driver's door. **Shift** into Park.









2. Turn the ignition switch to ON (II).



4. Within 5 seconds, **turn** the ignition switch to LOCK (0).


 Press and hold the unlock side of the master lock switch for about 10 seconds. In that time, you will hear





### Programmable Auto Door Lock/Unlock Settings

Below are the options you can choose. See *Auto Door Locking/Unlocking* in your owner's manual for instructions on programming these settings.

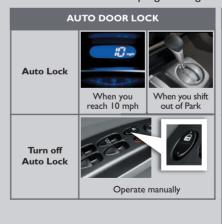



2