






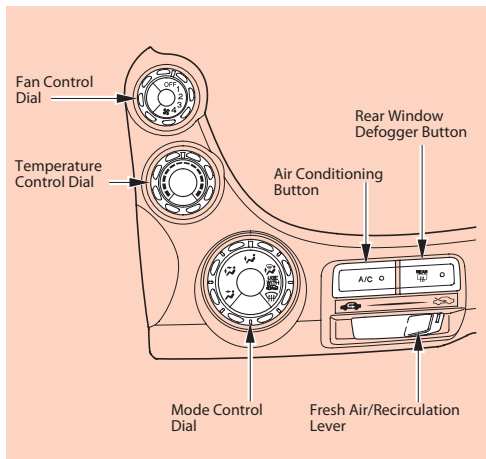


Climate Control

Climate Controls





Manual Operation

Mode control dial: Turn to select vents for airflow.

-  Airflow comes from the dashboard vents.
-  Airflow is divided between the dashboard vents and floor vents.
-  Airflow comes from the floor vents.
-  **(use with ):** Airflow is divided between the floor vents and windshield (defroster) vents.
-  **(use with ):** Airflow comes from the windshield (defroster) vents to clear the windshield of fog and frost.

Defroster Operation: When front defroster modes are selected, the A/C turns on automatically to help dehumidify the air. The A/C cannot be turned off, even if the A/C indicator is off. When another mode is selected, the A/C returns to its original setting, either on or off, as displayed by the A/C indicator. The defroster will deliver warm air when the temperature dial is set to a warmer temperature even with A/C on. The A/C does not turn on when the rear defroster is selected.

Tip: To rapidly clear **frost** on the windows, slide the lever to the  mode. When the windows **start fogging**, put the lever back to the  mode.

Tip: Keep the insides of the windows clean. Windows fog more easily when they are dirty.

Temperature control dial: Turn to select the desired temperature.

Fan control dial: Turn to change the fan speed. Turn to OFF to turn the system completely off.

Tip: To keep stale air and mustiness from collecting, you should have the fan running at all times.

Fresh air/recirculation lever: Slide the lever to change between Recirculation mode (inside air) and Fresh Air mode (outside air). Use Recirculation mode to heat or cool the interior more quickly or to keep out unwanted outside air (smoke, dust, etc.).

Tip: Leaving the system in Recirculation mode with the A/C off can cause the windows to fog up. Switch to Fresh Air mode as soon as the interior reaches a comfortable temperature or the outside conditions clear.

Tip: Air always flows through the side air vents to help keep the side windows clear. You can close the side vents by rotating each vent.

Air conditioning (A/C) button: Press to turn A/C on (indicator lit) and off.

Tip: If the interior is very warm from being parked in the sun, you can cool it down more rapidly by opening the windows slightly to force out the warm air while driving. When the interior has cooled down, close the windows.

Tip: With the A/C off, the system cannot regulate the inside temperature if you set the temperature control dial below the outside temperature.

Tip: A/C places an extra load on the engine. Check the high temperature indicator on the instrument panel. If it begins to blink, turn the A/C off until the indicator goes off.

Rear window defogger button: Press to turn the rear window defogger on (indicator lit) and off to clear the rear window of fog or frost.

Tip: You must manually shut off the rear window defogger when it is no longer needed.

*** Check the owner's manual for additional information and instructions.**