

Voice Recognition

Voice Recognition

See the Navigation System Manual, or press the INFO button, select Voice Command Help, and then Getting Started for a comprehensive tutorial on how to use this system. Help is provided on:

- Using the TALK button.
- Knowing the commands.
- Speaking clearly.
- Limiting background noise.
- Adjusting the voice feedback.



Tip: If the microphone picks up voices other than yours, the system may not understand your command.

To control the system properly:

- Be sure you are on the correct screen or mode.
- Close the windows.
- Set the fan speed to 1 or 2.
- Adjust the airflow from the center vents so it does not blow against the ceiling microphone.

TALK button: Activates the voice control system (audio system mutes). Press and release the button, wait for a beep, and then give a voice command in a clear, natural speaking voice (without pause).

BACK button: When viewing a menu screen, returns the display to the previous menu screen (until reaching a map screen), and replays the last prompt. Enabled for navigation commands only. It can cancel audio or climate commands up to one second after the command confirmation.

Commonly Used Voice Commands

Tip: A beep means the chosen voice command is not available for the current screen.

Navigation Commands:

Enabled on a map-guide screen
Display menu
Display current location
Go home
Setup
Find nearest ATM/gas station/
restaurant/bank/shopping/
parking garage/parking lot/
Honda dealer
Display/hide ATM/gas station/post
office/restaurant/grocery store
Display map

Setup Commands:

Enabled on setup screen 1
Brightness up/down
Volume up/down/off
Display auto/day/night/clock

PC Card Commands:

Enabled on most screens
Card play
Card play track # (#:1-30)
Card skip forward/back
Card track random
Card folder random
Card folder repeat

CD Commands:

Enabled on most screens
CD play
CD play track # (#: 1-30)
CD skip forward
CD skip back
CD track random
CD track repeat
CD track scan
CD folder random
CD folder repeat
CD folder scan

Radio Commands:

Enabled on most screens
Radio on
Radio off
Radio select AM/FM1/FM2
Radio # FM/AM (#: frequency)
Radio seek (up/down)
Radio preset 1/2/3/4/5/6

* Check the owner's manual for additional information and instructions.

Navigation/
Voice Recognition