

CD LIBRARY (EX ONLY)

Store up to 18 audio CDs in the system memory.

Recording an Audio CD

1. **Insert** an audio CD.



2. The system asks if you want to record the CD to memory. **Select** Yes or No.



3. **Choose** the location to store the CD.

 


4. The CD records. If available, album information is displayed.



Using the CD Library

1. **Press** the CDL button. The last album recorded begins playing.
2. To view the CD library, **press** LIST on the selector knob.



To change tracks, **press** the SKIP (⏮) or (⏭) button, or **rotate** the selector knob.

To change albums, **press** the CATEGORY (+) or (-) button.



3. A list of recorded CDs appears. **Select** the album and track you want to hear.

