

CD LIBRARY


Store up to 18 audio CDs in the system memory.

Recording an Audio CD


1. **Insert** an audio CD.



2. The system asks if you want to record the CD to memory. **Select** Yes or No.

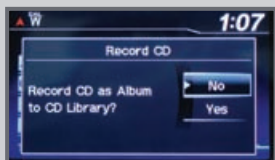

3. **Select** the location to store the CD.

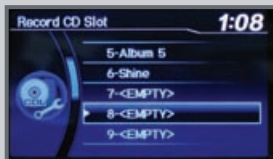

4. The CD records. If available, album information is displayed.



Using the CD Library

1. **Press** the CD/CDL button. The last album recorded begins playing.



To change tracks, **press** the SKIP (⏮) or (⏭) button, or **rotate** the selector knob.

To change albums, **press** the CATEGORY (+) or (-) button.

2. To view the CD library, **press** the selector knob.



3. A list of recorded CDs appears. **Select** the album and track you want to hear.

