INSTRUMENT PANEL INDICATORS

Briefly appear with each engine start. Red and amber indicators are most critical. Blue and green indicators are used for general information.



Malfunction Indicators If an indicator remains on, there may be a problem; see your dealer



DRL (daytime running lights)

BRAKE Low brake fluid, brake system

(ABS) ABS (anti-lock brake system)

Low oil pressure

Malfunction lamp (check engine light)

SRS (supplemental restraint system)

VSA (vehicle stability assist)

Power tailgate

TPMS (tire pressure monitoring system)

SLIDE Power sliding door

Starter system

Condition Indicators Action is needed by driver

 
Parking brake on: **Release**

Seat belt reminder:
Fasten seat belt(s)

Door/Tailgate open:
Close door(s)/tailgate

Low fuel: Refill





On/Off Indicators

PASSENGER AIRBAG **OFF** (located on center panel)

ECO Fuel economy on

SIDE AIRBAG **OFF**

Immobilizer
Flashes: improperly coded key;
use correct key

VSA **OFF**

Headlights on

CRUISE MAIN on

Turn signals/hazards on

CRUISE CONTROL on

High beams on

 4