

INFORMATION DISPLAY **LX EX EXL**

Consists of several displays that provide you with useful information.

Accessing the Information Display



When you start the engine, the display shows your last active selection from the previous drive cycle.



To toggle between the different displays, **press and release** the select/reset knob repeatedly.

Information Displays

Odometer, outside temperature*



Odometer, estimated range with remaining fuel



Odometer, engine oil life



Trip meter (A or B), current and average fuel economy



* if equipped

MULTI-INFORMATION DISPLAY (MID) **EXLN TRNG**

Each MID display has sub-displays, some of which can be customized.

Accessing the Multi-Information Display



When you start the engine, the display shows your last active selection from the previous drive cycle.

To toggle between the MID displays, **press** either Info button (▲/▼) for the main displays, and **press** the SEL/RESET button for the sub-displays.



MID Main Displays

Compass, odometer, and total travel distance



Trip computer*



Keyless Memory Settings™*



Tire pressure monitor



HandsFreeLink®

 


* see next page

Trip Computer



While on the Trip Computer display, press the SEL/RESET button to access trip information. Press either Info (▲/▼) button to toggle through the various screens, or the SEL/RESET button for sub-displays.



Press the **Info** button



Press the **SEL/RESET** button



Trip computer

Trip Computer

Instant fuel economy

INSTANT FUEL MPG

0 20 40

N 002300 n 323.4

Average speed A/B

AVERAGE SPEED A

40 mph

N 002300 n 323.4

Average fuel economy A/B

AVERAGE FUEL A

21.0 MPG

N 002300 n 323.4

Elapsed time A/B

ELAPSED TIME A

1 h 30m

N 002300 n 323.4

Range

RANGE

200 miles

N 002300 n 323.4