# REAR ENTERTAINMENT SYSTEM (RES) EXL TRNG

#### **RES Front Panel Controls**





## Operating the RES from the Front Seat

I. Press the REAR PWR button. Rear passengers will hear audio through the wireless headphones.



2. Press the REAR CTRL OFF button to disable the rear audio controls.



3. Press the REAR SOURCE button to hear what is currently playing in the rear.



4. After selecting an entertainment source for the rear passengers, press the FRONT SOURCE button to return to the front audio controls.



With the rear entertainment system (RES) and wireless headphones, the rear passengers can enjoy a different entertainment source than the front seat occupants.

### Operating the RES from the Rear Seat

I. Press the REAR PWR button from the front audio panel, then press the PWR button on the rear control panel to turn on the RES.





3. Use the  $(\triangle)$   $(\nabla)$   $(\triangle)$  buttons to navigate the menu on the display. Press the ENT button to select a function.



2. Press AM/FM, XM, CD, or DVD/AUX to make a selection.



4. The rear control panel can be detached and used as a remote control. Press the RELEASE button to remove it from the ceiling.





#### Rear Entertainment System





Press OPEN to release the overhead screen.





Pivot the overhead screen to fully open it.