



Dashboard Details


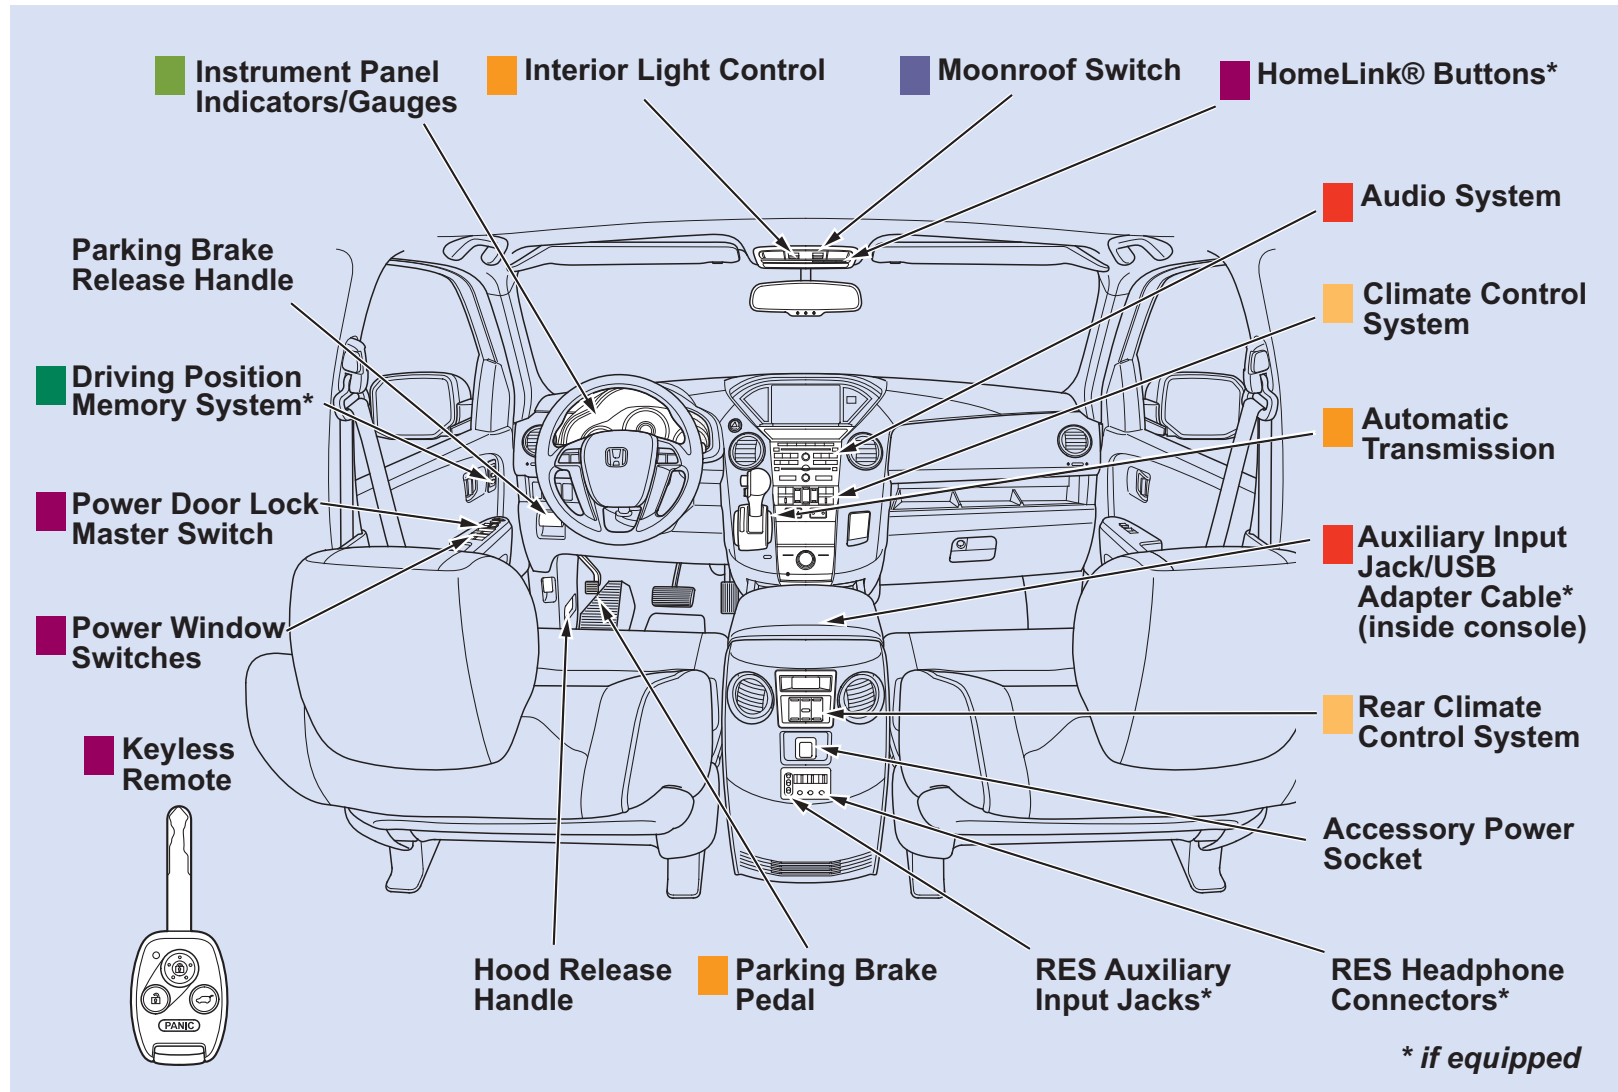


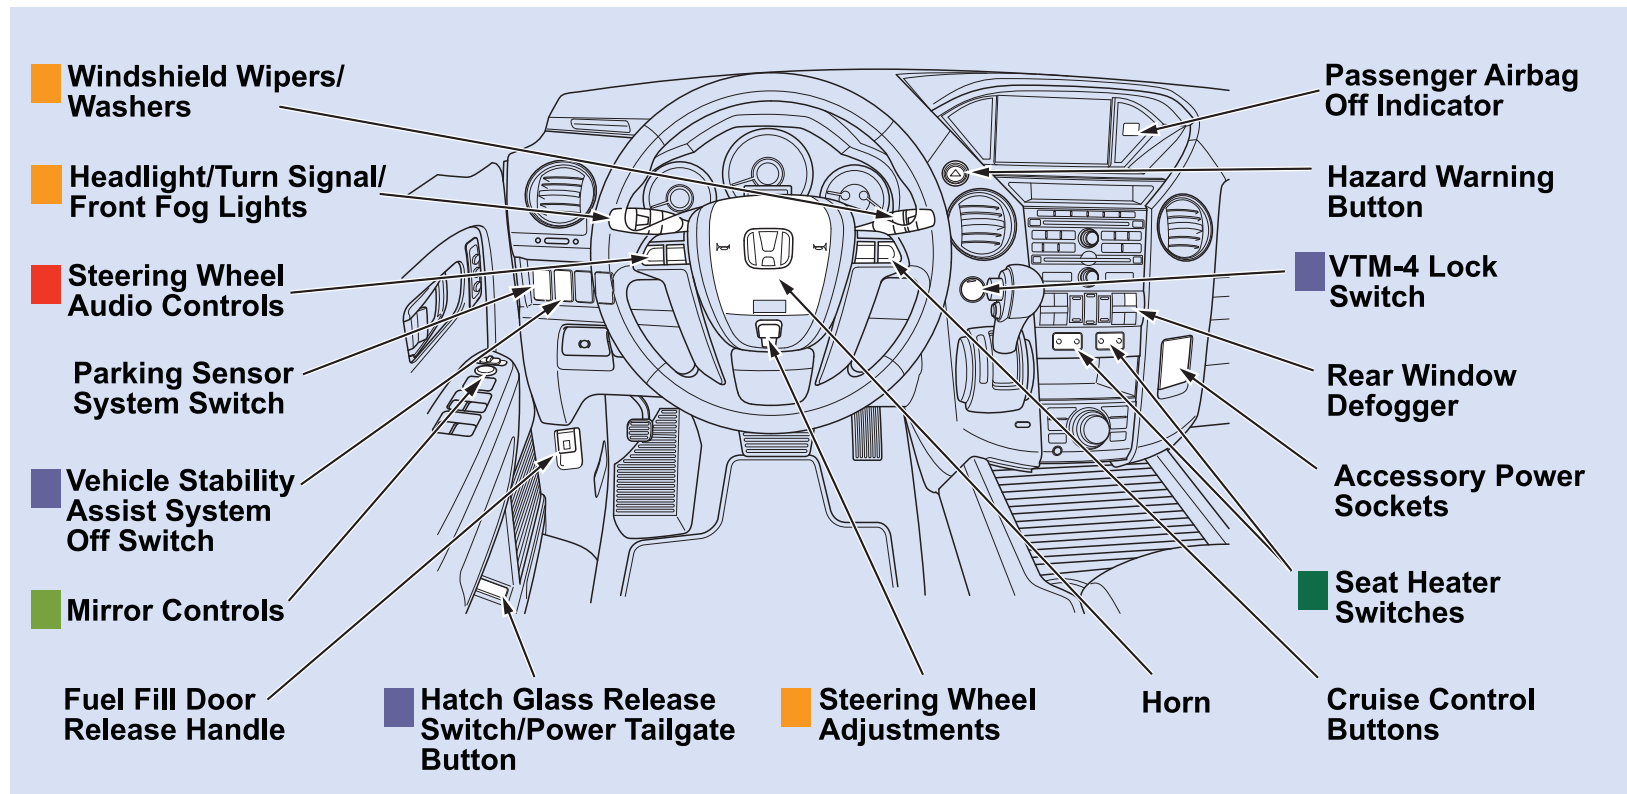

Things You Need to Know

- See *About This Quick Start Guide* on the rear cover.
- See the owner's manual for detailed information and instructions on items marked with an asterisk (*).
- Always check your tire pressures when the tires are cold.
- The malfunction indicator lamp may come on if the fuel fill cap is not tightened at least one click.
- Exterior location of hatch glass release button*. Make sure the flip-up tailgate glass is closed before opening tailgate.
- Location of the hood release lever (see Driver's View).

Dashboard Details

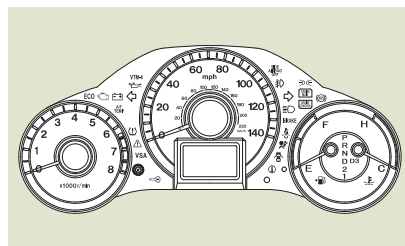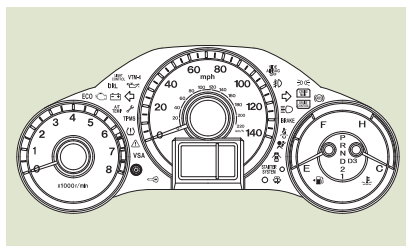

Message in the Information Display

Check Fuel Cap: Fuel cap is missing or not properly tightened. Check that the fuel fill cap is installed and tightened at least one click.

Temperature Gauge: If the pointer is in the red zone, turn off the engine immediately, or as soon as safely possible.*

Instrument Panel Indicators

Indicators should go out shortly after starting the engine. If an indicator stays on or comes on while driving, follow instructions in the description.

- Red indicators are critical and require immediate attention.
- Amber indicators are urgent and require attention as soon as possible.
- Blue and green indicators are used for general information.

Note: It is important to see the *Instruments and Controls* section in the owner's manual for a thorough explanation and/or instructions for each indicator.



Charging system indicator: Battery is not being charged; see dealer as soon as possible.



Low oil pressure indicator: Low oil pressure; turn the engine off as soon as safely possible.



Supplemental restraint system (SRS) indicator: Possible SRS malfunction; see dealer as soon as possible.*



Seat belt reminder light: Fasten seat belts.



Parking BRAKE and BRAKE system indicator: Parking brake on or low brake fluid level.



Door open indicator: The hatch glass, tailgate or a door is not closed tightly.



Security system indicator (if equipped): Blinks when the security system is armed.



Malfunction indicator lamp (CHECK engine light): Engine or emissions system malfunction; have dealer inspect the vehicle.



Maintenance Minder indicator: A scheduled maintenance is due; stays on if maintenance is past due.



Message indicator (Touring models): Use the steering wheel INFO (i) button to scroll to the message displayed in the MID.



Low tire pressure indicator (Touring): One or more of your vehicle's tires is significantly under-inflated. Stop, inspect all tires, and add air as required.

TPMS

Tire pressure monitoring system (TPMS) indicator: TPMS malfunction; have dealer inspect the vehicle.



Tire pressure monitor: Comes on if a tire is significantly underinflated.

**A/T
TEMP**

Automatic transmission (A/T) temperature indicator: The transmission fluid temperature is too high; pull to the side of the road when it is safe, move the shift lever to Park, and let engine idle until it goes out.

VTM-4

TM indicator (D): Possible 4WD system malfunction. If it flashes, the rear differential fluid temperature is too high; follow the A/T Temp procedure.

**SIDE
AIRBAG
OFF**

SIDE AIRBAG cut FF indicator: Passenger's side airbag is off and will not deploy during a crash.*

**PASSENGER
AIRBAG
FF**

Passenger airbag cut FF indicator: Passenger's front airbag is off and will not deploy during a crash.

Note: Do not place objects or feet under the front seats; this could prevent the airbags from working properly.



Anti Lock brake system (ABS) indicator: ABS malfunction; see your dealer as soon as possible.



Vehicle stability assist (VSA) activation indicator: A reminder that the VSA is turned off. Flashes when VSA is active.

VSA

Vehicle stability assist (VSA) system indicator: Possible VSA system problem.*

DRL

Daytime running lights indicator: Dim when DRL is on, stays on bright when there is a problem.

**LIGHT
CONTROL**

Light control indicator

**STARTER
SYSTEM**

Starter system indicator



Fuel gauge low fuel indicator



Immobilizer system indicator: Flashes if an improperly coded key is used in the ignition switch. Comes on briefly when the key is turned.

**CRUISE
MAIN**

CRUISE MAIN indicator: Cruise control is on, and is waiting to be set.

**CRUISE
CONTROL**

CRUISE CONTROL indicator: Cruise control is set.

ECO

ECO indicator: Comes on when the engine performs at its most economical level.



Lights on indicator: Exterior lights are on.



Turn signal Hazard indicator



High beam indicator