


Triple Zone System


Triple Zone System

Separate temperature controls for the driver, front passenger, and rear passengers.

LX Models

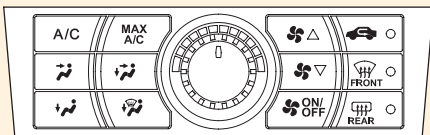

EX, EX-L, and Touring models

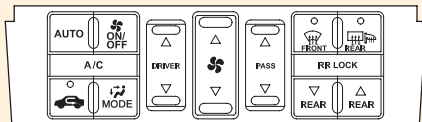

LX Controls: Vents, Heating, and A/C

Temperature control dial: Sets the temperature.

Fan control buttons: Press the or button to increase or decrease the fan speed and airflow.

Fan on/off button

Mode control buttons: Selects the vents for airflow.

Air conditioning (A/C) button: Turns the A/C on (indicator lit) and off.

Max A/C button: Turns on recirculation mode. Air flows from the dashboard center and side vents.

Defroster button: Turns the windshield defroster on (indicator lit) and off.

Rear window defogger/heated mirror button: Turns the rear window defogger and heated mirrors on (indicator lit) and off.

Recirculation button: Changes between Recirculation mode (inside air) and Fresh Air (outside air).

Tip: If there is frost on the windows, use Recirculation mode. If the windows are fogged, use Fresh Air mode.

EX, EX-L and Touring Controls:

Climate Control System

AUTO button: Turns the system on (A/C on in display) and automatically regulates the temperature, fan speed, and mode controls.

Air conditioning (A/C) button: Turns the A/C on (A/C on in display) and off.

Side temperature control bar: The driver, front passenger, and rear passenger's temperatures (see the next page) can be controlled separately. Press the appropriate bar to raise or lower the temperature.