 
Wiper Control

Front/Windshield Wipers/Washers



- 1. **OFF**
- 2. Wiper ON Push down on the lever:
 - a. **INT** (1st detent) Wipers operate intermittently.
 - b. **LO** (2nd detent) Long sweep intervals.
 - c. HI (3rd detent) Short sweep intervals.
- ADJ ring Rotate to adjust wiper interval speed.
- 4. MIST
- Wiper & Washer ON Pull back and hold to clean the front windshield.

Rear Window Wiper/Washer

- 6. Wiper ON Rotate to the ON position.
- 7. Washer ON (wiper stays ON) Rotate and hold the switch past the ON position.
- 8. Wiper & Washer ON Rotate and hold past the OFF position.

Tip: If the hatch glass is open, the rear wiper/washer will not operate.