TIRE PRESSURE MONITORING SYSTEM (TPMS)

Monitors the vehicle's tire pressures.

How It Works





Each tire valve stem contains a TPMS sensor.





When the tire pressure drops significantly below recommended levels, the low tire pressure indicator comes on.

NOTE: On vehicles with MID, a message also appears on the display.



If the TPMS indicator* appears, there may be a problem with the system. See your dealer.

*on models without MID

What to Do

- I. Visually inspect the tires for damage.
- 2. **Use** a tire air pressure gauge (or check the MID) to check which tire(s) have low pressure.



3. Inflate the tire(s), if necessary, to the recommended pressures listed on the label on the driver's dooriamb.





