

## DRIVING POSITION MEMORY SYSTEM (DPMS) (if equipped)

Store a driver's seat position into memory for each remote transmitter.

### Programming DPMS

1. **Turn** the ignition switch to ON (II). **Shift** into Park (P).



2. **Adjust** your seat to the preferred setting.



3. **Press** the SET button. You will hear a beep.



4. **Press** the memory button corresponding to the remote (1 or 2) you are using. You will hear two beeps.



**Note:** A stored memory position is linked to the corresponding keyless remote (1 or 2). Each item begins to adjust when you unlock the driver's door with the remote and enter the vehicle.