

## AUTO DOOR LOCKS

### Default Lock Setting



The doors are preset to lock when your vehicle reaches about 10 mph.

### Default Unlock Setting



Only the driver's door is preset to unlock when you shift into Park (P).

Program how and when the vehicle doors automatically lock and unlock.

### Programming the Auto Door Unlock Setting

To program all doors to unlock when you shift to Park:

1. **Close** all doors. **Shift** into Park.



2. **Turn** the ignition switch to ON (II).



3. **Press and hold** the unlock side of the master lock switch for about 10 seconds. In that time, you will hear three clicks.



4. Within 5 seconds, **turn** the ignition switch to LOCK (0).



### Programmable Auto Door Lock/Unlock Settings

Below are the different programmable options you can choose. See *Auto Door Locking/Unlocking* in your owner's manual for instructions on programming these settings.

#### AUTO DOOR LOCK

**Auto Lock**



When you reach 10 mph



When you shift out of Park

**Turn off Auto Lock**



Operate manually

#### AUTO DOOR UNLOCK

**Auto Unlock (all doors)**



When you turn the ignition OFF



When you shift into Park

**Auto Unlock (only driver's door)**



When you turn the ignition OFF



When you shift into Park

**Turn off Auto Unlock**



Operate manually