










 


INSTRUMENT PANEL INDICATORS

Briefly appear with each engine start. Red and amber indicators are most critical. Blue and green indicators are used for general information.



Malfunction Indicators

If an indicator remains on, there may be a problem; see your dealer



 

 


 

 

 Charging system	 EPS (electric power steering)
 Low brake fluid, Brake system	 Malfunction indicator lamp (check engine light)
 Low oil pressure	 VSA® (vehicle stability assist)
 SRS (supplemental restraint system)	 TPMS (tire pressure monitoring system)
 Transmission (blinking)	 E-DPS* (all-wheel drive)
 ABS (anti-lock brake system)	 DRL (Daytime running lights)

Condition Indicators

Action is needed by driver

 Parking brake on: Release	 Seat belt reminder: Fasten seat belt(s)
 Door/Tailgate open: Close door(s) / tailgate	 Low fuel: Refill
 Low tire pressure: Add air	 Maintenance Minder™: Make service appointment
 All-Wheel Drive* (blinks): Pull over and idle	

On/Off Indicators

 PASSENGER AIRBAG OFF (next to multi-information display)	 Immobilizer Flashes: improperly coded key; use correct key
 SIDE AIRBAG OFF	 1st detent: parking lights on 2nd detent: headlights on
 VSA® OFF	 Turn signals/hazards on
 CRUISE MAIN on	 Fog lights on
 CRUISE CONTROL on	 High beams on
 ECON Mode on	

* if equipped