## INSTRUMENT PANEL INDICATORS

Briefly appear with each engine start. Red and amber indicators are most critical. Blue and green indicators are used for general information.



## Malfunction Indicators If an indicator remains on, there may be a problem; see your dealer



Charging system



EPS (electric power steering)



Low brake fluid, Brake system



Malfunction indicator lamp (check engine light)



Low oil pressure



VSA® (vehicle stability assist)



SRS (supplemental restraint system)



TPMS (tire pressure monitoring system)



Transmission (blinking) (automatic transmission)



ow temperature



ABS (anti-lock brake system)

## Condition Indicators Action is needed by driver



Parking brake on: Release



Seat belt reminder: Fasten seat belt(s)



Door/Trunk open: Close door(s) / trunk



Message indicator: See MID



High temperature: Drive slowly or pull over



Low fuel: Refill



Low tire pressure: Add air

## On/Off Indicators



PASSENGER AIRBAG OFF (next to multi-information display)



SIDE AIRBAG OFF



VSA OFF



CRUISE CONTROL on





CRUISE MAIN on



**ECON on\*** 



Immobilizer

Flashes: improperly coded key; use correct key



1st detent: parking lights on 2nd detent: headlights on



Turn signals/hazards on



Fog lights on



High beams on