TIRE PRESSURE MONITORING SYSTEM (TPMS)

Monitors the vehicle's tire pressures.

How It Works





Each tire valve stem contains a TPMS sensor.





When the tire pressure drops significantly below recommended levels, the low tire pressure indicator comes on.



If a message also appears on the multi-information display, there may be a problem with the system. See your dealer.

What to Do

- I. Visually inspect the tires for damage.
- Use a tire air pressure gauge to check which tire(s) have low pressure.



3. Inflate the tire(s), if necessary, to the recommended pressures listed on the label on the driver's doorjamb.





