











 


INSTRUMENT PANEL INDICATORS

Briefly appear with each engine start. Red and amber indicators are most critical. Blue and green indicators are used for general information.



Malfunction Indicators

If an indicator remains on, there may be a problem; see your dealer












	Charging system		ABS (anti-lock brake system)
	Low brake fluid		EPS (electric power steering)
	Low oil pressure		Malfunction indicator lamp (check engine light)
	SRS (supplemental restraint system)		VSA® (vehicle stability assist)
	Transmission (blinking)		TPMS (tire pressure monitoring system) (blinking)
	Brake system		Low temperature
	IMA system		

Condition Indicators

Action is needed by driver

	Parking brake on: Release		Seat belt reminder: Fasten seat belt(s)
	Door/Trunk open: Close door(s) / trunk		High temperature: Drive slowly or pull over
	Low fuel: Refill		Message indicator: See MID
	Low tire pressure (on): Add air		

On/Off Indicators

	PASSENGER AIRBAG OFF (next to multi-information display)		Auto idle stop on
	SIDE AIRBAG OFF		Immobilizer Flashes: improperly coded key; use correct key
	VSA OFF		1st detent: parking lights on 2nd detent: headlights on
	CRUISE CONTROL on		Turn signals/hazards on
	CRUISE MAIN on		High beams on
	ECON Mode on		