AUTO DOOR LOCKS

Program how and when the vehicle doors automatically lock and unlock.

Default Lock Setting








The doors are preset to lock when your vehicle reaches about 10 mph.

Default Unlock Setting

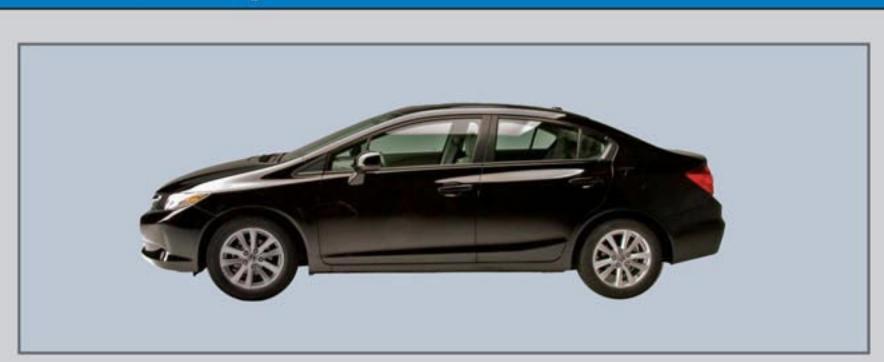





Only the driver's door is preset to unlock when you:

- Shift into Park (P) for automatic transmission vehicles.
- Turn the ignition switch to LOCK (0) for manual transmission vehicles.

Programming the Auto Door Unlock Setting

Press the (+/-) buttons on the steering wheel to scroll through the menu options. **Press** SOURCE to select an option. See **page 8** for more information on the multi-information display and its controls.

I. Press MENU.



2. **Select** Customize Settings.



3. Select Door Setup.



4. Select Auto Door Unlock.



5. **Select** All Doors with Shift to P.



6. Press MENU to exit.



Programmable Auto Door Lock/Unlock Settings

Below are the options you can choose. See Auto Door Locking/Unlocking in your owner's manual for instructions on programming these settings.

Auto Unlock





Operate manually