AUTO DOOR LOCKS

Program how and when the vehicle doors automatically lock and unlock.

Default Lock Setting







The doors are preset to lock when your vehicle reaches about 10 mph.

Default Unlock Setting







Only the driver's door is preset to unlock when you shift into Park (P).

Programming the Auto Door Unlock Setting

To program all doors to unlock when you shift to Park:

 Close the driver's door. Shift into Park.



2. Turn the ignition switch to ON (II).



 Press and hold the unlock side of the master lock switch for about 10 seconds. In that time, you will hear three clicks.





4. Within 5 seconds, **turn** the ignition switch to LOCK (0).



Programmable Auto Door Lock/Unlock Settings

Below are the options you can choose. See *Auto Door Locking/Unlocking* in your Owner's Manual for instructions on programming these settings.



Operate manually



