












 
INSTRUMENT PANEL INDICATORS

Briefly appear with each engine start. Red and amber indicators are most critical. Blue and green indicators are used for general information.



Malfunction Indicators

If an indicator remains on, there may be a problem; see a dealer.

 Charging system	 ABS (anti-lock brake system)
 Low brake fluid, Brake system	 IMA system
 Low oil pressure	 Malfunction indicator lamp (check engine light)
 SRS (supplemental restraint system)	 VSA [®] (vehicle stability assist)*
 EPS (electronic power steering)	 TPMS (blinks and stays on) (tire pressure monitoring system)
 Low temperature	 Brake system

Condition Indicators

Action is needed by driver.

 Parking brake on: Release	 Seat belt reminder: Fasten seat belt(s)
 Door/Hatch open: Close door(s) / hatch	 Low fuel: Refill

 Low tire pressure on : Add air	 High temperature indicator: Pull over and cool down engine
 Message indicator: See MID	

On/Off Indicators

 SIDE AIRBAG OFF	 ECON mode on
 PASSENGER AIRBAG OFF (center audio panel)	 Immobilizer Flashes: improperly coded key; use correct key
 VSA OFF *	 Exterior lights on
 Auto Idle Stop on (blinking)	 Turn signals/hazards on
 CRUISE MAIN on *	 High beams on
 CRUISE CONTROL on *	

* if equipped