REAR ENTERTAINMENT SYSTEM (RES) (EX-L)

With the rear entertainment system and headphones, rear passengers can enjoy a different entertainment source than the front seat occupants.

RES Front Panel Controls



Rear Entertainment System



Pivot the earpieces to turn on or off. Wireless headphones work only in the rear seats.



Wired headphones may also be used.

Pull down the bottom edge of the screen to open it.



Extend the screen until it locks into place.



Operating the RES from the Front

 Press REAR POWER. Rear passengers will hear audio through the headphones.



2. **Press** REAR SOURCE. **Select** an entertainment source for the rear passengers.



3. **Press** REAR SOURCE again to return to the front audio controls.



Operating the RES from the Rear

 Press REAR POWER on the front audio panel. Open the overhead screen.



2. **Press** DVD/AUX, CD/CDL, XM, or FM/AM.



3. **Press** the (▲) (▼) (◀) (▶) buttons to navigate the menu options. **Press** ENTER to select an option.



4. The rear control panel can be detached and used as a remote control. **Press** the release button to remove it.

