








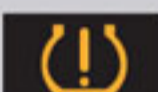 

## INSTRUMENT PANEL INDICATORS

Briefly appear with each engine start. Red and amber indicators are most critical. Blue and green indicators are used for general information.









### Malfunction Indicators


If an indicator remains on, there may be a problem; see your dealer

 Charging system	 VTM-4 (4WD only)
 Low brake fluid, Brake system	 Malfunction lamp (check engine light)
 Low oil pressure	 VSA® (vehicle stability assist)
 SRS (supplemental restraint system)	 TPMS (blinking) (tire pressure monitoring system)
 ABS (anti-lock brake system)	

### Condition Indicators

Action is needed by driver

 Parking brake on: <b>Release</b>	 Low fuel: <b>Refill</b>
 Door/Tailgate open: <b>Close door(s) / tailgate</b>	 Low tire pressure (stays on): <b>Add air</b>
 Seat belt reminder: <b>Fasten seat belt(s)</b>	 Message indicator: <b>See MID</b>

 A/T Temperature (4WD only):  
**Pull over and let engine idle**

### On/Off Indicators

 PASSENGER AIRBAG <b>OFF</b> (located on center panel)	 Fog lights <b>on</b>
 SIDE AIRBAG <b>OFF</b>	 Immobilizer Flashes: improperly coded key; <b>use correct key</b>
 VSA <b>OFF</b>	 Headlights <b>on</b>
 CRUISE MAIN <b>on</b>	 Turn signals/hazards <b>on</b>
 CRUISE CONTROL <b>on</b>	 High beams <b>on</b>
 Fuel economy <b>on</b>	