REAR ENTERTAINMENT SYSTEM (RES)

With the rear entertainment system and headphones, rear passengers can enjoy a different entertainment source than the front seat occupants.

RES Front Panel Controls



Rear Entertainment System



Pivot the earpieces to turn on or off. Wireless headphones only work in the rear seats.





Wired headphones may also be used.

Press OPEN to release the overhead screen.



Pivot the overhead screen to fully open it.





Operating the RES from the Front

 Press REAR POWER. Rear passengers will hear audio through the headphones.



Press REAR SOURCE. Select an entertainment source for the rear passengers.



Press REAR SOURCE again to return to the front audio controls.



Operating the RES from the Rear

 Press REAR POWER on the front audio panel. Open the overhead screen.





Press DVD/AUX, CD/CDL, XM, or FM/AM.

Press the (▲) (▼) (◄) (►) buttons to navigate the menu options. Press ENTER to select an option.



4. The rear control panel can be detached and used as a remote control. **Press** RELEASE to remove it.



