MULTI-INFORMATION DISPLAY (MID) (models with navigation)

Displays various information and messages to help you maintain your vehicle.

Accessing the Multi-Information Display



When you start the engine, the MID shows your last active selection from the previous drive cycle.




To toggle between the different displays:

- Press either Info button for the upper display.
- Press SEL/RESET for the lower display, to switch from Trip A to Trip B on the upper display, or to access subdisplays.



MID Lower Displays

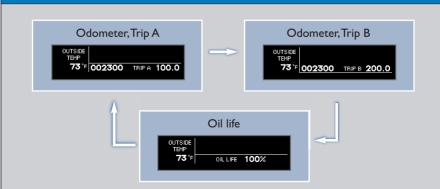

MID Upper Displays

