

TIRE PRESSURE MONITORING SYSTEM (TPMS)

Monitors the vehicle's tire pressures.

How It Works



Each tire valve stem contains a TPMS sensor.



When the tire pressure drops significantly below recommended levels, the low tire pressure indicator comes on.

NOTE: On vehicles with MID, a message also appears on the display.

TPMS

If the TPMS indicator* appears, there may be a problem with the system. See your dealer.

**on models without MID*

What to Do

1. **Visually inspect** the tires for damage.
2. **Use** a tire air pressure gauge (or check the MID) to check which tire(s) have low pressure.



3. **Inflate** the tire(s), if necessary, to the recommended pressures listed on the label on the driver's doorjamb.

