
## INSTRUMENT PANEL INDICATORS

Briefly appear with each engine start. Red and orange indicators are most critical. Blue and green indicators are used for general information. See your Owner's Manual for more information.

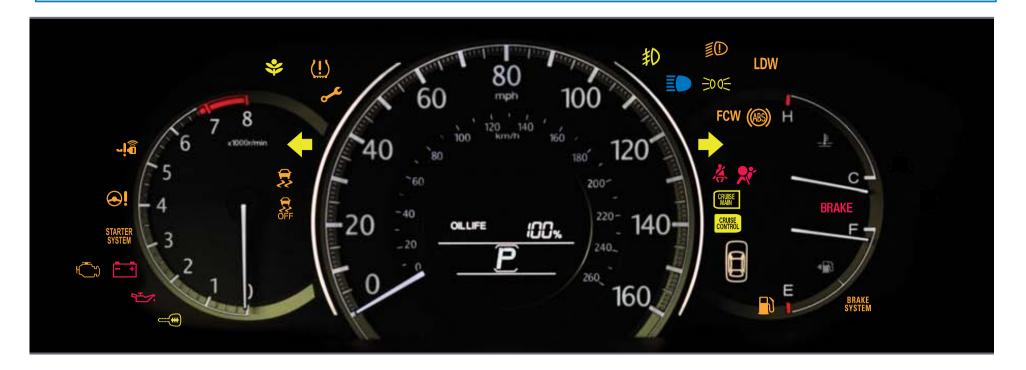

## Malfunction Indicators If an indicator remains on, there may be a problem; see your dealer

STARTER SYSTEM Starter system



ABS (anti-lock brake system)



Charging system



Malfunction lamp (check engine light)



Low brake fluid



TPMS (blink and stays on) (tire pressure monitoring system)



Low oil pressure



VSA® (vehicle stability assist)



SRS (supplemental restraint system)



Smart Entry System



EPS (electric power steering)



Automatic light control



FCW (forward collision warning system)



Brake system



LDW (lane departure warning system)

## Condition Indicators Action is needed by driver



Parking brake on: **Release** 



Seat belt reminder: Fasten seat belt(s)



Door/Trunk open: Close door(s) / trunk



Low tire pressure: Add air



Low fuel: **Refill** 



Maintenance Minder™:

Make dealer appointment



FCW (blinks): **Brake** 



LDW (blinks): Stay in your lane



Immobilizer (blinks):
Use other vehicle key

## On/Off Indicators



PASSENGER AIRBAG **OFF** (next to display screen)



Fog lights on



**VSA OFF** 



Exterior lights on





Turn signals/hazards on



CRUISE CONTROL on

**CRUISE MAIN on** 



High beams on



ECON Mode on