


INFORMATION DISPLAY

Consists of several displays that provide you with useful information.

Accessing the Information Display



When you start the engine, the information display shows your last active selection from the previous drive cycle.

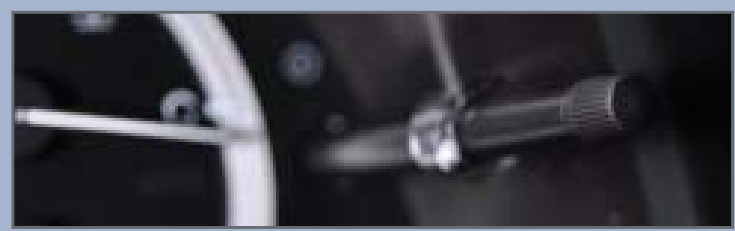

To toggle between the different displays, **press and release** the select/reset knob repeatedly.

Information Displays



Instant fuel economy,
Odometer, Trip meter A,
Outside temperature



Oil life



Instant fuel economy, Range,
Trip meter A, Outside
temperature



Instant fuel economy, Average
fuel economy B, Trip meter B,
Outside temperature



Instant fuel economy, Average
fuel economy A, Trip meter A,
Outside temperature

Note: The shift lever indicator is shown for automatic transmission only.