






 







 

## INSTRUMENT PANEL INDICATORS

Briefly appear with each engine start. Red and orange indicators are most critical. Blue and green indicators are used for general information. See your Owner's Manual for more information.



### Malfunction Indicators

If an indicator remains on, there may be a problem; see your dealer

 <b>STARTER SYSTEM</b>	Starter system	 <b>(ABS)</b>	ABS (anti-lock brake system)
 <b>- +</b>	Charging system		Malfunction lamp (check engine light)
 <b>BRAKE</b>	Low brake fluid		TPMS (tire pressure monitoring system)
	Low oil pressure		VSA <sup>®</sup> (vehicle stability assist)
	SRS (supplemental restraint system)		Smart Entry System
	EPS (electric power steering)		Automatic light control
 <b>FCW</b>	FCW (forward collision warning system)	 <b>BRAKE SYSTEM</b>	Brake system
 <b>LDW</b>	LDW (lane departure warning system)		

### Condition Indicators

Action is needed by driver

 <b>BRAKE</b>	Parking brake on: <b>Release</b>		Seat belt reminder: <b>Fasten seat belt(s)</b>
	Door/Trunk open: <b>Close door(s) / trunk</b>		Low tire pressure: <b>Add air</b>
	Low fuel: <b>Refill</b>		Maintenance Minder™: <b>Make dealer appointment</b>
 <b>FCW</b>	FCW (blinks): <b>Brake</b>	 <b>LDW</b>	LDW (blinks): <b>Stay in your lane</b>
	Immobilizer (blinks): <b>Use correct key</b>		

### On/Off Indicators

 <b>PASSENGER AIRBAG OFF</b>	<b>PASSENGER AIRBAG OFF</b> (next to display screen)		Fog lights <b>on</b>
	<b>VSA OFF</b>		Headlights <b>on</b>
	<b>CRUISE MAIN on</b>		Turn signals/hazards <b>on</b>
	<b>CRUISE CONTROL on</b>		High beams <b>on</b>
	<b>ECON Mode on</b>		